

说明书递交文档

设计 DESIGN	汪凯阁 2020.10.12	图纸名称 PART NAME				图号/物料编码 PART NO.
校对 CO. BY		TL235LWE (CE-BC235-S)				1613
标准化 STANDARD						材料 MATERIAL
业务 seller	魏赛	图样 标记 REL	版本号 REV. NO	重量 (g)	比例 scale	80g双胶纸
批准 AUTHORIZ E	曾磊		0		1:1	美的冰箱事业部 MIDEA REFRIGERATION DIVISION
		共 页 TOTAL SHEETS	第 页 NO. OF SHEETS			
技术要求						
<p>1、 尺寸：145*210mm。20P。</p> <p>2、 油墨颜色为黑色，印刷应清晰，不能有印刷缺陷。</p> <p>3、 切边应成直角，不能歪斜。</p> <p>4、 样板需送设计部门认可方可生产。</p>						
标记 MARKER	变更内容				修改日期	签名
1						

STATESMAN

kitchen appliances



TL235LWE
55CM TALL LARDER FRIDGE WHITE

Instruction Manual

Please read these instructions carefully before use and retain for future reference.
Before switching on your appliance – Always check for any damage that may have been caused in transit.

CONTENTS

Important Safety Instructions	3-6
Technical Specifications	7
Appliance Overview	8
Installation	9-14
Operating Instructions	14-15
Cleaning and Maintenance	15-16
Fuse Replacement	17
Disposal Information	17
Troubleshooting Guide	18

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all of the instructions even if you feel you are familiar with the product, and find a place to keep this manual handy for future reference.

Important: This product is intended for domestic use only, for food refrigeration storage only. When using electrical appliances, basic safety precautions should always be followed:

- Do not operate the appliance with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
- Check the voltage of the appliance matches the household voltage, which is located on the rating label.
- Use of an extension cord is not recommended with this product.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children.
- Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Always unplug the appliance before attempting to move.

When disconnecting from the electricity supply, pull the plug and not the cord.

- This product is for indoor use only.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Always keep the ventilation openings clear of obstruction. Should they become blocked, clear them straight away.
- The refrigerant of this product is R600a which is flammable. Ensure when moving the appliance or during installation that the cooling system does not get damaged.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- To avoid a hazard due to the instability of the appliance, it must be fixed in accordance with the instructions.
- While carrying and positioning the fridge, do not damage the cooler gas circuit.
- This appliance is not intended for use at altitudes exceeding 2000m.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Do not place explosive or flammable material in your fridge. Place drinks with high alcohol content vertically in the fridge compartment and make sure that their tops are tightly closed.
- When removing ice from the ice-making compartment, do not touch it. Ice may cause frost burns and/or cuts.
- Do not cover the body or top of fridge with lace. This affects the performance of your fridge.
- Secure any accessories in the fridge during transportation to prevent damage to the accessories.



WARNING: The appliance is heavy and care is needed when unpacking and moving it. Get extra help and only hold the appliance by the casing – never hold by the door or the trim.



WARNING: Risk of child entrapment. Before disposal of the old appliance, make sure that any locking mechanisms have been broken off, doors have been removed but shelves have been left in so that children cannot easily climb inside. Also remove the plug so the appliance is unusable.



WARNING: Risk of fire / flammable materials.

- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- To avoid contamination of food, pay attention to the following:
 - opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance;
 - clean regularly surfaces that can come in contact with food and accessible drainage systems;
 - clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days;
 - store raw meat and fish in suitable containers in the refrigerator so that it is not in contact with or drip onto other food;

- two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes;
- one-, two- and three-star compartments are not suitable for the freezing of fresh food;
- if the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

The table below contains general guidelines on the storage of food in the refrigerator.

Refrigerator location	Type of food
Fridge door	<ul style="list-style-type: none"> • Foods with natural preservatives, such as jams, juices, drinks, condiments. • Do not store perishable foods.
Crisper bin (salad bin)	<ul style="list-style-type: none"> • Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – bottom Chiller bin	<ul style="list-style-type: none"> • Raw meat, poultry, fish (for short-term storage)
Fridge shelf – middle	<ul style="list-style-type: none"> • Dairy products, eggs
Fridge shelf – top	<ul style="list-style-type: none"> • Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer/shelf	<ul style="list-style-type: none"> • Foods for long-term storage. • Bottom drawer/shelf for raw meat, poultry, fish. • Middle drawer/shelf for frozen vegetables, chips. • Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.


SPECIFICATION

Supplier Name / Trade Mark	Statesman
Model Number	TL235LWE
Category Type	Larder Fridge
Energy Efficiency Class	E
Annual Energy Consumption	102kwh/annum
Total Gross Volume (Litre)	230L
Total Net Volume (Litre)	230L
Climate Class	ST/N
This appliance is intended to be used at an ambient temperature between "16" (lowest temperature)°C and "38"(highest temperature) °C	
Noise Emission (dB)	40dB(A)
Voltage (V)	220-240V~
Frequency (Hz)	50Hz
Power Source	AC

Ambient Room Temperature Limits

Class	Symbol	Ambient average temperature °C
Extended temperature	SN	+10 to +32
Temperature	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

APPLIANCE OVERVIEW

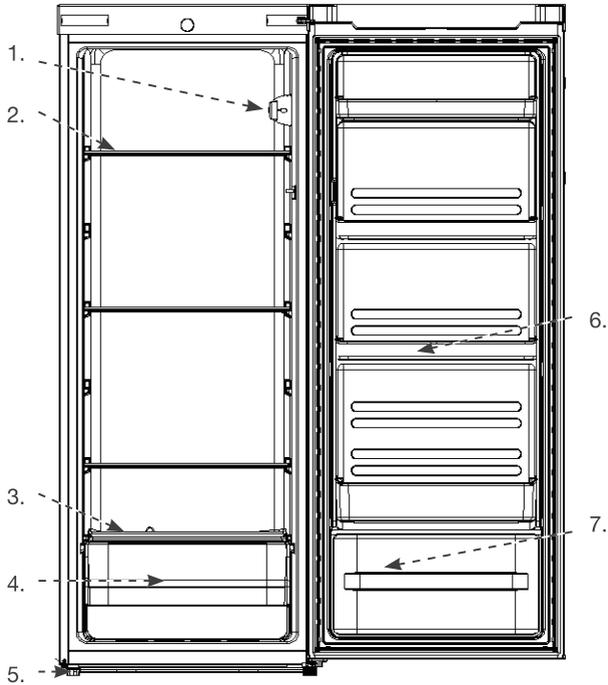

- 1. Temperature Control Box Assembly
- 2. Glass Shelf Assembly
- 3. Vegetable Basket Glass Shelf
- 4. Vegetable Basket

- 5. Adjustable Foot
- 6. Small Door Tray
- 7. Large Door Tray

INSTALLATION

Before using your fridge freezer, you should pay attention to the following points:

- The operating voltage for your fridge freezer is 220-240V at 50Hz.
Statesman does not accept responsibility for any damages that occur due to ungrounded usage.
- Place your fridge freezer where it will not be exposed to direct sunlight.
- The plug or power supply switch should be accessible after installation.
- This appliance is not suitable for outdoor use or for use in unheated rooms during cold winter conditions.
- Place the appliance away from heat sources and in a well ventilated position. The appliance should be at least 50cm from radiators, heaters or stoves and 5cm from electrical cooking appliances.
- Leave a gap of 10cm at both sides of the appliance, 10cm at the rear and 30cm at the top to allow adequate ventilation.
- If the appliance is installed next to another refrigerator or freezer, a gap of at least 2cm should be maintained between them to prevent condensation.
- Do not place heavy objects on top of the appliance.
- The R600a gas used in this appliance is environmentally friendly but is flammable and great care should be taken to avoid puncturing the refrigerant system tubes during installation.

IMPORTANT:

- When using your fridge for the first time, or after transportation, keep it in an upright position for at least 3 hours before plugging into the mains. This allows efficient operation and prevents damage to the compressor.
- Leave the appliance running on the 'med' thermostat setting for approximately 24 hours before storing food, to allow the unit to arrive at the correct temperature.
- Your fridge may have a smell when it is operated for the first time. This is normal and the smell will fade away when your fridge starts to cool.

Leveling

If the refrigerator is not leveled during installation, the doors may not close or seal properly, causing cooling, frost, or moisture problems. It is very important that the refrigerator is level in order to function properly.

- To level your refrigerator, you may either turn the front feet clockwise to raise that side of the refrigerator, or turn counter-clockwise to lower that side.

Note: Having someone push gently against the top of the refrigerator to take some weight off the leveling feet makes it easier to adjust them.

Door Space Requirements


The unit's door must be able to open fully as shown.

REPOSITIONING THE DOOR

It is possible to change the opening direction of the door if required. Please follow the instructions below:


- Remove the right top hinge cover (see fig. 1).

fig. 1:

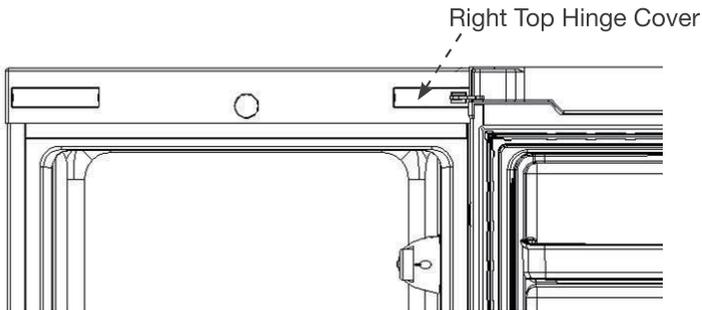


- Remove the screws from the top hinge using a Phillips head screwdriver (see fig. 2).

fig. 2:

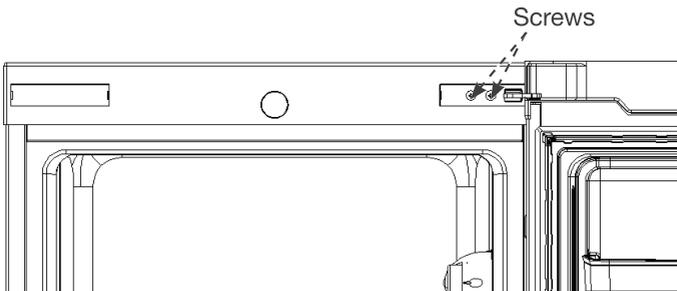


- Move the hinge shaft sleeve and the door block to the other side of the unit (see fig. 3).

fig. 3:

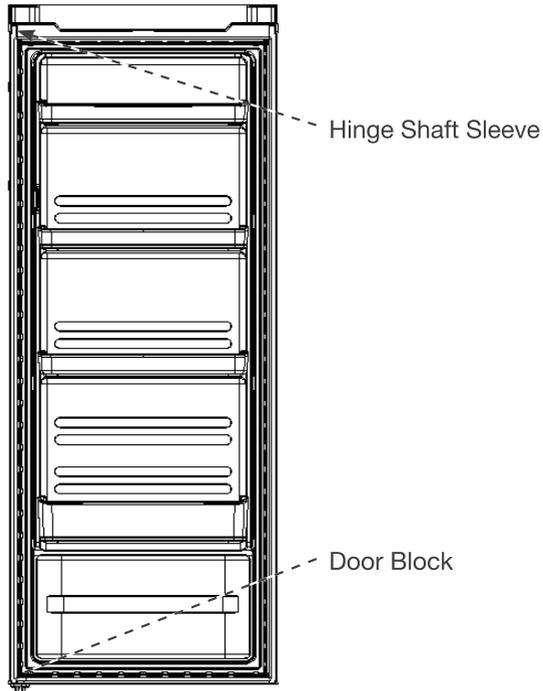


- Remove the nut with sleeve. Take off the washer, then move the axes to the other side and secure (see fig. 4).

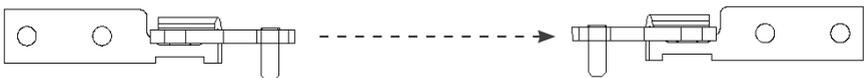

- Unscrew the bottom hinge assembly with a Phillips head screwdriver and then remove the adjustable foot (see fig. 5).

Note: Do not lean the appliance back further than 45°. Rest the appliance on something solid (e.g a chair), just below the top panel. Do not lay the appliance completely flat as this may damage the coolant system.

fig. 5:

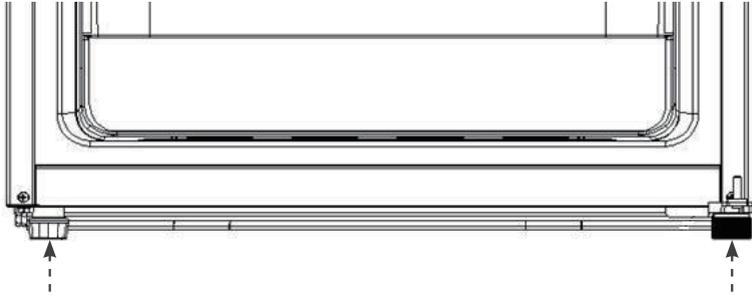


Adjustable Foot

Bottom Hinge Assembly

- Swap both to the opposite side and secure (see fig. 6).

fig. 6:

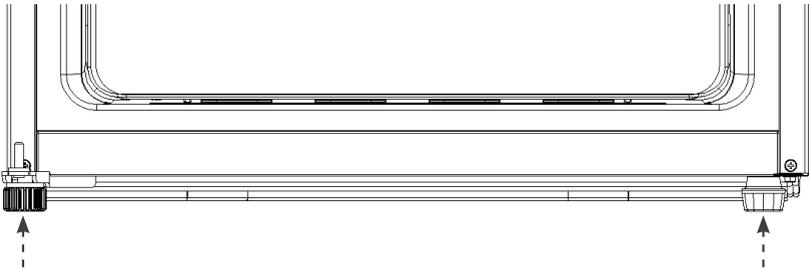


Bottom Hinge Assembly

Adjustable Foot

- Install the two screws on the right and remove the left top hinge cover (see fig. 7).

fig. 7:

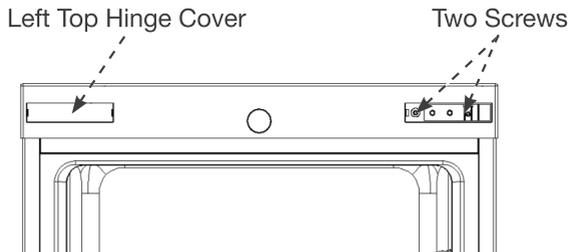


Left Top Hinge Cover

Two Screws


- Install the left top hinge cover on the right and remove the two screws (see fig. 8).

fig. 8:

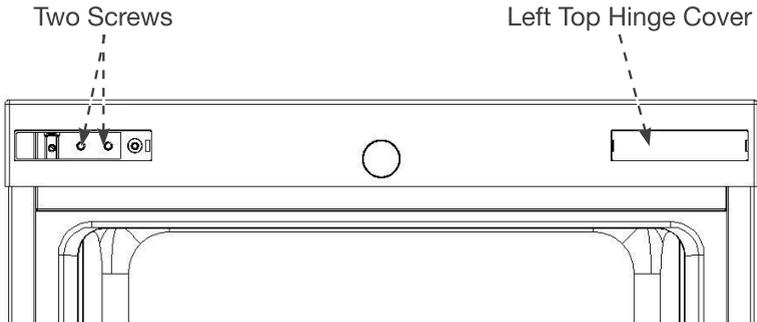


- Install the top hinge. Set the top door right position, fix the top hinge and the cover (see fig. 9).

fig. 9:

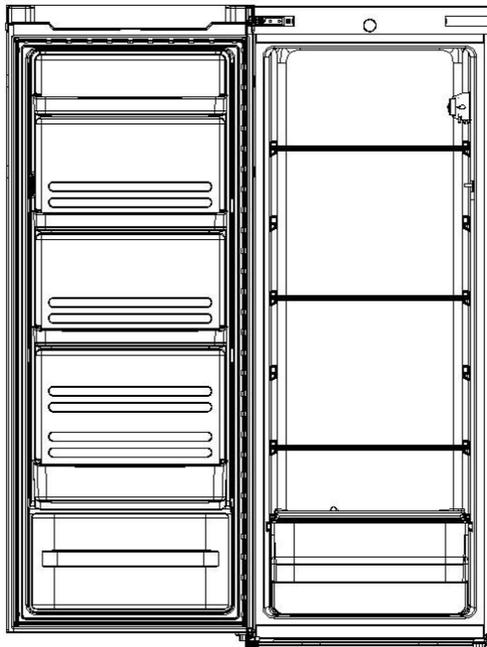

- Install the right top hinge cover on the right (see fig. 10).

fig. 10:

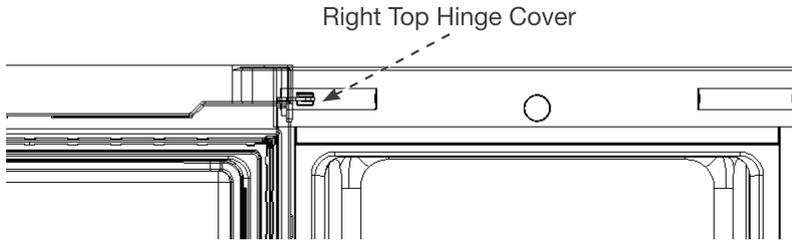

OPERATING INSTRUCTIONS

Thermostat Setting

- The thermostat automatically regulates the temperature inside both the fridge and the freezer compartments.
- The temperature selection knob is located on the right hand side wall of the refrigerator interior. The settings are as follows:
 - Min: Lowest (least cool) setting.
 - Med: Normal setting (adequate for most situations).
 - Max: Highest (coolest) setting.
- As a guide, the colder the setting, the longer food can be stored.
- During high ambient temperatures, for example a hot summer day, it may be necessary to set the thermostat to the 'max' setting. This may cause the compressor to run continuously in order to maintain a low temperature in the appliance.

Note: Ambient temperature (room temperature), the temperature and quantity of recently stored food, and how often the door is opened, will all affect the temperature inside of the appliance.

FOOD STORAGE

Refrigerator Compartment

- The shelf positions in the fridge compartment can be changed to suit your requirements. To remove a shelf, lift the rear edge before pulling it forwards and then downwards.
- The temperature varies from one section of the fridge to another. The coldest part is immediately above the salad drawers and near to the rear.

- Do not place hot/warm foods or liquids in the fridge compartment. Warm food and liquids should be allowed to cool at room temperature and placed in the fridge with adequate air circulation.
- Meat and fish should be well wrapped and normally used within 1-2 days.
- To reduce humidity and the consequent increase of frosting, do not store liquids in unsealed containers.
- Fruit and vegetables can be stored in the salad drawers without packaging.

Noises Inside the Unit

You may notice that the appliance makes some unusual noises. Most of these are perfectly normal, but you should be aware of them.

These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your unit. This is the compressor motor working, as it pumps the refrigerant around the system.

CLEANING & MAINTENANCE

IMPORTANT: The power supply **MUST** be disconnected before cleaning.

- Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- The interior of the refrigerator should be cleaned regularly to avoid odor.
- Check the door gasket regularly to make sure there are no debris.
- Remove all food, shelves, drawers etc before cleaning.
- Clean the door gasket with mild soap and water.
- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean, and open the door and dry it naturally before the power is turned on.
- For areas that are difficult to clean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminant accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the refrigerator.
- Clean the bottle frame, shelves and drawers with a mild detergent and dry with a soft cloth.

- Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior. Boiling water and benzene may deform or damage plastic parts.
- Do not rinse with water so as not to affect the electrical insulation properties.

FUSE REPLACEMENT

Fuse Replacement (Class I)

This appliance must be earthed. Remove the fuse cover with a small flat head screw driver. Take out the fuse and replace with a new fuse of the same Amp. Replace the fuse cover and push back into place.



DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



TROUBLESHOOTING GUIDE

If you are having problems with your appliance, please use our troubleshooting guide below. If you are unable to resolve the issue using this guide please ring our Customer Service Department on 0844 848 5861. Please have the model code and purchase information available.

Issue	Probable Cause
The appliance is not operating	There is no power
	The main power switch in your home is disconnected
	The socket is faulty. To check this, plug the appliance into another socket that you know is working
	The ambient temperature in the room is between 16°C and 38°C. If the ambient temperature falls below or rises above this temperature range, the appliance may cut out and food could be lost. The appliance will resume normal operation when the ambient temperature returns to normal.
The appliance is performing poorly	The appliance has been overloaded
	The thermostat setting is on position 1 (if so set the thermostat dial to a suitable value)
	The doors aren't closed properly
	There is dust on the condenser
	There isn't enough space at the rear and/or side walls
The fridge is operating too loudly	The compressor can sometimes cause more noise for a short period of time when the appliance first starts operating
	A bubbling noise and splash can be caused by the flow of the refrigerant through the tubes of the system. If you hear this noise check that: <ul style="list-style-type: none"> • The appliance is level • Nothing is touching the rear of the appliance • The objects on the appliance are vibrating
There is water in the lower part of the refrigerator	The drain hole for the water is clogged (use the defrost drain plug to clean the drain hole)

STATESMAN

kitchen appliances

**38 Bluestem Road,
Ransomes Europark
Ipswich, IP3 9RR**

0844 848 5861

Disclaimer: Statesman operate a policy of continual improvement and development.
We therefore reserve the right to change/alter the specification and appearance of our appliances without prior notice.
All diagrams and images shown in this manual are for illustration purposes only.