



2W76015

MACHINE GLASS WASH CLEANER

- Taint - free and non-foaming formula
- Contains anti-corrosive properties

USES

A machine glasswash detergent that removes stains and soiling, leaving glassware sparkling.

Machine Glass Wash Cleaner is pre-softened for effectiveness in both hard and soft water.

 
Use to clean glassware, glasses and tumblers in all automatic glass washing machines. Suitable for use in pubs, clubs, nightclubs, restaurants and bars.

DIRECTIONS


Put dosing tube into the container of *Machine Glass Wash Cleaner*, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense *Machine Glass Wash Cleaner* into the machine.

For best results, use in conjunction with *Rinse Aid Additive*. Ensure that the thermostat on the machine is set correctly.

Machine Glass Wash Cleaner can be added manually for each cycle if required. Typically 42ml (1.5 fluid ounces) should be added to the machine for each wash cycle.

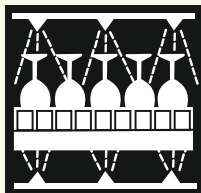

AREAS OF USE

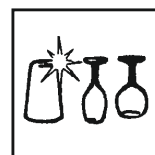 

Glasses



K House, Sheffield Business Park, Europa Link,
Sheffield, S9 1XU T: 0844 980 8000, www.2worksupplies.co.uk

pH in use

