# 1739096UK - White 1739196PCOMUK - Black



### Before starting

□ Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

□ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.

□ Work in spacious area, preferably on a carpet, near the place the unit will be used.

□ Have the following tools close at hand.

Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

#### HELPFUL HINTS

- Identify, sort and count the parts before attempting assembly.
- Call our toll free number if you need assistance identifying parts.
- Compression dowels are tapped in with a hammer.
- Slides have lips only on the right side.
- Cam locks that are properly fastened on a horizontal board will face toward the center of the unit on a vertical board the point on the lock will face the better
- unit, on a vertical board the point on the lock will face the bottom.
- Back panels provide stability and support. Use all the nails provided.
- When tapping nails into a board, be sure there are equal margins on all sides to square the unit.
- Units without the back panel installed may collapse.
- Clean the product with your favorite furniture polish and a soft cloth. DO NOT USE harsh chemicals or abrasive cleaners.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or scoot your furniture (especially on carpet).
- Your furniture can be disassembled and reassembled to move.
- Additional parts are available for a nominal fee.



PARTS











4



























Enjoy Your Furniture

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

## ▲ WARNING

Please make sure that all objects are removed before moving the assembled unit.

The unit must be team lifted, not dragged or pushed.

Failure to do so could cause instability, product collapse, and/or serious injury.

### Mercer TV Console for TVs up to 50"





The Mercer 50" TV Console is the perfect accent piece to make your entertainment space pop while providing valuable storage space. The 3 open cubbies are ideal for media players and decor, and 4 drawers offer concealed storage for movies, games and cords.

- The Mercer 50" TV Console is a sturdy and stylish foundation for your TV that supports up to a 50" TV with a maximum weight of 80 lbs.
- The console has 3 open cubbies and 4 drawers, each with a different woodgrain finish and interchangeable knobs.
- Two people are required for assembly.
- The TV console has a white or black finish with woodgrain drawer fronts.





### Mercer TV Console for TVs up to 50"



#### 1739196PCOMUK Black EAN: 5060669110392



#### 1739096UK White EAN: 5060669110385

Product	Height: 635mm	Shipping	Height: 134mm
	<b>Width:</b> 1207mm		<b>Width:</b> 468mm
	<b>Depth:</b> 399mm		<b>Depth:</b> 180mm
	Weight: 36 kg		Weight: 38.5 kg