

DISHWASH DETERGENT

- Removes soiling and food deposits
- Taint-free and non-foaming formula
- Economical in use

USES

A machine dishwash detergent that removes soiling and food deposits.

Dishwash Detergent is a clear liquid with a high sequestrant content, which allows it to be used effectively in both soft and hard water areas. An anti-corrosive agent has been added to the formula to protect the machine.

 
 
Designed for washing cutlery, crockery, stainless steel and utensils, *Dishwash Detergent* is suitable for all automatic dish washing machines in cafés, restaurants, hotel kitchens, canteens, etc.

Can be used as an effective detergent for tray washing machines in the food industry.


DIRECTIONS

Put dosing tube into the container of *Dishwash Detergent*, so that it reaches the bottom. The dosing unit, which has been pre-set to a specific concentration, will automatically dispense *Dishwash Detergent* into the machine.

N.B. Do not use on aluminium, zinc, magnesium and their alloys.

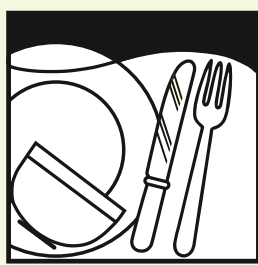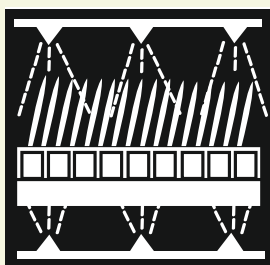

AREAS OF USE

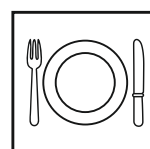 

Plates/
Cutlery

DILUTIONS

DISHWASH DETERGENT : WATER	
Soft water areas: 1 - 4 mls per litre of water	Hard water areas: 4 - 8 mls per litre of water

