
9650096PCOM UK

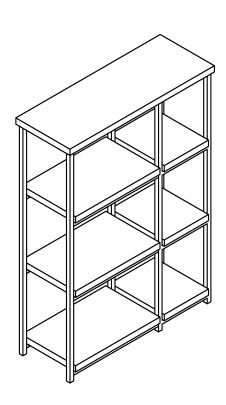

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ IT CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Do Not Return This Product!

Contact our customer service team for help first. Call: 01942 524100 Visit:CSEurope@dorel.com

> Dorel Home Furnishings Europe Ltd. Building 4, Imperial Place, Maxwell Road Borehamwood WD6 IJN United Kingdom

WARNING

- Unit can tip over causing severe injury or death.
 Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

Recommended no. of people needed for assembly: 2

Before starting

- **D** Read each section carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- **D** Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
- **D** Work in spacious area, preferably on a carpet, near the place the unit will be located.
- **D** Have the following tools close at hand.
- **D** Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.







HELPFUL HINTS


- Identify, sort and count the parts before beginning assembly.
- Compression dowels should be tapped in with a rubber mallet.
- Slides have a lip on the right side only.
- Back panels provide stability and support.
- Unit may collapse without the back panel installed.
- Clean the product with your choice of furniture polish and a soft cloth. DO NOT USE harsh chemicals or abrasive cleaners.
- Move your new furniture carefully. Two people are needed to lift and carry the unit to its new location.
- Never push, drag or scoot your furniture (especially on a carpet).

Cam Lock Fastening System

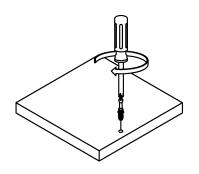





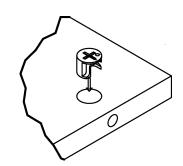


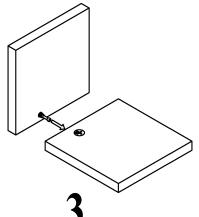




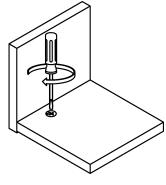

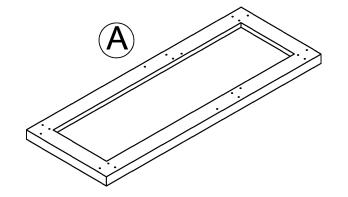

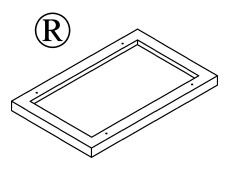


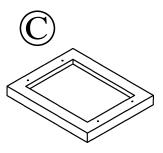



Top panel T965009601 0CS

Fixed shelf T9650096020CS QTY: 3PCS

Fixed shelf T9650096030CS QTY: 3PCS

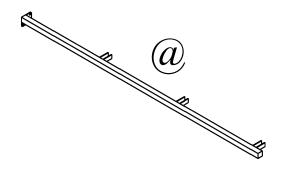

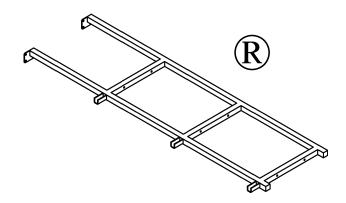


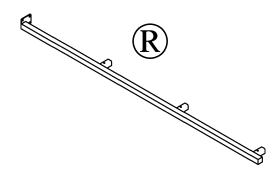


Front left leg T9650096040CS

Front right leg T9650096050CS


Rear left leg T9650096060CS

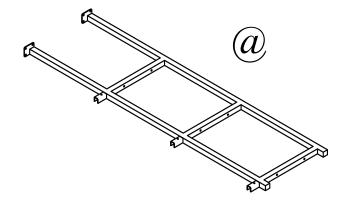


Rear right leg T9650096070CS

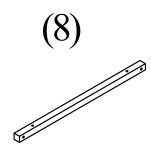


Metal tube T9650096080CS QTY: 6 PCS

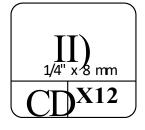


Bolt TCS1103

 


Screw TCS1059

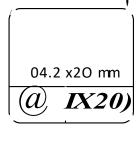

Screw TCS1074

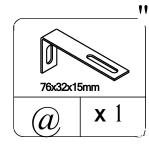

Wall bracket TCS4004

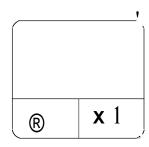


Wall anchor TCS4005


<u>a</u> E


■ 5/10 **■**

CD 1x6

<u>a</u> **R R** <u>CD</u> 1x6

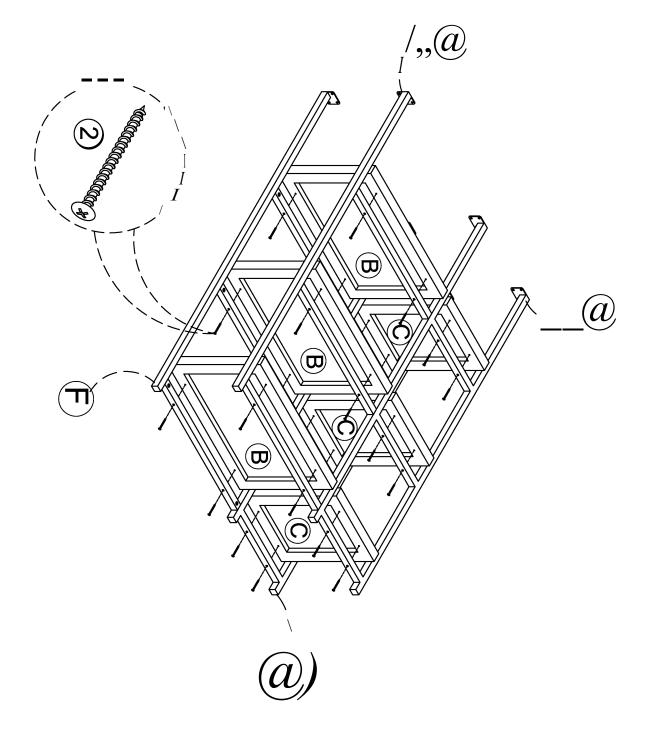


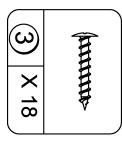

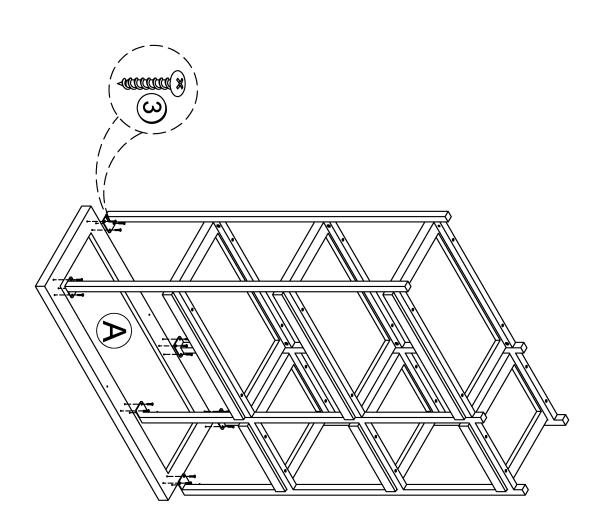

Note: Tighten all the bolts and screws to secure the unit.

5

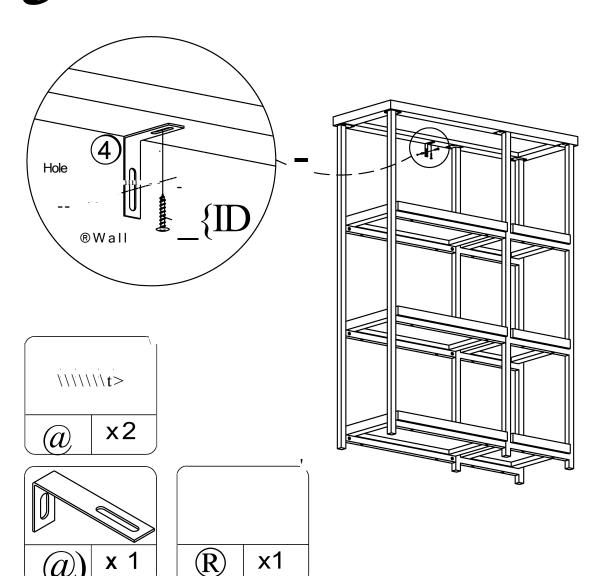


Drill a 3/16" (5 mm) diameter hole in the wall. Tap the wall anchor (5) into the hole until it is flush.

.A. Warning

This unit <u>must</u> be anchored to a stud or wall, as shown. Failure to do so could cause severe injury.

WEIGHT LIMITS:

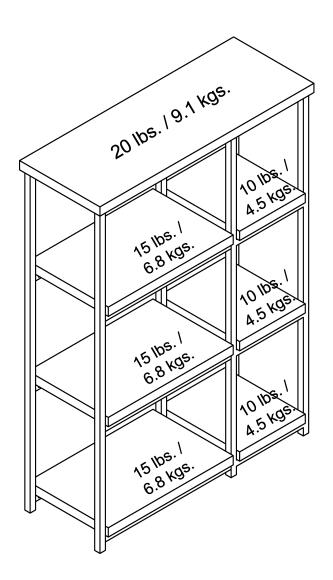

.A. WARNING

Please make sure that all the objects are removed before moving the assembled unit. The unit must be lifted by more than one person, not dragged or pushed. Failure to do so will cause product damage, instability, product collapse, and/or serious injury.

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.