INSTALLATION INSTRUCTIONS



Fusion Back Covers





DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

DEFINITIONS

MOUNTING SYSTEM: A MOUNTING SYSTEM is the primary Chief product to which an accessory and/or component is attached.

ACCESSORY: AN ACCESSORY is the secondary Chief product which is attached to a primary Chief product, and may have a component attached or setting on it.

COMPONENT: A COMPONENT is an audiovisual item designed to be attached or resting on an accessory or mounting system such as a video camera, CPU, screen, display, projector, etc.

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all accessories are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this accessory can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this accessory is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the accessory.

WARNING: Use this accessory only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this accessory if it is damaged. Return the accessory to a service center for examination and

repair.



WARNING: Do not use this accessory outdoors.

WARNING: RISK OF INJURY TO PERSONS! Do not use this accessory to support video equipment such as televisions or computer monitors.

--SAVE THESE INSTRUCTIONS--

DIMENSIONS





DIMENSIONS (CONTINUED)





DIMENSIONS (CONTINUED)





LEGEND

GEND		
	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
		7,90001
	· · · · · · · · · · · · · · · · · · ·	
	Open-Ended Wrench	Remove
	· · · · · · · · · · · · · · · · · · ·	Remove Quitar
E.	Open-Ended Wrench Llave de boca Gabelschlüssel	Remove Quitar Entfernen
Ref O	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas	Remove Quitar Entfernen Remover
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte	Remove Quitar Entfernen Remover Rimuovere
60	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas	Remove Quitar Entfernen Remover
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Optional Optional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão	Remove Quitar Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano	Remove Quitar Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main	Remove Quitar Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional En option
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opzionale Optie En option Security Wrench
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Optional Optional Optional Optional Optional Optional Optional Depional Optional Depional Depional Duptional Duptional </td
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Optional Optional Optional Optional Optional Optional Optional Optional Optional Sicherheitsschlüssel
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Optional Optional Optional Optional Optional Optional Optional Optional Specifie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Wen de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Optional Optio Chave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Optional Optional Optional Optional Optional Optional Optional Optional Specifie En option Sceurity Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

TOOLS REQUIRED FOR INSTALLATION







Assembly And Installation

IMPORTANT ! : The FCAC Series frames can be assembled at a variety of widths in 2" increments using any of the holes available in the center joiner tubes (F) depending on display size and user preference. Holes shown being used in the graphics throughout these instructions are just as examples.

Frame Assembly

FCAC1L

1. Slide together two outside frames (C) and two center joiner tubes (F). (See Figure 1)



Figure 1

2. Use four #12-24 x 3/8" Phillips tapping screws (G) to secure outside frames (C) to center joiner tubes (F). (See Figure 2)



 Use four #12-24 x 3/8" Phillips tapping screws (G) to secure LCM upright (H) to two center joiner tubes (F). (See Figure 3)



Figure 3

4. Proceed to "Fabric Cover Installation" Section.

FCAC1X

- 1. Slide together two outside frames (C) and two center joiner tubes (F). (See Figure 1)
- Use four #12-24 x 3/8" Phillips tapping screws (G) to secure two uprights (D and E) to two outside frames (C). (See Figure 4)



Figure 4

3. Proceed to "Fabric Cover Installation" Section.

Figure 2

FCAC2X1M/FCAC2X1L

1. Slide together two outside frames (C), four center joiner tubes (F) and one center frame (B). (See Figure 5)





- **NOTE:** If there are any possible obstructions on back of display that could interfere with uprights (D and E) installation, measure where they will occur so uprights can be attached accordingly. Uprights (without flags) (D) may be installed in either Step 2, Step 4 or into any available holes on center joiner tubes (F) depending on obstructions or user preference.
- Use four #12-24 x 3/8" Phillips tapping screws (G) to secure two uprights (without flags) (D) to outside frames (C). (See Figure 6)
- **NOTE:** Example shown (See Figure 6) is to assemble a maximum length frame. Frame can be made shorter and must be shorter for FCAC2X1M.
- 3. Use two #12-24 x 3/8" Phillips tapping screws (G) to secure upright (with flag) (E) to center frame (B). (See Figure 6)



 Use four #12-24 x 3/8" Phillips tapping screws (G) to secure four center joiner tubes (F) to center frame (B). (See Figure 7)



Figure 7

5. Proceed to "Cover Installation" Section.

FCAC3X1M/FCAC3X1L

1. Slide together two outside frames (C), two extension frames (M) and center frame (B). (See Figure 8)



Figure 8

Figure 6

- **NOTE:** If there are any possible obstructions on back of display that could interfere with uprights (D and E) installation, measure where they will occur so uprights can be attached accordingly. Uprights without flags (D) can be installed in Step 2 as shown or separately in any available holes in extension frames (M).
- Use six #12-24 x 3/8" Phillips tapping screws (G) to secure three uprights (without flags) (D) to outside frames (C), extension frames (M) and center frame (B). (See Figure 9)
- **NOTE:** Example shown (See Figure 9) is to assemble a maximum length frame. Frame can be made shorter and must be shorter for FCAC3X1M.
- 3. Use two #12-24 x 3/8" Phillips tapping screws (G) to secure upright (with flag) (E) to center frame (B). (See Figure 9)





Fabric Cover Installation

1. Wrap fabric cover (A) over assembled frame. (See Figure 10)



- 2. Wrap outside straps around outside vertical rails on frame. (See Figure 11)
- 3. Fasten vertical straps within cover to ensure a snug fit over frame. (See Figure 11)





Installation to Display Mount

FCAC1L

 Use four 5/16-18 x 3/4" button head cap screws (K) to secure LCM upright adapter (J) to back of LCM mount. (See Figure 12)



Figure 12

Figure 10

- 2. Make sure mounting flag on LCM upright (H) is in the "open" position. (See Figure 13)
- 3. Hang LCM upright (H) onto mounting buttons on back of LCM upright adapter (J). (See Figure 13)
- 4. Move mounting flag on LCM upright to the "closed" position. (See Figure 13)



3. Release mounting flag to secure cover to rail. (See Figure 15)



Figure 15

Figure 13

FCAC1X/FCAC2X1M/FCAC2X1L/ FCAC3X1M/FCAC3X1L

1. Lift assembled cover onto top edge of mounting rail. (See Figure 14)



Figure 14

2. Pull down mounting flag and pull under lower edge of mounting rail. (See Figure 15)



Chief, a products division of Milestone AV Technologies

8800-003061 Rev00 ©2018 Milestone AV Technologies www.milestone.com 10/18

USA/International

Europe

Asia Pacific

- A 6436 City West Parkway, Eden Prairie, MN 55344
- **P** 800.582.6480 / 952.225.6000
- **F** 877.894.6918 / 952.894.6918
- A Franklinstraat 14, 6003 DK Weert, Netherlands
- **P** +31 (0) 495 580 852
- **F** +31 (0) 495 580 845
- A Office No. 918 on 9/F, Shatin Galleria 18-24 Shan Mei Street Fotan, Shatin, Hong Kong
- **P** 852 2145 4099
- **F** 852 2145 4477

