

## Wireless Speaker

Reference Guide  
Guide de référence  
Guía de referencia  
Referenzanleitung  
Referentiegids



Model: YY7854E

SRS-XV800

©2023 Sony Corporation  
Printed in China  
<https://www.sony.net/>

English Wireless Speaker

Model: YY7854E

The term "product" in this document refers to the unit or its accessories.  
Do not expose the unit to naked flame sources (for example, lighted candles).

As the power cord is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the power cord from the AC outlet immediately.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Notice for customers: the following information is only applicable to products sold in countries/regions applying EU directives and/or UK applying relevant statutory requirements.  
This product has been manufactured by or on behalf of Sony Corporation.

EU and UK Importer: Sony Europe B.V.

Inquiries to the EU Importer or related to product compliance in Europe should be sent to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vinciolaan 7D, 1930 Zaventem, Belgium.

Inquiries to the EU Importer or related to product compliance in the UK should be sent to the manufacturer's authorized representative, Sony Europe B.V., The Heights, Brooklands, Weybridge, Surrey KT15 0XW, United Kingdom.

Hereby, Sony Corporation declares that this equipment is in compliance with the UK relevant statutory requirements.

The full text of the declaration of conformity is available at the following internet address: <https://compliance.sony.co.uk>

Hereby, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://compliance.sony.eu>

The validity of the CE marking is restricted to only those countries/regions where it is legally enforced, mainly in the European Economic Area (EEA) countries/regions and Switzerland.

The validity of the UKCA marking is restricted to only those countries/regions where it is legally enforced, mainly in the UK.

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries the symbol might be present in a circular symbol. The chemical symbols for Lead (Pb), Cadmium (Cd) and Mercury (Hg) might also be present, indicating the presence of these elements.

which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that contain, parts of different materials, disassembly may be required before recycling. It is the responsibility of the producer to provide clear instructions for the recycling of electrical and electronic products. For all other batteries, please follow the section on how to remove the battery from the product safely. Hand over your batteries to a specialized point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

Do not expose batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.

After extended periods of use, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.

This product has integrated circuitry which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.


Inserting the USB plug or AC plug while it is wet may cause a short circuit due to foreign matter or liquid (tap water, seawater, soft drinks, etc.) getting onto the main unit or charging cable.

This may cause malfunctions or abnormal overheating.

Never insert the USB plug or AC plug while the main unit or charging cable is wet.

This unit should be installed and operated keeping the radiator at least 20 cm away from person's body.

Note that the casters wheels may not turn properly if sand or dust adheres to the caster wheel axle, or if grass or other debris wraps around the axle.

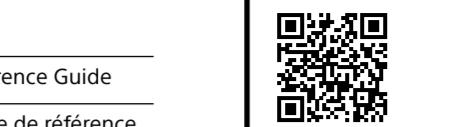

**Licenses**  
• This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.  
<https://rd1.sony.net/help/speaker/sl/23/>



• Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple products identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.  
Please note that the use of this accessory with an Apple product may affect wireless performance.  
• This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.  
• MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

**Disclaimer regarding services offered by third parties**  
• Services offered by third parties may change, terminate, or be terminated without prior notice.  
Sony does not bear any responsibility in these sorts of situations.

### Notes on water resistant feature (Read before using the unit)


The supplied accessories are not water resistant.

**On water resistant performance of the unit**  
With the cap securely closed, this unit has a drop-proof performance equivalent to IPX4 (when placed vertically/IPX2 when placed horizontally), which are "protection against ingress of water" ratings defined by IEC 60529 ("degrees of protection provided by enclosures (IP code)" for electrical equipment).  
• The supplied accessories and the connectors of this unit (AC IN/USB/AUDIO IN/OPTICAL IN/MIC/GUITAR) are neither water resistant nor dustproof. To reduce the risk of fires or electric shocks, do not expose the unit to water or droplets while using any connectors (AC IN/USB/AUDIO IN/OPTICAL IN/MIC/GUITAR).

Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

**To maintain water resistant performance**  
Carefully note the precautions below to ensure proper use of the unit.  
• This unit does not have a design that is resistant to water pressure. Do not put the unit in the water or directly under the water gushing out of the faucet to avoid a malfunction.  
• Do not expose the unit to extremely hot water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or near a heat source.

**CAUTION:** Handle the cap with care. The cap plays a very important role in maintenance of the unit. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely, the water resistant performance may deteriorate and may cause a malfunction of the unit as a result of water entering the unit.

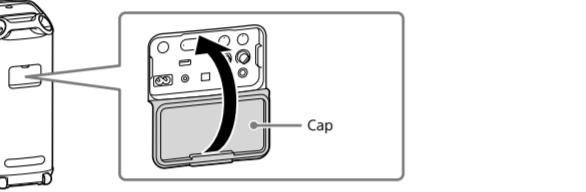

**How to care for the unit**  
You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.

• If the surface becomes dirty, wipe the surface using a soft, dry cloth or a cloth soaked in water or lukewarm water and wring well. Depending on the type of dirt, it may not be possible to remove it.

**Note:**  
• If the surface of the unit gets dirty, do not use detergent, thinner, benzine, alcohol, etc. to clean the unit because it will affect the water repellent function of the unit.  
• Especially in cold regions, be sure to wipe off the moisture after using the unit. Leaving moisture on its surface may cause the unit to freeze and malfunction.

Design and specifications are subject to change without notice.

**Precautions**  
**About the power cord**  
If the unit is not used for an extended period, unplug the AC power cord from the AC outlet. When unplugging the unit, be sure to grasp the plug. Never pull on the cord itself.

**On placement**  
• Do not insert foreign objects from the opening of the speaker unit.

• To eliminate the risk of malfunctions, avoid the following locations when placing or leaving this unit:  
– A place subject to high temperatures, such as under direct sunlight or lighting equipment, near a heat source, or in a sauna.  
– Inside a vehicle with the windows closed (especially in summertime)  
– A place exposed to hot air, such as from a hair dryer

• Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.

• Depending on the conditions where this unit is placed, it may fall over or fall off the surface. Do not leave any valuable units near the unit.

• This unit is not anti-magnetic. Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep it in mind as well.

• If your skin remains in contact with the handle for a long while while the light is turned on, there is a risk of low-temperature burns. To carry a speaker while it is powered on, turn the light (lighting function) off.

**Turning on or off the BLUETOOTH® function**

You can connect to the unit from a paired BLUETOOTH device when the unit's BLUETOOTH function is set to on. At the time of purchase, this setting is set to on.

• Touch and hold the (-volume) button and the #BLUETOOTH button for 5 seconds. The #BLUETOOTH indicator turns off and the BLUETOOTH function is set to off.

• When you touch and hold the (-volume) button and the #BLUETOOTH button for 5 seconds once again, the #BLUETOOTH indicator turns on and the BLUETOOTH function is set to on.

**Other notes**  
• Do not expose the unit in an extremely cold or hot environment (temperature outside the range of 5 °C ~ 35 °C). If the unit is used or left outside the above range, the unit may automatically stop to protect internal circuitry.

• If you use this unit for a long time, the temperature of the unit may rise, but it is not a malfunction.

• At high temperatures, the charging or stop of the unit may reduce to protect the battery.

• When the unit's light sensor bright or glowing, turn the room lights or turn off the lighting function.

• Put your fingertip directly onto the touch sensor for operations.

• Do not operate the touch sensor with a wet hand to avoid a malfunction.

• Even if you do not intend to use the unit for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.

**Trademarks**  
• Android and Google Play are trademarks of Google LLC.

• The LDAC™ name is a trademark of Sony Group Corporation or its affiliates.

• Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

• The Bluetooth® mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and any user of such marks is Sony Group Corporation and its subsidiaries is under license.

• Apple, the Apple logo, iPhone, iPod and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

• iMovie is a service mark of Apple Inc., registered in the U.S. and other countries and is used under license.

• All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, “™” and “®” marks are not specified.

• This product has integrated circuitry which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

• This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

• Inserting the USB plug or AC plug while it is wet may cause a short circuit due to foreign matter or liquid (tap water, seawater, soft drinks, etc.) getting onto the main unit or charging cable.

This may cause malfunctions or abnormal overheating.

Never insert the USB plug or AC plug while the main unit or charging cable is wet.

This unit should be installed and operated keeping the radiator at least 20 cm away from person's body.

Note that the casters wheels may not turn properly if sand or dust adheres to the caster wheel axle, or if grass or other debris wraps around the axle.

### Specifications

**BLUETOOTH®**  
Frequency band 2.4 GHz band (2.400 0 GHz ~ 2.483 5 GHz)  
Operating frequency / Maximum output power  
2.400 MHz ~ 2.483.5 MHz / < 14.0 dBm  
**General**  
Inputs  
• Type A USB port: Supported USB Device (Mass Storage Class)  
• AUDIO IN jack (Φ 3.5 mm)  
• OPTICAL IN connector (PCM)  
• MIC1 (Φ 3.5 mm)  
• MIC2/GUITAR jack (Φ 6.3 mm)  
DC OUT  
Type A USB port (for charging the battery of a connected device) (DC 5 V/MAX. 1.5 A)  
Power  
AC 120 V ~ 240 V, 50/60 Hz or, using built-in lithium-ion battery  
Power consumption  
Approx. 77 W  
Standby power consumption  
Approx. 0.2 W  
When BLUETOOTH standby mode is set to on: Approx. 2 W  
When BLUETOOTH standby mode is set to off: Approx. 0.5 W  
Lithium-ion battery life (while Battery Care mode\*1 is not activated)  
With playback via a BLUETOOTH connection  
Approx. 25 hours\*2  
– Volume level: 14  
– Sound: MEGA BASS on  
– Lighting: off  
Approx. 5 hours\*2  
– Volume level: 50 (MAX)  
– Sound: MEGA BASS on  
– Lighting: off  
Approx. 5 hours (defect)\*2  
– Volume level: 14  
– Sound: MEGA BASS on  
– Lighting: off  
Approx. 0.5 hours\*2  
– Volume level: 50 (MAX)  
– Sound: MEGA BASS on  
– Lighting: off

Time required for charging the built-in rechargeable battery (while Battery Care mode\*1 is not activated)  
Approx. 3 hours\*3  
(10 minutes of charging provide approximately 3 hours\*2 of music playback.)  
– Volume level: 14  
– Sound: MEGA BASS on  
– Lighting: off  
Operating temperatures  
5 °C ~ 35 °C  
Battery charging temperatures  
5 °C ~ 35 °C  
Dimensions (including projecting parts and controls)  
Approx. 317 mm × 720 mm × 375 mm (w/h/d)  
Mass (including battery)  
Approx. 18.5 kg  
Included items  
• Wireless Speaker (1)  
• AC power cord (mains lead) (2)  
• Optical digital cable (optical rectangular plug → optical rectangular plug) (1)  
• Documents (1 set)

**For customers in the UK, Ireland, Malta, and Cyprus:**

• Use AC power cord (mains lead) (A).

For safety reasons, AC power cord (mains lead) (B) is not intended for the above countries/regions and shall therefore not be used there.

For customers in other countries/regions:  
Use AC power cord (mains lead) (B).



Note: the cap will not be supplied with this model. Please note that the cap on the AC power cord must be removed before use.

(A) (B)

**How to care for the unit**  
You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.

• If the surface becomes dirty, wipe the surface using a soft, dry cloth or a cloth soaked in water or lukewarm water and wring well. Depending on the type of dirt, it may not be possible to remove it.

**Note:**  
• If the surface of the unit gets dirty, do not use detergent, thinner, benzene, alcohol, etc. to clean the unit because it will affect the water repellent function of the unit.

• Especially in cold regions, be sure to wipe off the moisture after using the unit. Leaving moisture on its surface may cause the unit to freeze and malfunction.

Design and specifications are subject to change without notice.

**Precautions**  
**About the power cord**  
If the unit is not used for an extended period, unplug the AC power cord from the AC outlet. When unplugging the unit, be sure to grasp the plug. Never pull on the cord itself.

**On placement**  
• Do not insert foreign objects from the opening of the speaker unit.

• To eliminate the risk of malfunctions, avoid the following locations when placing or leaving this unit:  
– A place subject to high temperatures, such as under direct sunlight or lighting equipment, near a heat source, or in a sauna.  
– Inside a vehicle with the windows closed (especially in summertime)  
– A place exposed to hot air, such as from a hair dryer

• Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.

• Depending on the conditions where this unit is placed, it may fall over or fall off the surface. Do not leave any valuable units near the unit.

• This unit is not anti-magnetic. Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep it in mind as well.

## Precauciones

### Acerca del cable de alimentación

Si no se utiliza la unidad durante mucho tiempo, desenchufel el cable de alimentación de CA de la toma de corriente de CA. Cuando vaya a desenchufar la unidad, asegúrese de agarrar la clavija. No tire nunca del propio cable.

### Ubicación

- No instale dispositivos extraños en la abertura de la unidad altavoz.
- Para eliminar el riesgo de mal funcionamiento, evite los lugares siguientes cuando coloque o deje esta unidad.
  - Un lugar sujeto a altas temperaturas, como bajo la luz directa del sol o equipos de iluminación, cerca de una fuente de calor o en un ambiente cálido.
  - Dentro de un vehículo con las ventanas cerradas (especialmente en verano)
  - Un lugar expuesto a altas temperaturas, como el de un secador de pelo
- Coloque esta unidad sobre una superficie plana y nivelada. Si se coloca sobre una superficie inclinada, la unidad puede volcar o caerse de la superficie debido a su propia vibración, lo que resultaría en daños y mal funcionamiento.
- Dependiendo de las condiciones en las que se coloque esta unidad, puede volcar o caerse de la superficie. No deje ningún objeto de valor cerca de la unidad.
- Este producto no es resistente al agua ni a la humedad. Mantenga los objetos susceptibles al magnetismo (cintas de audio, relojes, joyas de efectivo o tarjetas de crédito con cobertizos magnéticos, etc.) alejados de la unidad. Guarde el producto en un lugar seguro y en cuenta las advertencias.
- Si su piel permanece en contacto con el asa durante mucho tiempo mientras la luz esté encendida, existe el riesgo de quemaduras a baja temperatura. Para transportar un altavoz mientras está encendido, apague la luz (función de iluminación).

### Activación o desactivación de la función BLUETOOTH®

Cuando la función BLUETOOTH® de la unidad esté activada, podrá conectarla a la unidad desde un dispositivo BLUETOOTH® emparejado. En el momento de la compra, ésta viene desactivada.

Mantenga tocados el botón (Volume) y el botón (BLUETOOTH®) durante 5 segundos. El indicador (BLUETOOTH®) se apaga y la función BLUETOOTH® se activa.

• Si vuelve a apagar el botón tocados el botón (Volume) y el botón (BLUETOOTH®) durante 5 segundos, el dispositivo (BLUETOOTH®) se iluminará y la función BLUETOOTH® se activará.

### Otras notas

- No coloque ni deje la unidad en lugares extremadamente fríos o extremadamente calientes (temperaturas por fuera del rango de 5 °C a 35 °C). Si la unidad se utiliza o se deje fuera de la gama anterior, puede detenerse automáticamente para proteger los circuitos internos.
- Si se utiliza esta unidad durante mucho tiempo, la temperatura de la misma puede aumentar, pero no es un problema de funcionamiento.
- A altas temperaturas, la carga se puede detener o el volumen se puede reducir para proteger la batería.
- Cuando la luz de la unidad sea clara o deslumbrante, aumente el brillo de las luces de la habitación o desactive el efecto de iluminación.
- Para limpiar operaciones, coloque la yema del dedo directamente sobre el sensor táctil.
- No opere el sensor táctil con una mano húmeda para evitar un mal funcionamiento.
- Incluso si no pretende utilizar la unidad durante mucho tiempo, cierre la batería por completo una vez cada 6 meses para mantener su desempeño.

## Marcas comerciales

- Android y Google Play son marcas comerciales de Google LLC.
- El nombre LDAC® es una marca comercial de Sony Corporation o sus filiales.
- Windows Media es una marca comercial registrada o una marca comercial de Microsoft Corporation en los Estados Unidos y/o en otros países.

• La marca denominativa y los logotipos BLUETOOTH® son marcas comerciales registradas propiedad de la marca registrada SIG, Inc., y Sony Group Corporation y sus filiales poseen licencia para utilizar cualquier otro diseño.

• Apple, el logotipo de Apple, iPhone, iPod touch son marcas comerciales de Apple Inc., registradas en Estados Unidos y otros países.

• App Store es una marca de servicio de Apple Inc., registrada en Estados Unidos y otros países.

• Los demás nombres comerciales y marcas comerciales registradas son marcas comerciales o marcas comerciales registradas de sus respectivos propietarios. En este manual no se indican las marcas™ y®.

Todas las demás marcas comerciales y marcas comerciales registradas son marcas comerciales o marcas comerciales registradas de sus respectivos propietarios. En este manual no se indican las marcas™ y®.

## Especificaciones

### BLUETOOTH®

Banda de frecuencia

Banda de 2,4 GHz (2,400 0 GHz - 2,483 5 GHz)

Frecuencia operativa / Potencia de salida máxima

2 400 MHz - 2 483,5 MHz < / < 14,0 dBm

### General

- Entrada Puerto USB tipo A: Dispositivo USB compatible (Clase de almacenamiento masivo)
- Toma AUDIO IN (Φ 3,5 mm)
- Conector OPTICAL IN (PCM)
- Toma MIC (Φ 3,5 mm)
- Toma GUITAR (Φ 6,3 mm)
- Puerto USB tipo A (para cargar la batería de un dispositivo conectado) (CC de 5 V / MAX. 1,5 A)
- Potencia CA de 120 V - 240 V, 50/60 Hz o, utilizando batería de iones de litio incorporada
- Consumo de potencia Aprox. 77 W
- Consumo de potencia en espera Aprox. 7 W
- Modo de espera de BLUETOOTH® Aprox. 0,5 W

Duración de la batería de iones de litio (mientras el modo Battery Care® no está activado)

• Reproducción: Aprox. 2 horas\*

• Nivel de volumen: Aprox. 15 horas\*

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 15 horas (mientras la batería está cargada)\*

• Nivel de volumen: 14

• Sonido: MEGA BASS activado

• Iluminación: activada

• Ajuste del volumen: Aprox. 15 horas (mientras la batería está cargada)\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 15 horas (mientras la batería está cargada)\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Tiempo necesario para cargar la batería incorporada (mientras el modo Battery Care® no está activado)

• Reproducción: Aprox. 3 horas\*

• Nivel de volumen: Aprox. 30 horas\*

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 14

• Sonido: MEGA BASS activado

• Iluminación: activada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Tiempo necesario para cargar la batería incorporada (mientras el modo Battery Care® no está activado)

• Reproducción: Aprox. 3 horas\*

• Nivel de volumen: Aprox. 30 horas\*

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 14

• Sonido: MEGA BASS activado

• Iluminación: activada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Tiempo necesario para cargar la batería incorporada (mientras el modo Battery Care® no está activado)

• Reproducción: Aprox. 3 horas\*

• Nivel de volumen: Aprox. 30 horas\*

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 14

• Sonido: MEGA BASS activado

• Iluminación: activada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Ajuste del volumen: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: Aprox. 30 horas\*

• Nivel de volumen: 50 (MAX.)

• Sonido: MEGA BASS activado

• Iluminación: desactivada

• Modo de espera: