



Keychron

C1 Pro 8K Mechanical Keyboard

IN THE BOX:

Keychron C1 Pro 8K Mechanical Keyboard x 1

Type-C Cable x 1

Type A to Type C Adapter x 1

Screwdriver x 1

Keycap & Switch Puller x1

Manual x 1

 
Quick Start Guide x 1

Extra Keycaps Set x 1

QUICK START GUIDE


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

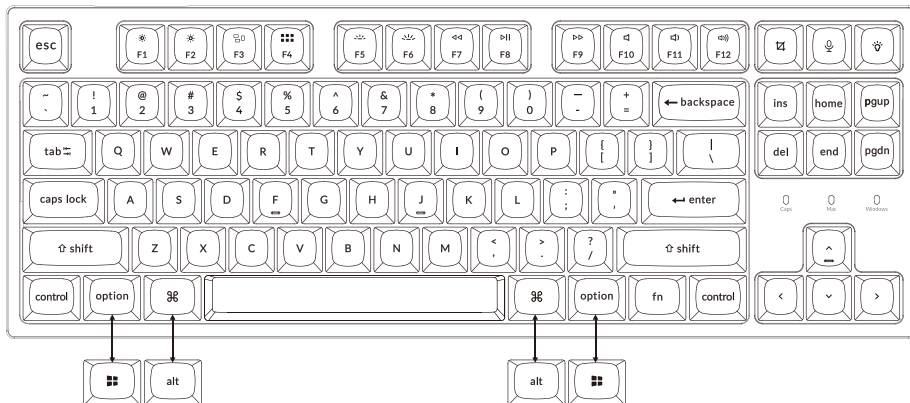

1 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

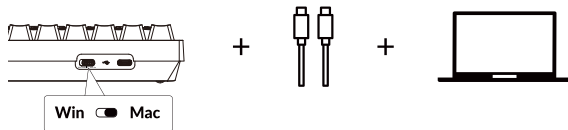

2 The Backlight

Press fn + Q to change the lighting effect



Press fn + tab to turn the backlight on/off



3 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



fn + W

Press fn + S to decrease the backlight brightness



fn + S

4 Adjust The Backlight Speed

Press fn + T to increase the light effect speed



fn + T

 
Press fn + G to decrease the light effect speed



fn + G

5 The Key Rollover

Press fn + N to switch 6-key rollover/N-key rollover

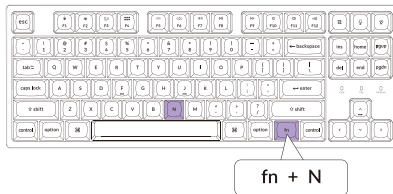

6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.

N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.

* The keyboard turns on the N-key rollover by default.

6 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



7 The Keychron Launcher App

 
Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.




* The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.

8 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.



 
If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



 9 Factory Reset & Firmware Update

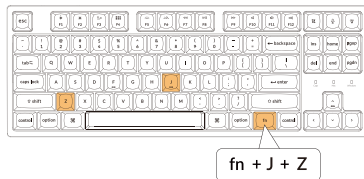

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware




1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

*Step-by-step guide, search the keyword "firmware" on keychron.com.

C1 PRO 8K MECHANICAL KEYBOARD SPECIFICATIONS

Specifications	
Layout	TKL
Switch type	Mechanical
Width	131 mm
Length	357 mm
Front height	20 mm (without keycaps) 29 mm (with keycaps installed)
Back height	29 mm (without keycaps) 39 mm (with keycaps installed)
Keyboard feet height	2 mm
Angle	4.8° / 8.5° / 10.7°

   
C1 PRO 8K TENKEYLESS MECHANICAL KEYBOARD OVERVIEW

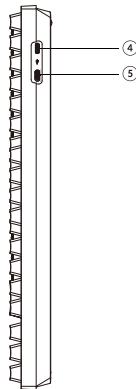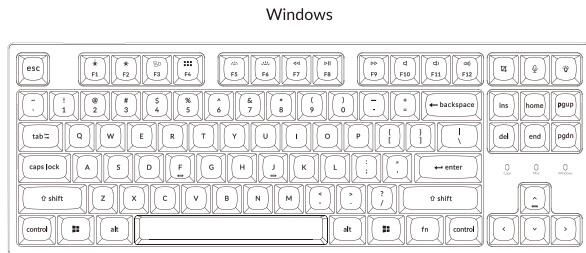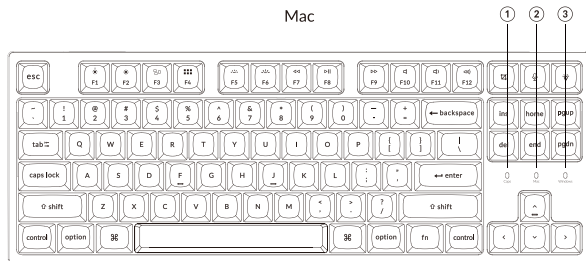


- ① Caps Lock Indicator
- ② Mac Layout Indicator
- ③ Windows Layout Indicator
- ④ Type-C Port
- ⑤ Win/Android Mac/iOS (OS Toggle)

DEFAULT KEY LAYOUT:

 
LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

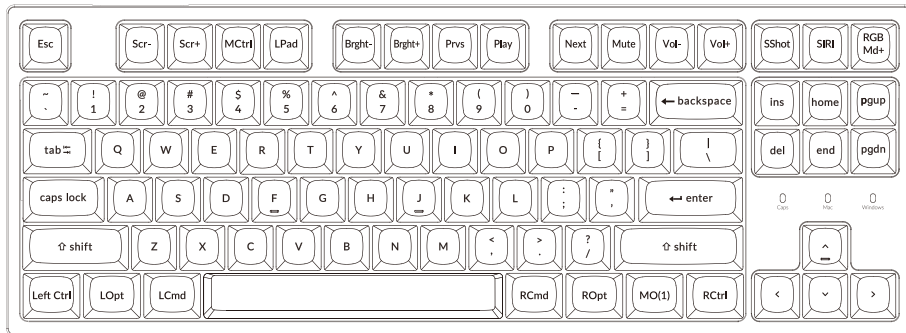

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

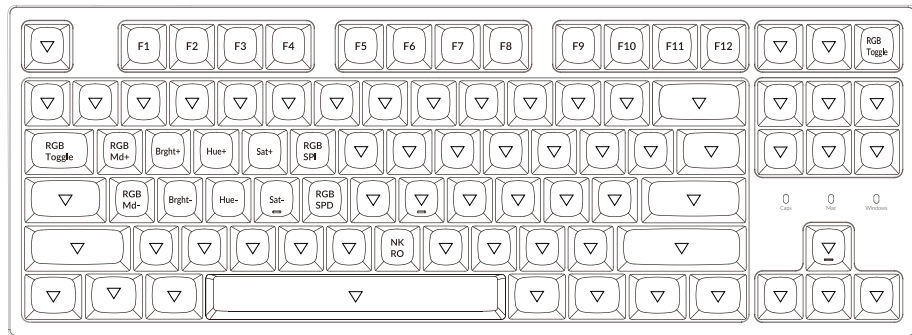 


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

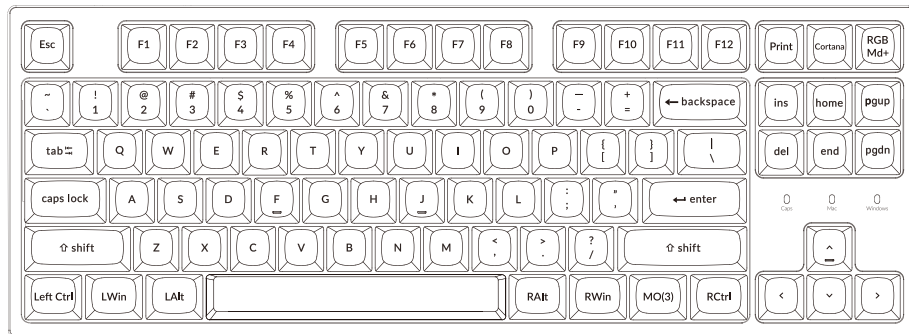 

LWin=Left Windows LAlt=Left Alt RAlt=Right Alt RWin=Right Windows RCtrl=Right Ctrl

 LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

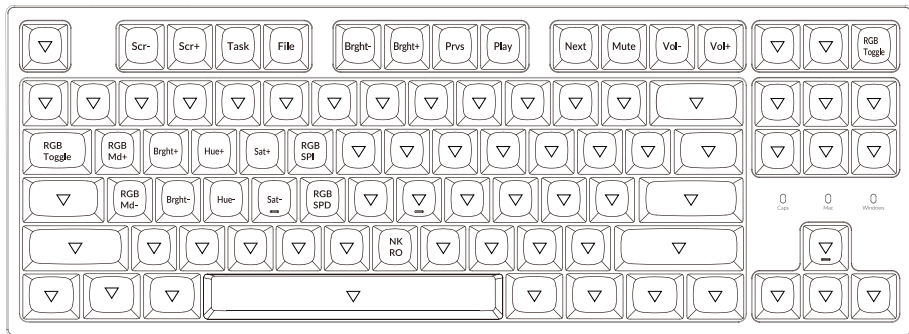

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGB Md-	RGB Mode Previous	Sat+	Saturation Increase
Scr+	Screen Brightness Increase	Hue+	Hue Increase	Sat-	Saturation Decrease
Bright-	Backlight Decrease	Hue-	Hue Decrease		
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase		
Prvs	Previous	RGB SPD	RGB Speed Decrease		
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(3)	Layer 3 will be activated when holding this key		
Mute	Mute	NKRO	N-key Rollover		
Vol-	Volume Decrease	Task	Task View		
Vol+	Volume Increase	File	File Explorer		
RGB Toggle	Turn Backlight on/off	MCtrl	Mission Control		
RGB Md+	RGB Mode Next	LPad	LaunchPad		

LED STATUS OVERVIEW

Function	LED Location	Status
Caps Lock	Caps Lock Indicator	Enable Caps Lock - Static Blue Disable Caps Lock - Light Off
Windows Layout	Windows Layout Indicator	Switch to Windows OS - Static Blue
Mac Layout	Mac Layout Indicator	Switch to macOS - Static Blue

BACKLIGHT SETTING

- Short press key combination “fn”+  or “fn” +“tab” turn the backlight on/off.
- Short press key combination “fn”+“Q” or “fn”+“A” to switch between types of lighting effects.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (14°F) or above 50°C (122°F) to preserve the lifespan of the keyboard and battery.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



C1 Pro 8K 有线机械键盘

内容清单

Keychron C1 Pro 8K 有线机械键盘 x 1

Type C 接口线材 x 1

Type A to Type C 转接头 x 1

十字螺丝刀 x 1

拔轴键器 x 1

赠送键帽套装 x 1

 
说明书 x 1

快速上手指南 x 1

快速上手指南


如果您是Windows用户, 请在包装内中找到对应的键帽, 然后按照下面的说明找到并替换以下键帽。

Mac / Windows

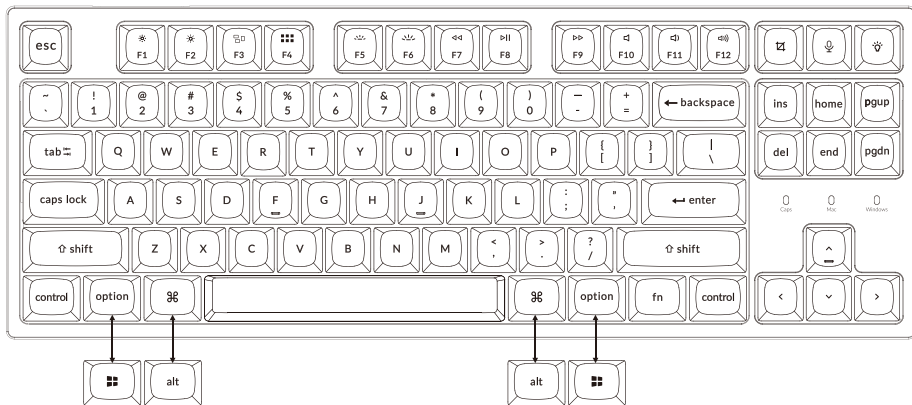


1、系统切换

 请确保键盘左上角的系统拨片切换到对应系统，如果没有选择正确，部分功能将无法使用。

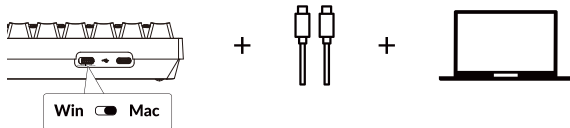


2、更改键盘背光模式以及快速关闭/开启键盘背光

 组合fn+Q键，更改键盘背光模式

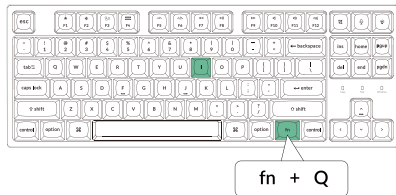


组合fn+tab键，可快速关闭/开启键盘背光

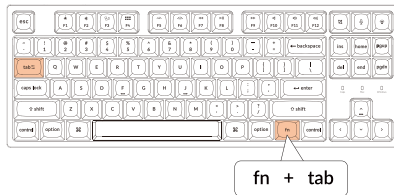 


3、调整键盘背光亮度

 组合fn+W键,提高键盘背光亮度

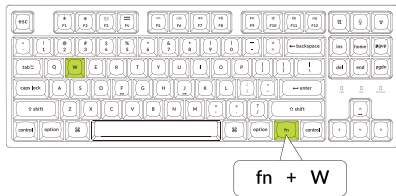


组合fn+S键,减少键盘背光亮度

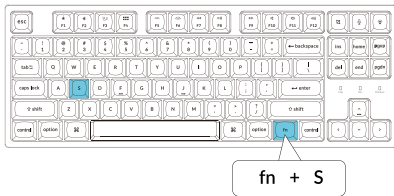 


4、调整背光速度

 组合fn+T键,增加光效速度

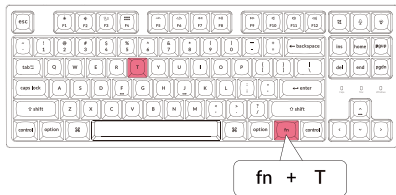


组合fn+G键,降低光效速度

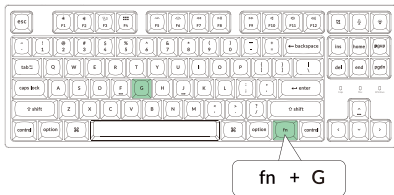 

5、切换按键无冲

 组合fn+N键,可快速切换六键无冲/全键无冲

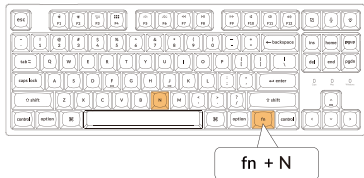

六键无冲:键盘支持最多同时输入键位为六个

全键无冲:键盘支持同时输入键位数量无限制

* 键盘默认为全键无冲

6、保修

由于C1 Pro 8K 有线机械键盘是可高度定制且易于组装的,所以键盘的任何一个部件出了问题,我们只会更换键盘有问题的部件而不是整个键盘。



7、关于Keychron Launcher App

 
可以访问launcher.keychron.com 使用在线 Launcher app。该软件可以映射按键, 创建宏命令, 或者刷新固件。如果Launcher app不能识别你的键盘, 请联系我们以获得技术支持。



*在线Launcher app只能在最新版本的Chrome, Edge和Opera浏览器中运行。

8、关于键盘键层说明

键盘有四层按键设置。
层0和层1是用于Mac系统。
层2和层3是用于Windows系统。




如果您的系统拨片切换到Mac档位, 层0将被激活。



如果您的系统拨片切换到Windows档位, 那么层2将被激活。
如果您在Windows系统模式下使用, 请对层2进行更改, 而不是层0, 否则无法进行按键映射操作。



 9、恢复出厂模式&更新固件

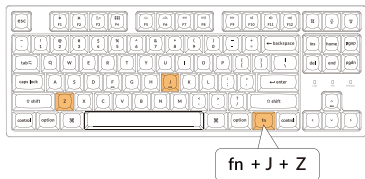

如果键盘出现了故障, 不知道怎么办?

恢复出厂设置

1. 打开键盘。
2. 按住 fn + J + Z (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒, 表示键盘已重置。

刷新键盘固件




1. 访问 launcher.keychron.com 打开在线 Launcher web app。
2. 确保键盘处于Cable或者有线模式, 并插入电源线。
3. 在Launcher上找到“固件更新”选项, 并将键盘与其连接。
4. 按照Launcher提示, 完成固件更新。

*在 keychron.com 上搜索关键字“Firmware”可以找到步骤指南。

C1 Pro 8K 键盘规格

规格	
布局	TKL
开关类型	机械轴体
宽度	131mm
长度	357mm
键盘下沿高度	20mm (不含键帽) / 29mm (含键帽高度)
键盘上沿高度	29mm (不含键帽) / 39mm (含键帽高度)
键盘脚垫高度	2mm
键盘倾斜角度	4.8° / 8.5° / 10.7°

   
C1 Pro 8K 键盘按键说明

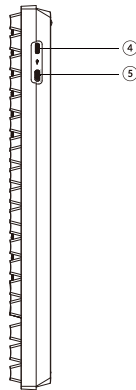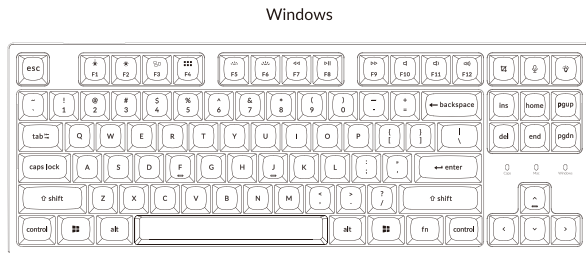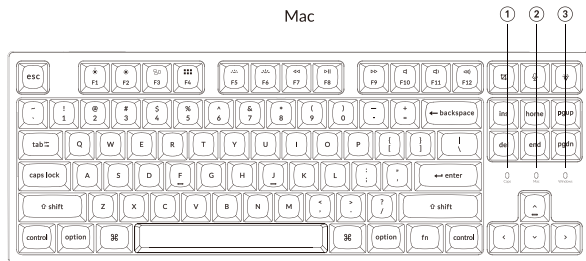


- ① 大小写状态指示灯
- ② Mac布局指示灯
- ③ Windows布局指示灯
- ④ Type-C接口
- ⑤ Win/Android Mac/iOS (OS切换开关)

按键布局

 
层0：当您的系统拨片切换到Mac档位的时候，层0将被激活使用。

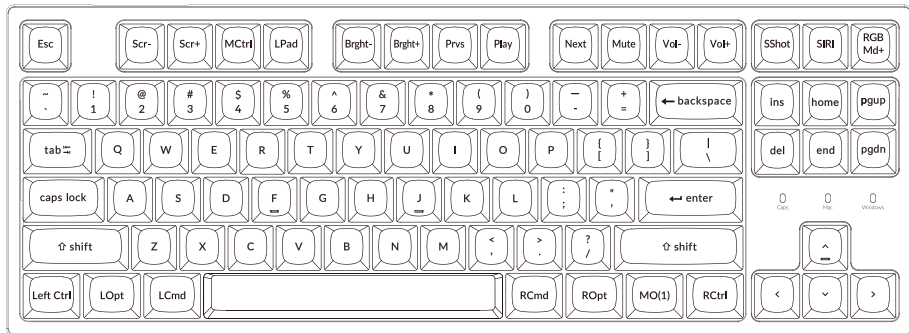

 层1：当您的系统拨片切换到Mac档位并组合fn/MO(1)键的时候，层1将被激活使用。

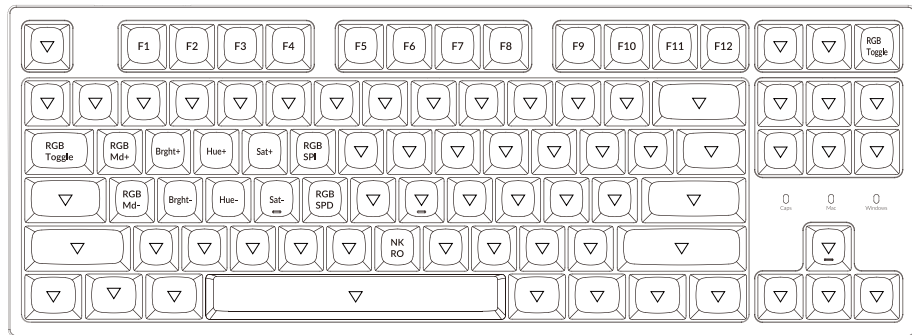


层2：当您的系统拨片切换到Windows档位的时候，层2将被激活使用。

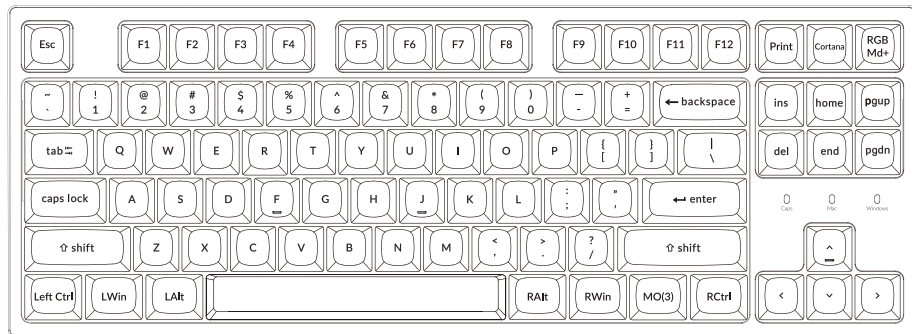 

LWin=Left Windows LAlt=Left Alt RAlt=Right Alt RWin=Right Windows RCtrl=Right Ctrl

 层3：当您的系统拨片切换到Windows档位并组合fn/MO(3)键的时候，层3将被激活使用。

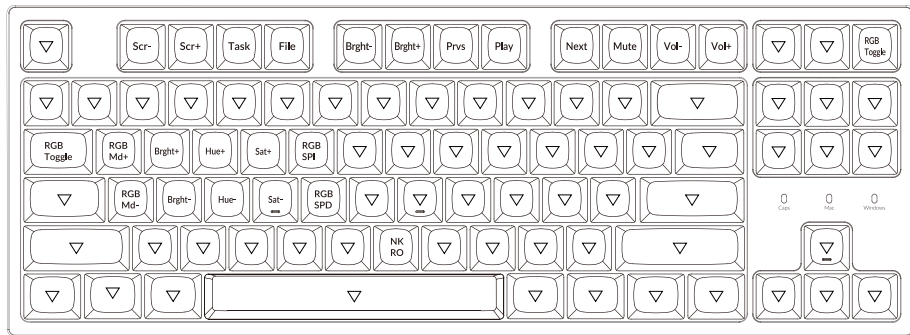

C1 Pro 8K 键盘多媒体按键说明

按键说明		按键说明		按键说明	
Scr-	屏幕亮度-	RGBMD+	下一个RGB灯光模式	Sat+	饱和度+
Scr+	屏幕亮度+	RGBMD-	上一个RGB灯光模式	Sat-	饱和度-
Bright-	键盘背光亮度-	RGB SPI	RGB灯光速度+		
Bright+	键盘背光亮度+	RGB SPD	RGB灯光速度-		
Prvs	上一曲	MO(1)	按住MO(1), 层1将被激活		
Play	播放/暂停	MO(3)	按住MO(3), 层3将被激活		
Next	下一曲	NKRO	全键无冲		
Mute	静音	Task	任务视图		
Vol-	音量-	File	文件管理器		
Vol+	音量+	MCtrl	调度中心		
RGB Toggle	关闭/开启键盘背光	LPad	启动台		

LED状态显示如下

功能	LED位置	状态
大小写	大小写状态指示灯	蓝灯—大写 熄灭—小写
Windows布局	Windows布局指示灯	切换Windows系统 - 蓝灯常亮
Mac布局	Mac布局指示灯	切换Mac系统 - 蓝灯常亮

背光灯

 
- 短按组合键"fn+或"fn+tab"可关闭/开启键盘背光。
- 短按组合键"fn+Q"/"fn+A"可切换背光效果。

第三方输入工具与键盘不兼容。

答：由于Windows/Android操作系统的兼容性、版本、品牌和驱动程序，使用键盘时，第三方输入工具可能会受到影响。请确保您的操作系统和驱动程序是最新的。

某些多媒体键或功能键在设备上不起作用。

答：由于设备的兼容性,系统版本,驱动程序等原因,某些多媒体键或者功能键可能无法使用。

*多媒体键：

功能键：

安全预防措施：

防止儿童接触到产品、附件和包装部件，以防止任何意外和窒息的危险。

保持产品干燥，避免腐蚀。

不要将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下，以保持键盘的寿命。

Keychron, Inc.

Dover, DE 19901, United States

<https://www.keychron.com>

通过以下方式与我们联系

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Keychron设计

中国制造

中国区总代：渴创技术（深圳）有限公司
执行标准：GB/T 14081-2010
售后热线：400-0766268
地 址：深圳市龙岗区坂田街道大发埔社区
大发路24号文坑工业区2栋201

