



Unpack the machine and check the components



**Drum Unit and Toner Cartridge Assembly**

(pre-installed in models DCP-L5500D / DCP-L5500DN / DCP-L5600DN / DCP-L6600DW / MFC-L5700DN / MFC-L5750DW / MFC-L5755DW / MFC-L5900DW / MFC-L6700DW / MFC-L6800DW / MFC-L6900DW (For Oceania))

**Drum Unit**

(pre-installed in model MFC-L6900DW only (Except for Oceania))

**Inbox Toner Cartridge**

(model MFC-L6900DW only (Except for Oceania))

**AC Power Cord**

**Telephone Line Cord**

(For MFC models)

**Quick Setup Guide**

**Product Safety Guide**

**Basic User's Guide or Reference Guide**

(only for certain models)

**Installation CD-ROM**

**Telephone Line Cord Adapter**

(Australia only) (For MFC models)

**NOTE:**

- The available connection interfaces vary depending on the model.
- You must purchase the correct interface cable for the interface you want to use.

**USB cable**

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

**Network cable**

(Except for DCP-L5500D)  
Use a straight-through Category 5 (or greater) twisted-pair cable.


- The illustrations in this Quick Setup Guide show the MFC-L6900DW.



Watch our Video FAQs for help with setting up your Brother machine:  
[solutions.brother.com/videos](http://solutions.brother.com/videos).

**1 Remove the packing materials and install the drum unit and toner cartridge assembly**


DCP-L5500D / DCP-L5500DN / DCP-L5600DN / DCP-L6600DW / MFC-L5700DN / MFC-L5750DW / MFC-L5755DW / MFC-L5900DW / MFC-L6700DW / MFC-L6800DW / MFC-L6900DW (For Oceania)

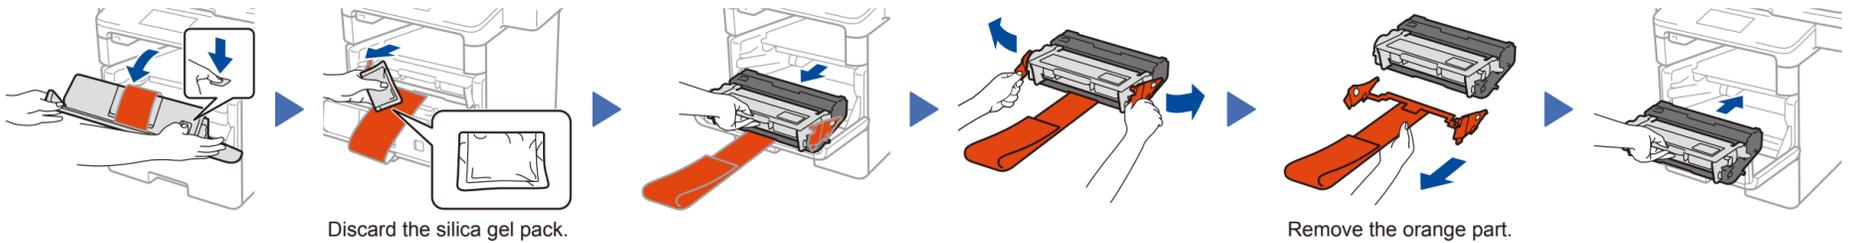

Discard the silica gel pack.

Remove the orange part.


**MFC-L6900DW ONLY (Except for Oceania)**

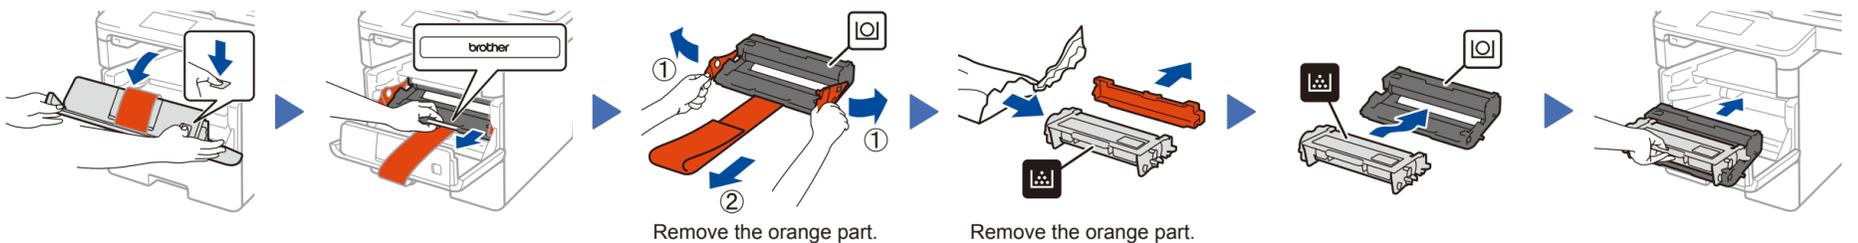

Remove the orange part.


Remove the orange part.

**2 Load paper in the paper tray**

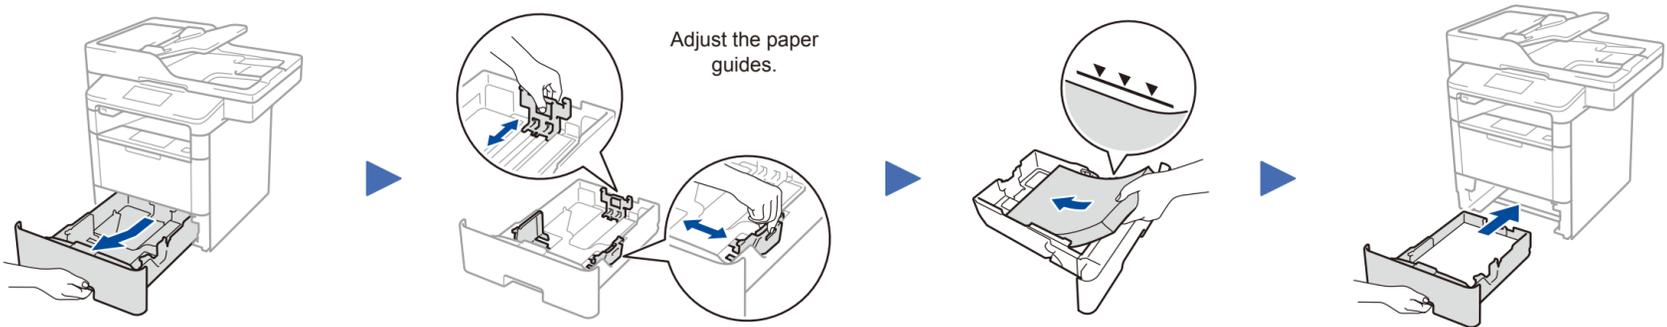

Adjust the paper guides.

**3 Connect the power cord and turn the machine on**

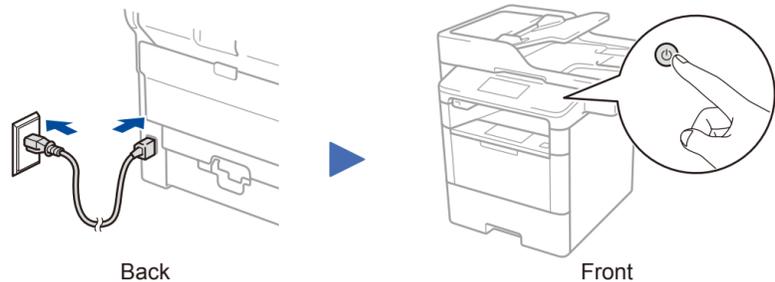

Back


Front

**4 Select your country/language (Initial setup only)**

After turning the machine on, you may be required to set your country or language (depending on your machine).  
If required, follow the on-screen instructions.

**5 Select your language (if needed) (Only for certain models)**


- On the machine's Touchscreen, press [Settings] > [All Settings] > [Initial Setup] > [Local Language].
- Press your language.
- Press [Home].

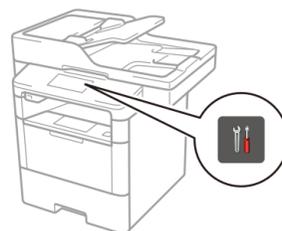

# 6 Connect your machine and install software

Brother regularly updates firmware to add features and fix identified problems. To check for the latest firmware, visit [solutions.brother.com/up1](http://solutions.brother.com/up1).

## Windows® computer with CD-ROM drive

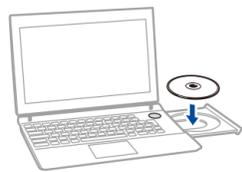


**NOTE:**  
If the Brother screen does not appear automatically, click **(Start) > Computer (My Computer)**.  
(For Windows® 8: click the **(File Explorer)** icon on the taskbar, and then go to **Computer (This PC)**.)  
Double-click the CD-ROM icon, and then double-click **start.exe**.

■ For DCP-L5500D



■ For other models

Choose your Connection Type:

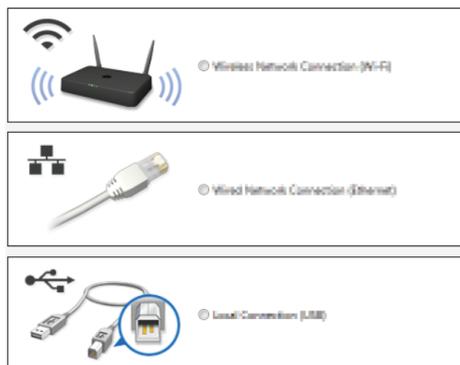

## Macintosh/Windows® computer without CD-ROM drive



Download the full driver and software package from the Brother Solutions Center.  
(Macintosh) [solutions.brother.com/mac](http://solutions.brother.com/mac)  
(Windows®) [solutions.brother.com/windows](http://solutions.brother.com/windows)

Follow the on-screen instructions to continue installation.

**Finish**

**NOTE:**  
If connection is unsuccessful, see **? Cannot set up your machine?** below.

## Print and scan using your mobile device (not available for DCP-L5500D)




Download "Brother iPrint&Scan" to start using your machine with mobile devices.

[solutions.brother.com/ips](http://solutions.brother.com/ips)



AirPrint is available for OS X and iOS users. For more information, see the *AirPrint Guide* on your model's **Manuals** web page.  
[solutions.brother.com/manuals](http://solutions.brother.com/manuals)

## ? Cannot set up your machine?

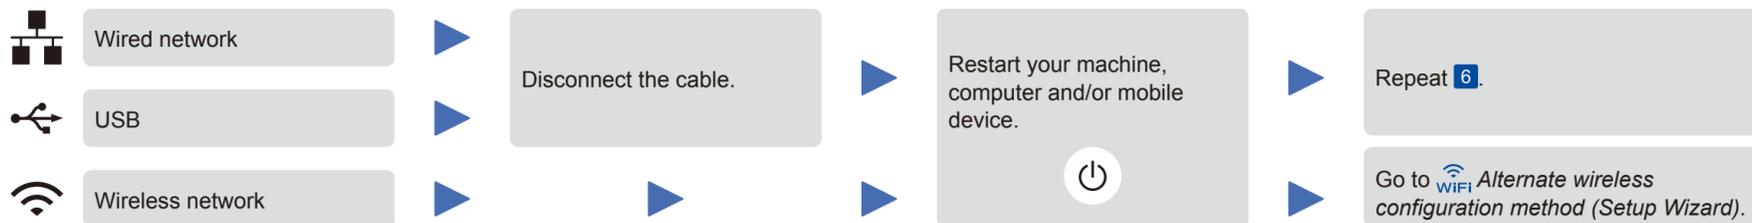

## WiFi Alternate wireless configuration method (Setup Wizard)

- Restart your wireless access point/router.
- Find the SSID and Network key.




- Press **WiFi** > [Setup Wizard] > [Yes].



- Select the SSID.
- Enter the Network key.

**NOTE:**  
For information on how to enter text, see the printed *Basic User's Guide* or *Reference Guide*.

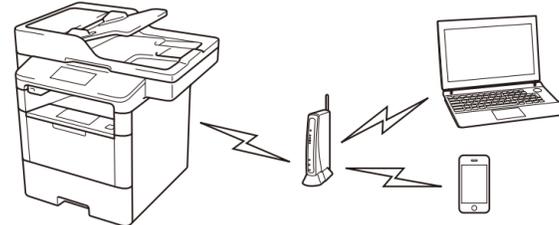

The LCD displays [Connected].

To use with your computer >> Step **6** *Connect your machine and install software*

To use with your mobile device >> **Print and scan using your mobile device (not available for DCP-L5500D)**

