



Integrator's Complete Guide to RoboSHOT 20 UHD High Performance, Ultra High Definition PTZ Camera

Document 342-1192 Rev. B July 2016

Contents

Overview	1
What's in this Guide	1
Camera Features	1
Unpacking the Camera	2
A Quick Look at the Camera	3
Front of the Camera	3
Connector Panel	. 4
Switch Settings	. 4
Video Resolution	5
Camera Settings	. 6
Installation	. 7
Before You Install the Camera	7
Don't Void Your Warranty!	. 7
Cabling Notes	7
Installing the Wall Mount	. 8
About Ceiling-Mounted Cameras	8
Basic Connection Diagram	8
Installing the Camera	. 9
Powering Up the Camera	10
Configuring and Controlling the Camera	11
Vaddio IR Remote Commander	. 11
IR Remote Cheat Sheet	11
IR Remote Details	. 12
Storing a Preset Using the IR Remote Commander	12
Clearing a Preset Using the IR Remote Commander	. 12
Web Interface	. 13
Compatible Web Browsers	13
User Access	14
Administrative Access	14
Web Interface Cheat Sheet	. 15
Web Tasks for All Users: Controlling the Camera	16
Web Tasks for Administrators: Configuring Network Settings	. 21
Web Tasks for Administrators: Adding Room Information to the Screen	22
Web Tasks for Administrators: Managing Access and Passwords	22
Web Tasks for Administrators: Setting Camera Behaviors and Adjustments	23
Web Tasks for Administrators: Configuring Streaming Settings	. 25
Web Tasks for Administrators: System Reboots, Resets, and Soft DIP Switch Con-	
figuration	27
Web Tasks for Administrators: Contacting Vaddio Technical Support	. 30
Web Tasks for Administrators: Viewing Diagnostic Logs	30

Telnet Serial Command API	
camera home	
camera pan	
camera tilt	
camera zoom	
camera focus	
camera preset	
camera ccu get	
camera ccu set	
camera ccu scene	
video mute	
camera standby	
streaming settings get	
network ping	41
network settings get	
system reboot	41
system factory-reset	42
history	43
version	
help	43
exit	
RS-232 Serial Communication	45
RS-232 Command List	
Command Setting Values	
RS-232 Inquiry Command List	57
Specifications	61
Troubleshooting and Care	
Operation, Storage, and Care	63
Compliance Statements and Declarations of Conformity	64
FCC Part 15 Compliance	64
ICES-003 Compliance	64
European Compliance	65
Warranty Information	66
Index	67

Overview

This guide covers the RoboSHOT[™] 20 UHD high performance PTZ camera:

- RoboSHOT 20 UHD (silver and black), North America 999-9950-000
- RoboSHOT 20 UHD (white), North America 999-9950-000W
- RoboSHOT 20 UHD (silver and black), International 999-9950-001
- RoboSHOT 20 UHD (white), International 999-9950-001W

What's in this Guide

This guide covers:

- Unpacking and installing RoboSHOT 20 UHD cameras
- The camera's physical features and switch settings
- Controlling the camera using the IR remote or web interface
- Controlling the camera using Telnet or RS-232 commands
- Specifications
- Troubleshooting and maintenance
- Warranty and compliance/conformity information
- For your convenience, this information is also available in smaller, limited-purpose manuals:
- Installation Guide for RoboSHOT 20 UHD High Performance PTZ Cameras (unpacking, physical features, switch settings, installation, initial power-up)
- Configuration and Administration Guide for RoboSHOT 20 UHD High Performance PTZ Cameras ((physical features, controlling the camera, troubleshooting, and specifications)

Download manuals, dimensional drawings, and other information from www.vaddio.com/support.

Camera Features

- Back-illuminated 9.03 Megapixel, ultra high definition 1/2.3type sensor delivers native 2160p/30 (3840 x 2160) video
- 12X optical zoom and 1.67X digital zoom; effective 20X zoom range; horizontal field of view 74° (wide) to 4.8° (tele) at 20X
- Imaging and performance comparable to 3-chip cameras
- Precise pan and tilt movements from 120°/s down to 0.35°/s
- Tri-Synchronous Motion[™] simultaneous 3-axis pan/tilt/zoom movement between presets
- Simultaneous HDMI[®], HDBaseT[™], 3Gb/s HD-SDI and IP streaming outputs
- Presenter-friendly IR remote control
- Full administrative control from your browser via web interface
- Integration-ready Telnet or serial RS-232 control
- Smooth, silent direct-drive motors



Unpacking the Camera

Make sure you received all the items you expected.





Caution

Always support the camera's base when picking it up. Lifting the camera by its head or mounting arm will damage it.

North America

Part number 999-9950-000, RoboSHOT 20 UHD in silver and black

Part number 999-9950-000W, RoboSHOT 20 UHD in white

- Vaddio IR Remote Commander
- 12 VDC, 3.0 A switching power supply
- AC cord set for North America
- Thin Profile Wall Mount with mounting hardware
- EZCamera RS-232 control adapter
- Quick Start Guide

International

Part number 999-9950-001, RoboSHOT 20 UHD in silver and black

Part number 999-9950-001W, RoboSHOT 20 UHD in white

- Vaddio IR Remote Commander
- 12 VDC, 3.0 A switching power supply
- AC cord sets for UK and Europe
- Thin Profile Wall Mount with mounting hardware
- EZCamera RS-232 control adapter
- Quick Start Guide





A Quick Look at the Camera

This section covers the physical features of the RoboSHOT 20 UHD.

Front of the Camera



- **Camera and Zoom Lens:** Horizontal field of view up to 74°.12X optical zoom combines with 1.67X digital zoom to deliver an effective 20X zoom range; 4.8° field of view at 20X.
- Dual-arm mount provides superior stability.
- IR Sensors: Sensors in the front of the camera base receive signals from the IR Remote Commander. Make sure there are no obstructions directly in front of the camera base.
- Status indicator: The multi-colored LED indicates the camera's current state.
 - Purple Boot-up and Standby modes.
 - Blue Normal operation and is a power on, ready condition.
 - Blinking blue The camera has received IR from the remote or other IR source.
 - Red Tally function; shows that the camera is on-air.
 - Blinking red Fault condition.
 - Yellow Firmware update is in progress.

Caution

Do not remove power or reset the camera while the indicator is yellow, showing a firmware update in progress. Interrupting a firmware update can make the camera unusable.

Connector Panel

From left to right:

- 12 VDC, 3.0 A connector EIA-J04 connector for the power supply shipped with the camera, if not using a OneLINK extension system
- OneLINK HDBaseT connector Connect to the network (H.264 IP streaming, web interface or Telnet control, and PoE++ power) or a OneLINK extension system (video, power and control up to 328 ft/100m)
- HDMI connector HDMI video output
- HD-SDI connector HD-SDI video output
- RS-232 port Connect to a camera controller to manage the camera using a modified VISCA protocol
- HD video select switch Select the appropriate output resolution for local outputs
- DIP switches Set IR frequency, IR on/off, image flip (camera is invertible), and baud rate



Switch Settings

RoboSHOT cameras use a rotary switch to set the video resolution and a set of DIP switches that determine certain camera functions. A label on the bottom of the camera provides a quick reference for setting the switches.

Note

Set the switches appropriately before mounting the camera.

Integrator's Complete Guide to the RoboSHOT 20 UHD High Performance, Ultra High Definition PTZ Camera

Video Resolution

Set the desired available output resolution for the camera with the rotary switch. Switch positions A through F are not used.

Switch position	Resolution
0	1080p/59.94
1	1080p/50
2	1080i/59.94
3	1080i/50
4	1080p/29.97
5	1080p/25
6	720p/59.94
7	720p/50
8	2160p/29.97
9	2160p/25
A-F	Not used

Note

The maximum resolution for the HD-SDI output and the IP stream is 1080p.

Camera Settings

Use the DIP switches to set other camera behaviors.

Note

When the camera is right side up, switches are in their default positions when they are up.

IR Frequency Selection:The IR Remote Commander can control up to three cameras in the same room independently, if they are configured with different IR frequencies. Use **switches 1 and 2** to select the frequency to identify the camera as camera 1, 2, or 3; then use the Camera Select buttons at the top of the remote to select the camera you want to control.

IR: Leave switch 3 in the default UP position if the IR remote will be used.

Inverted operation: If mounting the camera upside-down, set **switch 4** to the DOWN position: IMAGE FLIP ON.

Baud Rate: Set the baud rate for RS-232 communication using **switch 5**. Most applications use 9600 bps (switch 6 UP), which is recommended when using long cable runs. Use the 38,400 bps setting (switch 6 DOWN) for short control lines only.

Switch 6 is not currently used.





Double-check switch settings before you mount the camera.

Installation

This section covers

- Siting the camera
- Installing the mount
- Connecting the camera
- Installing the camera

Before You Install the Camera

- Choose a camera mounting location that will optimize camera performance. Consider camera viewing
 angles, lighting conditions, line-of-sight obstructions, and in-wall obstructions where the camera is to be
 mounted.
- If the IR Remote Commander will be used, ensure that nothing blocks the IR lens in the camera's base.
- Ensure that the camera body can move freely and point away from the ceiling and lights.
- Follow the installation instructions included with the camera mount.

Don't Void Your Warranty!

Caution

This product is for indoor use. Do not install it outdoors or in a humid environment without the appropriate protective enclosure. Do not allow it to come into contact with any liquid.

Use only the power supply included with this product. Using a different one will void the warranty, and could create unsafe operating conditions or damage the product.

Do not install or operate this product if it has been dropped, damaged, or exposed to liquids. If any of these things happen, return it to Vaddio for safety and functional testing.

DomeVIEW enclosures are available to allow outdoor installation of RoboSHOT cameras. Learn more at www.vaddio.com/products.

Cabling Notes

Use Cat-5e or better cable and standard RJ-45 connectors (568B termination). We recommend using highquality connectors and a high-quality crimping tool.

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

Note

Do not use pass-through RJ-45 connectors. These can cause intermittent connections and degraded signal quality, resulting in problems that may be hard to diagnose. Use standard RJ-45 connectors.





Pro Tip To prevent tragic mishaps, label both ends of every cable.

Installing the Wall Mount

All RoboSHOT cameras include a Thin Profile Wall Mount. Other mounting options are available as well. Contact us if you don't have the camera mount you need.

You can install the camera wall mount to a 2-gang wall box or directly to the drywall.

- If you mount it to drywall, use the wall anchors provided with the wall mount.
- If you mount it to a wall box, use the cover plate screws supplied with the wall box.



About Ceiling-Mounted Cameras

If you use an inverted mount, set the camera's Image Flip DIP switch ON for inverted operation. See Camera Settings for more information.

Basic Connection Diagram

The Quick-Start Guide for RoboSHOT 20 UHD provides additional information.





Installing the Camera

Caution

Before you start, be sure you can identify all cables correctly. Connecting a cable to the wrong port can result in equipment damage.

Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

- 1. Route the cables to the camera location.
- 2. Route the cables through the mount, and install the mount on the wall or attach it to the wall box. Leave the screws loose enough to adjust the position of the mount.
- 3. Level the mount and tighten the mounting screws.
- 4. Check the level again.
- 5. Connect the cables to the camera.

Caution:

Use the power supply shipped with the camera. Using a different power supply may create an unsafe operating condition or damage the camera, and will void the warranty.

- 6. Ensure that the video resolution switch and the DIP switches are set appropriately. See <u>Switch</u> <u>Settings</u>.
- 7. Place the camera on the mount.
- 8. Attach the camera to the mount using the $\frac{1}{4}$ -20 x .375 mounting screw supplied with the camera.



Image for illustration only; not to scale. Camera and mount details may differ.

Powering Up the Camera

Connect camera power.

The camera will wake up and initialize. This will take a few seconds. When the camera is initialized and ready, its front indicator is blue. At this point, it is ready to accept control information.

When powering up, the RoboSHOT 20 UHD camera executes a different sequence of movements than other Vaddio PTZ cameras.

Note

Wait until the camera finishes initializing before trying to control it using the IR remote or other command input.

Configuring and Controlling the Camera

You can control the camera using the IR remote, web interface, Telnet session, or RS-232 command line – preferably not at the same time, as this can produce unexpected results. Choose the method that best meets the requirements.

Vaddio IR Remote Commander

The IR remote provides basic camera control for end users.

IR Remote Cheat Sheet

What do you need to do?	Button(s)
Power on or standby	Power (green button at top right)
Select the camera to control (if this remote controls more than one)	Camera Select buttons 1 through 3 (second row on the remote)
Discover the camera's IP address	Data Screen button (top left) – press and hold for 3 seconds.
Move the camera	Arrow buttons and Home button (dark red)
Move the camera to a preset position	Position Preset buttons 1 through 6 (bottom two rows)
	You can access additional presets from the camera's web interface.
Focus the camera	Auto Focus button (near arrow buttons)
	Manual Focus buttons Near and Far (below Zoom Speed buttons)
Control zoom speed	Zoom Speed buttons - Slow T and W , Fast T and W for telephoto and wide-angle modes (light gray)
Adjust for excess light behind the camera's subject	Back Light button (top center)

IR Remote Details

The Vaddio remote provides the following functions:

Power – Switch the selected camera on or off.

Power indicator - Shows power on, IR transmission, and battery level.

Back Light – Use or turn off back light compensation.

Data Screen – Display the camera's IP address and MAC address. Press this button again to dismiss the display.

Camera Select – In multi-camera installations, selects the camera to be controlled. See <u>Camera Settings</u> for information on configuring the camera as camera 1, 2, or 3. **Pan/Tilt (arrow button) controls and Home button** – Control the camera's position.

Rev. Pan and Std. Pan– Control how the camera responds to the arrow buttons. Helpful for ceiling-mounted cameras and for presenters who are controlling the camera.

Pan/Tilt Reset - Not used.

Auto Focus – Switch the camera to Auto-Focus mode.

Zoom Speed – Select Slow or Fast movements for telephoto and wide-angle shots.

- T (slow and fast) Telephoto
- W (slow and fast) Wide-angle

Manual Focus – Switch the camera to Manual Focus mode.

Near (-) adjustment – Moves the focus nearer when in manual focus mode.

Far (+) adjustment – Moves the focus farther when in manual focus mode.

Position Presets 1 through 6 – Move the camera to a predefined position.

Preset – Save the camera's current position as one of the numbered presets.

Reset – Clear the saved position presets.

The web interface offers greater control over camera movements to presets (such as setting the speed for Tri-Synchronous Motion), and provides additional presets.

Storing a Preset Using the IR Remote Commander

Position the camera. Then hold down the **Preset** button and press one of the numbered preset buttons.

Clearing a Preset Using the IR Remote Commander

Press and hold the Reset button while pressing the preset number you want to clear.



Web Interface

The camera provides a web interface to allow control via an Ethernet network connection, using a browser. (Refer to the list of <u>compatible web browsers</u>.)The web interface gives the user more control over the camera than the IR remote offers.

The web interface allows user-level camera control and password-protected administrative access to tasks such as setting passwords, changing the IP address, viewing diagnostics, and installing firmware updates.

- Administrative access The default password is password. The admin has access to all pages of the web interface.
- User access The default password is password. Only the camera control page is available with user-level access.

If the LAN has a DHCP server, the camera will get its IP address, gateway and routing information automatically and you will be able to browse to it. In the absence of a DHCP server, the camera's default IP address is 169.254.1.1 and its subnet mask is 255.255.255.0.

You can configure the camera's static IP address either through the network or from a computer connected directly to its Ethernet port. You may need a crossover cable.

Compatible Web Browsers

We have tested this product with these web browsers:

- Chrome®
- Firefox®
- Microsoft® Internet Explorer®
- Safari®
- Microsoft® Edge

We test using the browser version available from the vendor at that time. Older versions of these browsers are likely to work, and other browsers may also work.

User Access

If the admin sets up automatic guest access, no login is needed – the system starts at the Camera Control page, rather than the login page. The administrative login dialog is accessible from the Camera Control page, to allow access to administrative tasks.



Administrative Access

If you are on the Camera Control screen and no other screens are available, you're logged in at the user level, or guest access is enabled and you're not logged on at all. Use the Admin button to open the login screen.

When you log in as Admin, all the admin menu buttons appear on the left side of the screen. In addition to Camera Controls, you also have access to:

- Camera Settings Additional control over camera behavior related to camera movement and color management.
- Streaming Set up IP (H.264) streaming.
- Room Labels Add helpful information the web interface screens, such as conference room name and the in-house number for AV assistance.
- Networking Ethernet configuration.
- Security Set passwords and manage guest access.
- Diagnostics Access to logs for troubleshooting.
- System Reboot, restore defaults, view switch settings, and run updates.
- Help Tech support contact information.
- Logout End your web interface session.

Web Interface Cheat Sheet

Where to find the camera controls you need right now.

What do you need?	Go to this screen
 Camera operation Move or zoom the camera Set the speed for pan, tilt, or zoom motions Focus the camera (Focus button reveals the focus control) Move to a camera preset Put the camera into or bring it out of standby mode 	Camera Controls
 Camera behavior Set motors for inverted operation (Settings button reveals the control) Set or clear camera presets, with or without Tri-Synchronous Motion Select the appropriate lighting adjustments (CCU Scenes section) 	Camera Controls
 Camera behavior What happens on power-up or coming out of standby mode - move to a specified preset, apply specified lighting adjustments Specify whether to use automated adjustments (auto-iris, auto white balance, backlight compensation) 	Camera Settings
 Camera adjustments Color settings (Iris, iris gain, red gain, blue gain, detail, chroma, gamma) Store and label custom color settings as CCU scenes Specify global speed settings for camera movements that do not use Tri-Synchronous Motion 	Camera Settings
Advanced camera settings Color space (YCbCr or sRGB; default is YCbCr) 3G HD-SDI level (A or B; default is A)	System
IP streaming settings Quality Resolution Frame rate Streaming URL and path 	Streaming
IP settings Hostname DHCP or static addressing Static: IP address, subnet mask, gateway 	Networking
Information about the camera's current switch settings	System
Access management Guest access Account passwords 	Security

What do you need?	Go to this screen
Time zone and NTP server (source for system time/date)	Networking
Diagnostic logs	Diagnostics
Information about the camera location	Room Labels
Helpdesk phone number for end users	Room Labels
Vaddio Technical Support contact information	Help

Web Tasks for All Users: Controlling the Camera

The Camera Controls page provides most of the same controls as the IR Remote Commander, along with some that are not available from the remote:

- Put the camera in standby or bring it back to the ready state
- Pan, tilt, zoom, or return to "home" position
- Set speeds for camera movements
- Focus manually or set auto-focus
- Set or move to camera presets
- Select one of the stored lighting adjustments
- Set the way the camera responds to the arrow buttons on the remote

Since the web interface is specific to the camera you are working with, it does not offer camera selection.



Manage the Camera Ready State

Use the Standby button to switch between low-power (standby) and ready states.

In standby mode, the button is red and the screen presents the message "Device is in standby." On entering standby mode, the camera moves to its standby position.

Move the Camera

Use the arrow buttons for camera pan and tilt. The center button moves the camera to the home position.

Zoom In or Out

Use the Zoom + button to zoom in and the Zoom - button to zoom out.

Change the Speed of Camera Movements

Use the speed sliders to adjust the speed of movements that you control with the buttons for pan, tilt and zoom. For tight shots, slower is usually better.

Change the Focus

Open the Focus control to select Auto-focus, or set manual focus with the + (near) and – (far) buttons. I know you get this, but I'm going to say it anyway: The + and – buttons don't work when the Auto Focus box is checked.



Move the Camera to a Preset Position

Use the numbered Preset buttons to move the camera to any of its programmed positions. If you select a preset that has not yet been programmed, nothing happens.

Store a Camera Preset

Save Preset 1 first. Other presets will inherit its Tri-Sync settings if they have not yet been defined.

- 1. Set up the camera shot, then use the Store button to open the Store Preset box.
- 2. Click one of the numbered preset buttons.
- 3. Check Save with Tri-Sync to allow the pan, tilt, and zoom motors to move simultaneously.
- 4. If necessary, use the speed slider to set Tri-Sync speed. For tight shots, slower is better.
- 5. To save the current color settings along with the camera position, check Save with current color settings.

6. Save the preset.

Note:

The Tri-Synchronous Motion algorithm works best for on-air shots requiring significant movement in more than one axis. It is not useful when moving the camera less than 10° or when the camera is not on the air. You may need to experiment with the Tri-Sync setting.

Select the Appropriate Color Settings

Adjust the camera for the lighting in use by selecting the CCU scene that best fits your environment. The technical folks at Vaddio (Scott, to be specific) have already set up presets for common lighting scenarios – Incandescent Hi, Incandescent Lo, Fluorescent Hi, Fluorescent Lo and Outdoor. The Auto setting allows the camera to determine the appropriate adjustments.

The first three settings in this area of the web interface (initially labeled Custom A through Custom C) can be set and renamed from the Camera Settings page, accessible to admin users.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corp Rm Tel 952-933-5735, He	oration, Board Roo elp Tel 800-555-1212	m 2	
Camera Controls	ROBOSHOT 20 UHD C	ONTROLS	-	STANDBY
Camera Settings	x †	*	+	٧
Streaming				
Room Labels				Focus Settings
Networking	¥ +		Pan Speed	0 12 0 10
Security	DRESETS		Zoom Speed	O 4
Diagnostics	Preset 1	Preset 2	Preset 3	Preset 4
System	Preset 5 Preset 9	Preset 6 Preset 10	Preset 7 Preset 11	Preset 8 Preset 12
Help	CCU SCENES			
U Logout	Custom A.	Cus	stom B	Custom C
	Auto	Incand	escent Hi	Fluorescent Hi

Set Pan Direction

By default, the arrow buttons move the camera in the direction that viewers at the far end would see. If you face the camera and use the left arrow button, the camera pans to your right.

To switch the camera pan direction to the near end point of view, use the Settings button to open the pan and tilt direction box. Then set Pan Direction to Inverted.

RoboSHOT 20 UHD	Rm Tel 952-933-5735, Help Tel	n, Board Room 800-555-1212			
Camera Controls	ROBOSHOT 20 UHD CONTRO	OLS		STANDBY	
Camera Settings	N †	* +		0	
Streaming	Part da				
Room Labels			Focus	Settings	
Networking	¥ +	Pan S Tilt S	peed	12	
Security	PRESETS	Zoom S	peed O	4	
Diagnostics	Preset 1	Preset 2 Pr	eset 3	Preset 4	
\iint System	Preset 5 Preset 9	Preset 6 Preset 10	Pan Direction	Normal	* Inverted
i Help	CCU SCENES		Tilt Direction	• Normal	Inverted
(¹) Logout	Custom A	Custom B	Cu	stom C	
_	Outdoor	Incandescent Hi	Fluor	escent Hi	

Set Tilt Direction

Tilt direction can also be normal or inverted. Set it according to what will be the most intuitive for the people most likely to be controlling the camera.

Web Tasks for Administrators: Configuring Network Settings

Things you can do on this screen:

- Specify time zone and NTP server
- Assign the camera's hostname
- Specify DHCP or static IP address
- Set up other networking information

You will only be able to enter the IP address, subnet mask, and gateway if you set IP Address to Static.

Note

DHCP is the default setting, but the camera will use the default address of 169.254.1.1 if no DHCP server is available.

	DATE & TIME SETTINGS		
Camera Controls	Device System Time	Wod Apr 12 02:15 LITC 2016	Detector
Camora Sottings	Automatic NTP Undating	Enabled	Reliesh
Califera Settings	Time Zone	Universal	
Streaming	NTP Server	pool.ntp.org	
Room Labels	Cancel Save		
Networking	NETWORK CONFIGURATION	DN .	
9	Hostname vaddio-robos	hot-uhd-D8-80-39-62-26-52	
Security			
	Ethernet Port (eth0:WAN	0	
Diagnostics	IP Address	,	
	O DHCP O Static		
System			
	MAC Address	D8:80:39:62:26:52	
Help	IP Address	10.10.100.170	
	Subnet Mask	255.255.255.0	
PA	Cotowow	10.10.100.254	

Specifying Time Zone and NTP Server

- 1. To make the time zone and NTP server editable, enable Automatic NTP Updating.
- 2. Select the desired time zone from the list.
- 3. If desired, specify the NTP server to use. Otherwise, use the default.

Web Tasks for Administrators: Adding Room Information to the Screen

To display your company name, conference room name and phone number, and the number for meeting hosts to call for in-house A/V support, enter this information on the Room Labels screen.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corporati Rm Tel 952-933-5735, Help Te	on, Board Room al 800-555-1212	
Camera Controls	ROOM LABELS		
	Company Name	Sirius Cybernetics Corporation	
Samera Settings	Room Name	Board Room	
	Room Phone Number	952-933-5735	
Streaming	Help Phone Number	800-555-1212	
Room Labels			

Web Tasks for Administrators: Managing Access and Passwords

Things you can do on this screen:

- Allow people to access the Camera Control screen without logging on (Allow Guest Access)
- Set whether inactive sessions log off automatically or not
- Change the password for the admin account (default is password)
- Change the password for the user account (default is password)

For security, Vaddio recommends changing the account passwords.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corporation, Board Room Rm Tel 952-933-5735, Help Tel 800-555-1212	
Camera Controls	SECURITY CONFIGURATION SESSION MANAGEMENT	
Samera Settings	Automatically Expire Idle Sessions	
Streaming	GUEST ACCESS	
Room Labels	ACCOUNT PASSWORDS	
Networking	admin Edit Password User Edit Password	
Security		

Web Tasks for Administrators: Setting Camera Behaviors and Adjustments

Things you can do on this screen:

- Set up the color settings the camera uses on power-up.
- Set up and name custom color/lighting settings.
- Set the pan, tilt, and zoom speeds that will be used when not using Tri-Synchronous Motion

Camera Controls	CCU SCENES		
	Custom A	Custom B	Custom C
Camera Settings	Auto	Incandescent Hi	Fluorescent Hi
	Outdoor	Incandescent Lo	Fluorescent Lo
Streaming	The second se		
	COLOR SETTINGS		
PROOM Labels	Auto Iris		
	Backlight Compe	nsation	
Networking	Detail (Shampess)		8
	Chroma (Saturation)		5
Security	Gamma		0
Disapositos	Store CCU Scene		
Diagnosucs			
System	CUSTOM CCU SCENE LA	BELS	
System	CUSTOM CCU SCENE LA	ABELS	
System	CUSTOM CCU SCENE LA Custom A Custom B	NBELS	
System Help	CUSTOM CCU SCENE LA Custom A Custom B Custom C	BELS	
System Help Logout	CUSTOM CCU SCENE LA Custom A Custom B Custom C	ABELS	
 Diagnostics System Help Logout 	CUSTOM CCU SCENE LA Custom A Custom B Custom C	NBELS	
System Help Logout	CUSTOM CCU SCENE LA Custom A Custom B Custom C GLOBAL PRESET NON-T Global Pan Speed	ABELS RI-SYNC SPEEDS	0 20
 Diagnostics System Help Logout 	CUSTOM CCU SCENE LA Custom A Custom B Custom C GLOBAL PRESET NON-T Global Pan Speed Global Till Speed	NBELS RI-SYNC SPEEDS	0 20 1 7
 Diagnostics System Help Logout 	CUSTOM CCU SCENE LA Custom A Custom B Custom C GLOBAL PRESET NON-T Global Pan Speed Global Tilt Speed Global Zoom Speed	NBELS RI-SYNC SPEEDS	0 20 0 17 0 7

Set Up what the Camera Does on Power-Up

To use a preset position instead of the default home position when the camera wakes up, check Load Preset at Startup. Then select the preset to use.

To specify the color and lighting settings, check Load CCU Scene at Startup, and select the CCU scene to use.

Set Up Custom Color and Lighting Settings

- 1. Click any of the CCU scene buttons to load one of the CCU scenes into the camera, then fine-tune it as needed using the Color Settings controls.
- 2. Auto Iris check this box to allow the camera to automatically compensate for the light level, or leave it unchecked and use the Iris and Gain sliders to make the desired adjustments.
- 3. Auto White Balance check this box to allow the camera to adjust the white balance automatically, or leave it unchecked and use the Red Gain and Blue Gain sliders to make the desired color adjustments.
- 4. Back Light Compensation (only available in Auto White Balance mode) check this box if the scene will have bright lighting behind the main subject of the shot.
- Detail adjust the slider as required for amount of detail (Aperture) desired.
 Note:

If the video looks grainy or "noisy," try a lower Detail setting. As in conversation, too much detail is bad.

- 6. Chroma adjust the slider as needed for the right level of color intensity.
- 7. Gamma adjust the slider as needed for the desired range between bright areas and shadows.
- 8. When the scene looks the way you want it to, click Store CCU Scene.
- 9. In the Store CCU Scene dialog box, select which custom scene to store (Custom A, B, or C) and optionally give it a descriptive name. You can rename it later if necessary.
- 10. Name and save your custom scene.

Note:

If you make a change that you don't like, you can start over by selecting Auto White Balance, and then deselecting it again.

Rename a Custom CCU Scene

In the Custom CCU Scene Labels section, edit the text for the desired CCU scene label.

Set Pan, Tilt, and Zoom Speeds

In the Global Preset Non-Tri-Sync Speeds section, set the speeds for movements to presets that do not use Tri-Synchronous Motion.

Web Tasks for Administrators: Configuring Streaming Settings

Things you can do on this screen:

- Enable or disable IP streaming
- Set the resolution, video quality, and frame rate for IP streaming
- Specify the IP streaming port and path/URL

The camera uses the RTSP protocol for H.264 streaming.

vaddio Robo SHOT 20 UHD	Sirius Cybernetics Corporation Rm Tel 952-933-5735, Help Te	m, Board Room 800-555-1212
Camera Controls	IP STREAMING GENERAL	
Samera Settings	Enable IP Streaming	C Enabled
Streaming	VIDEO SETTINGS Quality Mode	Easy Custom
Room Labels	Resolution Video Quality	1080p 🔻 High Quality (Best) 🔻
Networking	PROTOCOL	
Security	© RTSP STREAMING URL	RTSP Port 554
Diagnostics	Path URL	vaddio-roboshot-uhd-strea
System		
Help	Cancel Save	

Set IP Streaming Quality, Resolution, and Frame Rate

Select the video Quality Mode: Easy or Custom. Easy automatically sets the recommended frame rate; Custom provides additional control. You will only be able to specify the frame rate or Quality/Quantization if you select Custom Quality Mode.

Note

The web interface presents all the possible streaming resolutions values, but the IP stream cannot be higher than the value set with the video resolution switch on the back of the camera. (See <u>Video Resolution</u> for information on setting the switch.) If the selected value is out of range, the camera will automatically adjust the streaming resolution.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corporatio Rm Tel 952-933-5735, Help Tel	n, Board Room 800-555-1212
Camera Controls	IP STREAMING GENERAL	
Samera Settings	Enable IP Streaming	C Enabled
Streaming	VIDEO SETTINGS Quality Mode	Easy O Custom
Room Labels	Resolution Frame Rate	1080p v 15 v fps
Setworking	Quality (Quantization) PROTOCOL	15 25 30 60
Security	O RTSP	RTSP Port 554
Diagnostics	STREAMING URL Path	vaddio-roboshot-uhd-strea
System	URL	rtsp://10.10.100.170/vaddic
Help	Cancel Save	Unsaved

Web Tasks for Administrators: System Reboots, Resets, and Soft DIP Switch Configuration

Things you can do on this screen:

- Reboot the camera
- Set the camera back to its original factory settings
- Read (but not change) the current settings of the switches on the back of the camera
- Set the camera's soft DIP switches
- Run a firmware update

Vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corpor Rm Tel 952-933-5735, Help	ation, Board Room Tel 800-555-1212	
Camera Controls	SYSTEM INFORMATION	Robo SHOT UHD	1100.82
Camera Settings	Commit Pan Motor Version	a5f760b0f56060 0.3.6214	1069d2bca556c76902def4dfffc
Streaming	Tilt Motor Version Sensor Version	0.3.6214 01.20	
Room Labels	HDLink	TX4.6.1*0.01	
Networking	FIRMWARE UPDATE	-	
Security	Firmware File: Begin Firmware Update.	Choose File	No file chosen
Diagnostics	SYSTEM UTILITIES		
System	Reboot Restore F	actory Settings E	xport Data Import Data
i Help	SOFT DIP SWITCHES		

Reboot the Camera

This can help if the camera stops responding as you expect. In the System Utilities section, click Reboot.

Restore Factory Settings

Sometimes it's easiest to just start over. To restore the original factory settings...click Restore Factory Settings. This will overwrite anything you have customized, such as custom camera presets.

Integrator's Complete Guide to the RoboSHOT 20 UHD High Performance, Ultra High Definition PTZ Camera

Help 1) Logout	SOFT DIP SV	VITCHES Color YCbCr			3G Level A	
1) Logout		Color YCbCr			3G Level A	
Logout						
		Color sRGB			3G Level B	
	REAR DIP S	WITCHES				
	IR	1	IR On	Image Flip Off	BAUD 9600 bp	5
			-		-	
	SW1	SW2	swa	SW4	SW5	SW6
	ĨR 2	IR IR 3	IR Off	Image Flip On	BAUD 38400 bp	15
	REAR ROTA	RY SWITCH				
	1	80	0	1080p/59.94	8	2160p/29.97
	6	A	1	1080p/50	9	2160p/25
	5		3 2	1080/59.94	A	
	ST		3	1080050	В	
			4	1080p/29.97	C	
	C.		7 5	1080p/25	D	
	57	017	6	720p/59.94	E	

Set Color Space or HD-SDI 3G Level

Click and drag the appropriate soft DIP switch.

Note

Vaddio recommends leaving the soft DIP switches in their default positions unless you have verified that you need to change them.

Below the soft DIP switches, the screen shows the current state of the hardware switches on the camera's back panel. If you need to change any of the rear DIP switches or the rear rotary switch, you must physically move it. You cannot change the settings of the rear DIP switches or the rear rotary switch from the web interface.

Updating the Firmware

If you prefer more detail than this procedure, please refer to the Release Notes for step-by-step instructions with screen shots.

- 1. Locate and download the firmware and its release notes.
- 2. Select Choose File, then browse to the firmware that you downloaded and select it. The filename ends with .p7m.
- 3. Click Begin Firmware Update. The process may take a few minutes.

Caution

Ensure that the camera stays powered on and connected to the network during the update. Interrupting the update could make the camera unusable.

The camera reboots when the update is complete.

Web Tasks for Administrators: Contacting Vaddio Technical Support

If you can't resolve an issue using your troubleshooting skills (or the <u>Troubleshooting</u> table in this manual), we are here to help.

You'll find information for contacting Vaddio Technical Support on the Help screen.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corporation, Board Room Rm Tel 952-933-5735, Help Tel 800-555-1212		
Camera Controls	TECHNICAL SUPPORT		
Camera Settings	You can reach Vaddio technical support by calling: Direct: +1 (763) 971-4428		
Streaming	Toll Free: +1 (800) 572-2011 Fax: +1 (763) 971-4464		
Room Labels	Through email by sending your questions to: support@vaddio.com		
Networking	Or access support information directly on our web page at: http://help.vaddio.com/roboshot-20-uhd		
Security			

Web Tasks for Administrators: Viewing Diagnostic Logs

If you encounter a problem that you can't solve, your Vaddio technical support representative may ask you to download and email the log file available from the Diagnostics screen.

vaddio RoboSHOT 20 UHD	Sirius Cybernetics Corporation, Board Room Rm Tel 952-933-5735, Help Tel 800-555-1212	Logout
Camera Controls	DIAGNOSTICS	
Camera Settings	May 3 16:08:38 vaddio-roboshot-uhd-D8-80-39-82-26-52 root: Rotating /var/log/messages to /media/vng-logs/	
Streaming		
Room Labels		
Networking		
Security		
Diagnostics		
System		
i Help		
🕐 Logout		
	Downicau Renesti Cizal Restore	

Telnet Serial Command API

The Vaddio serial command protocol is a high-level, text-based command line interface supported via Telnet session on the camera. The API is accessed by a telnet client on the Ethernet port; the default Telnet port is 23. Telnet sessions require the administrator account login.

The command application protocol interface is intended to allow external device such as AMX or Crestron to control the camera. The protocol is based upon ASCII format following the VT100 terminal emulation standard and uses an intuitive text command nomenclature for ease of use.

General format usage follows a get/set structure. Usage examples for each type are: Set Example COMMAND: > camera pan right RESPONSE: > OK Get Example COMMAND: > camera ccu get iris RESPONSE: > iris 11 Syntax Error Example COMMAND: > camera right pan



Using a question mark as a command parameter will bring up a list of available commands for the menu you are in.

Things to know about control via Telnet session:

- Command lines are terminated with a carriage return.
- All ASCII characters (including carriage returns) are echoed to the terminal program and appended with the VT100 string ESC[J (hex 1B 5B 4A), which most terminal programs automatically strip.
- CTRL-5 Clears the current serial buffer on the device.

Typographical conventions:

RESPONSE: > ERROR

- {x | y | z} Choose x, y, or z.
- <variable> Substitute the desired value here.
- < x y > Valid range of values is from x through y.
- [optional] Parameter is not required.

camera home

Moves the camera to its home position.

Synopsis	camera home
Example	camera home

camera pan

Moves the camera horizontally

Synopsis	camera pan { left [<speed>] right [<speed>] stop }</speed></speed>		
Parameters and	left	Moves the camera left.	
Values	right	Moves the camera right.	
	<speed> 1 - 24</speed>	Optional – integer 1 - 24 specifies the speed for the commanded movement. Default speed is 12.	
	stop	Stops the camera's horizontal movement.	
Examples	camera pan left		
	Pans the camera left at the default speed.		
	camera pan right 20		
	Pans the camera right using a speed of 20.		
	camera pan stop		
	Stops the camera's horizontal motion.		

camera tilt

Moves the camera vertically.

Synopsis	camera tilt { up [<speed>] down [<speed>] stop }</speed></speed>		
Parameters and	up	Moves the camera up.	
Values	down	Moves the camera down.	
	<speed> 1 - 20</speed>	Optional - integer 1 - 20 specifies the speed for the commanded movement.	
		Default speed is 10.	
	stop	Stops the camera's vertical movement.	
Examples	camera tilt up		
	Tilts the camera up at the default speed.		
	camera tilt down 20		
	Tilts the camera down using a speed of 20.		
	camera tilt stop		
	Stops the camera's vertical motion.		

camera zoom

Synopsis	camera zoom { in [<speed>] out [<speed>] stop }</speed></speed>		
Parameters and	in	Moves the camera in.	
Values	out	Moves the camera out.	
	<speed> 1 - 7</speed>	Optional - integer 1 - 7 specifies the speed for the commanded movement. Default speed is 3.	
	stop	Stops the camera's zoom movement.	
Examples	camera zoom in		
	Zooms the camera in at the default speed.		
	camera zoom out 7		
	Zooms the camera out using a speed of 7.		
	camera zoom stop Stops the camera's zoom motion.		

Moves the camera in toward the subject or out away from the subject.
camera focus

Changes the camera focus.

Synopsis	camera focus {near [<speed>] far [<speed>] stop mode {auto manual get}}</speed></speed>		
Options and Values	near	Brings the focus nearer to the camera.	
		Can only be used when camera is in manual mode.	
	far	Moves the focus farther from the camera.	
		Can only be used when camera is in manual mode.	
	<speed> 1 - 8</speed>	Optional - integer 1 - 8 specifies the speed for the commanded movement.	
	<pre>mode {auto manual}</pre>	Specifies automatic or manual focus.	
	mode get	Returns the current focus mode (automatic or manual).	
	stop	Stops the camera's focus movement.	
Examples	camera focus near		
HVZDS	Brings the focus near at the default speed.		
NCVKD	camera focus far 7		
CZSHN ONVSR KDNRO ZKCSV DVONC	Moves the focus farther from the camera at a speed of 7.		
	camera focus mode auto		
	Sets the camera in auto-focus mode.		
	camera focus stop		
	Stops the camera's focus motion.		

camera preset

Moves the camera to the specified preset, or stores the current camera position and optionally CCU information, either with or without specifying that Tri-Synchronous Motion is to be used when moving to this position.

Note

This command corresponds to the CAM_Memory commands in the RS-232 command set.

Synopsis	camera preset { recall <1 - 16> s	tore <1 - 16> [tri-sync <speed>] [save-ccu]</speed>	
Parameters and Values	recall <1-16>	Moves the camera to the specified preset, using Tri-Synchronous Motion if this was saved with the preset. If CCU information was saved with the preset, the camera switches to the CCU setting associated with the preset.	
	store <1 - 16>	Stores the current camera position as the specified preset.	
	tri-sync <speed>1-24</speed>	Optional – specifies that the camera uses Tri-Synchronous Motion to move to this position, using the specified speed.	
	save-ccu	Optional – Saves the current CCU settings as part of the preset. If not specified, the last color settings are used when recalled.	
Examples	camera preset recall 3 Moves the camera to preset 3.		
	camera preset store 1 Saves the camera's current position as preset 1.		
	camera preset store 4 tri-sync 15 Stores the camera's current position as preset 4. The camera will use Tri- Synchronous Motion at speed 15 when it is recalled to this preset.		
	camera preset store 2 tri-sync 10 save-ccu Stores the camera's current position as preset 2. The camera apply the current CCU settings and use Tri-Synchronous Motion at speed 15 when it is recalled to this preset.		

camera ccu get

Returns or sets CCU (lighting) information.

Synopsis	camera ccu get <param/>		
Available Parameters	auto_white_balanco	9	Returns the current state of the auto white balance setting (on or off).
	red_gain		Returns the red gain value as an integer between 0 and 255.
	blue_gain		Returns the blue gain value as an integer between 0 and 255.
	backlight_ compensation		Returns the current state of the backlight compensation setting (on or off).
	iris		Returns the iris value as an integer between 0 and 11.
	auto_iris		Returns the current auto-iris state (on or off).
	gain		Returns the gain value as an integer between 0 and 11.
	detail		Returns the detail value as an integer between 0 and 15.
	chroma		Returns the chroma value as an integer between 0 and 14.
	all		Returns all current CCU settings.
Examples	camera ccu get iris		
	iris	11	
	Returns the current iris value.		
	camera ccu get re	d_gai:	n
	red_gain	201	
	Returns the current red g	gain val	ue.
	camera ccu get all		
	auto_iris	on	
	auto_white_balance	on	
	backlight_compensation	off	
	blue_gain	193	
	chroma	2	
	detail	8	
	gain	3	
	iris	9	
	red_gain	201	
	Returns all current CCU	setting	gs.

camera ccu set

Synopsis	camera ccu set <param/> <value></value>		
Parameters and Values	auto_white_balance{on off}	Sets the current state of the auto white balance setting (on or off). Auto white balance overrides red gain and blue gain manual settings.	
	red_gain <0-255>	Sets the red gain value. Valid range: integers 0 to 255. Can only be used when auto white balance is off.	
	blue_gain <0-255>	Sets the blue gain value. Valid range: integers 0 to 255. Can only be used when auto white balance is off.	
	<pre>backlight_compensation {on off}</pre>	Sets the current state of the backlight compensation setting (on or off).	
	iris <0-13>	Sets the iris value. Can only be used when auto-iris is off. Valid range is integers between 0 and 13.	
	auto_iris {on off}	Sets the auto-iris state (on or off). Auto-iris disables manual iris and gain when it is on.	
	gain <0-11>	Sets gain value. Valid range: integers 0 to 11. Can only be used when auto-iris is off.	
	detail <0-15>	Sets the detail value. Valid range: integers 0 to 15.	
	chroma <0-14>	Sets the chroma value. Valid range: integers 0 to 14.	
Examples	camera ccu set auto_iris off		
	Turns off auto-iris mode, returning the camera to manual iris control.		
	camera ccu set red_gain 10		
	Sets the red gain value to 10.		

Sets the specified CCU (lighting) information.

camera ccu scene

Synopsis	camera ccu scene {recall {factory <1 - 6> custom <1 - 3>} store custom <1 - 3>}	
Parameters and Values	recall {factory <1 - 6> custom <1 - 3>}	Recalls the camera to the specified scene (factory 1 - 6 or custom 1 - 3).
	store custom <1-3>	Saves the current scene as the specified custom scene.
Examples	camera ccu scene recall factory 2Sets the camera to use factory CCU scene 2.camera ccu scene store custom 1Saves the current CCU scene as custom CCU scene 1.	

Stores the current CCU scene or recalls the specified ccu scene.

video mute

Gets or sets the camera's video mute status. When video is muted, the camera sends black video with an on-screen message stating that video mute is on. This can be desirable when preparing the room or when privacy is needed.

Synopsis	video mute {get off on toggle}	
Parameters	get	Returns the current video mute status.
	off	Unmutes the video. Normal video resumes.
	on	Mutes the video. Black screen with message.
	toggle	Changes the camera's video mute status.
Examples	video mute get	
	mute: off	
	Returns video mute status.	
	video mute on	
	Transmits black video.	

camera standby

Set or change camera standby status.

Synopsis	camera standby { off on toggle}		
Parameters	off	Brings the camera out of standby (sleep) mode.	
	on	Stops video and puts the camera in standby mode.	
	toggle	Changes the camera's standby state - if it was not in standby mode, it enters standby; if it was in standby mode, it "wakes up."	
	get	Returns the camera's current standby state (on or off).	
Examples	camera standby off		
	Brings the camera out of standby mode.		
	camera standby on Puts the camera in standby mode.		

streaming settings get

Synopsis	streaming settin	streaming settings get		
Parameters and Values	ip_enabled {true false}		true indicates streaming is enabled; false indicates it is disabled.	
	ip_port <port< td=""><td>number></td><td>The port that the IP stream uses. Port 554 is typical.</td></port<>	number>	The port that the IP stream uses. Port 554 is typical.	
	ip_protocol {ftsp}		Specifies the streaming protocol. Only RTSP is supported at this time.	
	<pre>ip_quality {low standard high}</pre>		Specifies the video quality.	
	<pre>ip_resolution Valid resolution 1080p 720p 4cif 480p 640x480 360p cif ip_url <url></url></pre>	on <value> s:</value>	Specifies the streaming video resolution. Specifies the URL where the stream is	
			available.	
Examples	streaming so	ettings get		
	IP Enabled	true		
	IP Port	554		
	IP Protocol	RTSP		
	IP Quality High Quality (B		est)	
	IP Resolution	1080p		
	IP Url	P Url Lobby-conference		
	Returns the current streaming settings.			

Retrieves IP streaming settings. These are configured in the web interface.

network ping

Sends an ICMP ECHO_REQUEST to the specified IP address or hostname.

Synopsis	network ping [count <count>] [size <size>] <destination-ip></destination-ip></size></count>		
Parameters and Values	count <count></count>	The number of ECHO_REQUEST packets to send. If this is not specified, the default is five packets.	
	size <size></size>	The size of each ECHO_REQUEST packet. If this is not specified, the default is 56 bytes.	
	<destination-ip></destination-ip>	The IP address or hostname where the ECHO_REQUEST packets will be sent.	
Examples	network ping 192.168.1.1		
	Sends five ECHO_REQUEST packets of 56 bytes each to the host at 192.168.1.1.		
	network ping count 10 size 100 BoardroomCamControl Sends 10 ECHO_REQUEST packets of 100 bytes each to the device with the hostname BoardroomCamControl.		

network settings get

Returns the current network settings for mac addres, ip address, netmask, and gateway.

Synopsis	network settings get	
Example	network settings get	
	Name:	eth0:WAN
	MAC Address:	00:04:a3:85:0a:ee
	IP Address:	10.10.8.116
	Netmask:	255.255.255.0
	Gateway:	10.10.8.100

system reboot

Reboots the system either immediately or after the specified delay. Note that a reboot is required when resetting the system to factory defaults (system factory-reset).

Synopsis	system reboot [<seconds>]</seconds>	
Parameters	<pre><seconds> Optional – the number of seconds to delay the reboot.</seconds></pre>	
Examples	system reboot	
	Reboots the system immediately	
	system reboot 30	
	Reboots the system in 30 seconds.	

system factory-reset

Gets or sets the factory reset status. When the factory reset status is on, the system resets to factory defaults on reboot.

Synopsis	system factory-reset { get on off}		
Parameters	get	Returns the camera's current factory reset status.	
	on	Enables factory reset on reboot.	
	off	Disables factory reset on reboot.	
Examples	system factory-reset get		
	factory-reset (software):		
$\mathbf{\nabla}$	off		
	factory-reset (hardware):		
	off		
	Evaluates the most recent system factory-reset on or off command, if one has been received, and returns the software factory reset status.		
	Reads the rear panel DIP switches and returns the hardware reset Hardware reset status is on if all DIP switches are in the down pos system factory-reset on		
	factory-reset (software):		
	on		
	factory-reset (hardware)	:	
	off		
	Sets the software factory-reset status ON to enable factory reset upon reboot.		

history

Returns the most recently issued commands from the current Telnet session. Since many of the programs read user input a line at a time, the command history is used to keep track of these lines and recall historic information.

Synopsis	history [<limit>]</limit>			
Parameters	<limit></limit>	Optional – Integer value specifying the		
		maximum number of commands to return.		
Examples	history			
	Displays the current command bu	uffer.		
	history 5			
	Sets the history command buffer to remember the last 5 unique entries.			
Additional information	You can navigate the command history using the up and down arrow keys.			
	This command supports the expansion functionality from which previous commands can be recalled from within a single session. History expansion is performed immediately after a complete line is read.			
	Examples of history expansion:			
	* !! Substitute the last command line.			
	* !4 Substitute the 4th command line (absolute as per 'history' command).			
	* !-3 Substitute the command line entered 3 lines before (relative).			

version

Returns the current firmware version.

Synopsis	version		
Example	version		
	Commit: d033ddb2378357a871011eb820706dcaa64ec0e2		
Pan Motor Version: 0.2.4586			
	Tilt Motor Version: 0.2.4586		
Sensor Version: 02.00			
	System Version: RoboSHOT UHD 1.0.0		
	Returns current firmware version information.		

help

Displays an overview of the CLI syntax.

Synopsis	help
Example	help
	Tennet 10.10.24.34 > help CONTEXT SENSITIVE HELP [?] - Display context sensitive help. This is either a list of possible command completions with summaries, or the full syntax of the current command. A subsequent repeat of this key, when a command has been resolved, will display a detailed reference. AUTO-COMPLETION The following keys both

exit

Ends the command session and then does one of these two things:

- Telnet: Closes the socket.
- RS-232 serial: Automatically starts a new session.

Synopsis	exit
Example	exit

RS-232 Serial Communication

The RS-232 serial port (color-coded blue) near the center of the camera's back panel provides another means of controlling the camera.

Specification	Value
Communication Speed	9600 bps (default)
Number of start bits	1
Number of stop bits	1
Number of data bits	8
Parity	None
Flow control	None

Connector pin-out:

- Pin 1: Not used
- Pin 2: Not used
- Pin 3: Not used
- Pin 4: Not used
- Pin 5: Not used
- Pin 6: GND
- Pin 7: RXD (from TXD of control source)
- Pin 8: TXD (to RXD of control source)



Caution

Check Cat-5 cables for continuity before using them. Using the wrong pin-out may damage the camera system and void the warranty.

The Vaddio RoboSHOT Control Protocol is similar to the Sony[®] VISCA command set in order to be compatible with several popular control devices. Not all VISCA commands are supported and there are Vaddio-specific commands in the following command and inquiry lists.

RS-232 Command List

Most of these commands are common to all RoboSHOT series cameras. Some have different value ranges depending on the camera.

Command Set	Command	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Sets address for all daisy- chained cameras
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CommandCancel		8x 2p FF	p= Socket No.(1-2)
CAM_Power	On	8x 01 04 00 02 FF	Power on
	Off	8x 01 04 00 03 FF	Power off
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(std)	8x 01 04 07 02 FF	
	Wide(std)	8x 01 04 07 03 FF	
	Tele(variable)	8x 01 04 07 2p FF	p= speed 0:low to 7:high
	Wide(variable)	8x 01 04 07 3p FF	p= speed 0:low to 7:high
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs=Zoom Position (0h-4000h)
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far (std)	8x 01 04 08 02 FF	
	Near (std)	8x 01 04 08 03 FF	
	Far (variable)	8x 01 04 08 2p FF	p= speed 0:low to 7:high
	Near (variable)	8x 01 04 08 3p FF	p= speed 0:low to 7:high
	Direct	8x 01 04 48 0p 0q 0r 0s FF	pqrs=Focus Position (1000h – F000h)
	Auto Focus	8x 01 04 38 02 FF	
	Manual Focus	8x 01 04 38 03 FF	
	Auto/Manual	8x 01 04 08 10 FF	
	One Push Trigger	8x 01 04 18 01 FF	One push AF Trigger
	Near Limit	8x 01 04 28 0p 0q 0r 0s FF	pqrs=Near focus Limit***
CAM_AFSensitivity	Normal	8x 01 04 58 02 FF	AF Sensitivity High / Low
	Low	8x 01 04 58 03 FF	
CAM_AFMode	Normal AF	8x 01 04 57 00 FF	AF movement mode
	Internal AF	8x 01 04 57 01 FF	
	Zoom Trigger AF	8x 01 04 57 02 FF	
	Activate/Internal Time	8x 01 04 27 0p 0q 0r 0s FF	pqrs=movement time, rs=Interval

Command Set	Command	Command Packet	Comments
CAM_IRCorrection	Standard	8x 01 04 11 00 FF	Focus IR compensation data
	IR light	8x 01 04 11 01 FF	switching
CAM_ZoomFocus	Direct	8x 01 04 47 0p 0q 0r 0s 0t 0u 0v 0w FF	pqrs=Zoom Position RoboSHOT 12 and RoboSHOT 20 UHD: (0h – 4000h) RoboSHOT 30: (0h - 7AC0h) tuvw=Focus Position (1000h – F000h)
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor	8x 01 04 35 01 FF	Indoor mode
	Outdoor	8x 01 04 35 02 FF	Outdoor mode
	One Push WB	8x 01 04 35 03 FF	One Push WB mode
	ATW	8x 01 04 35 04 FF	Auto Tracing White Balance
	Manual	8x 01 04 35 05 FF	Manual Control mode
	One Push Trigger	8x 01 04 10 05 FF	One Push WB Trigger
	Outdoor Auto	8x 01 04 35 06 FF	Outdoor auto
	Sodium Lamp Auto	8x 01 04 35 07 FF	Auto including sodium lamp source
	Sodium Lamp	8x 01 04 35 08 FF	Sodium lamp source fixed mode
	Sodium Lamp Outdoor Auto	8x 01 04 35 09 FF	Outdoor auto including sodium lamp source
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual control of red gain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq=Red gain (00h – FFh)
CAM_BGain	Reset	8x 01 04 04 00 FF	Manual control of blue gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq=Blue gain (00h – FFh)
CAM_AE	Full Auto	8x 01 04 39 00 FF	Auto Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter Priority	8x 01 04 39 0A FF	Shutter Priority Auto Exposure mode
	Iris Priority	8x 01 04 39 0B FF	Iris Priority Auto Exposure Mode
	Bright	8x 01 04 39 0D FF	Bright Mode (modified AE mode)

Command Set	Command	Command Packet	Comments
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation On
	Off	8x 01 04 3E 03 FF	Exposure Compensation Off
	Reset	8x 01 04 0E 00 FF	
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq=ExpComp Position(0h-0Eh) See <u>Exposure Compensation</u> <u>Settings</u> for setting values
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq=Shutter Position (00h – 15h) See <u>Shutter Speed Settings</u> for setting values.
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq=Iris Position RoboSHOT 12: (0h, 07h-11h) RoboSHOT 30 and RoboSHOT 20 UHD: (0h, 05h-11h) See <u>Iris Position Values</u> for setting values
CAM_Gain	Reset	8x 01 04 0C 00 FF	Iris Gain Setting
	Up	8x 01 04 0C 02 FF	pq=Gain Position (01h – 0Fh)
	Down	8x 01 04 0C 03 FF	p= Gain limit (04n-0Fn)
	Direct	8x 01 04 4C 00 00 0p 0q FF	Iris Gain Values for setting
	+Gain Limit	8x 01 04 2C 0p FF	values.
CAM_Bright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
CAM_BackLight	On	8x 01 04 33 02 FF	Backlight Compensation On/Off
	Off	8x 01 04 33 03 FF	
CAM_Tally	On	8x 01 7E 01 0A 00 02 FF	
	Off	8x 01 7E 01 0A 00 03 FF	

Command Set	Command	Command Packet	Comments
CAM_WD	On	8x 01 04 3D 02 FF	WD On
	Off	8x 01 04 3D 03 FF	WD Off
	VE On	8x 01 04 3D 06 FF	VE On
	Set Parameter	8x 01 04 2D 00 0q 0r 0s 00 00 00 00 FF	q=Display brightness (0 Dark – 6 Bright)
			r=Brightness compensation (0: Very dark, 1: Dark, 2: std, 3:
			s=Compensation level (0: Low, 1: Mid, 2: High)
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Setting
	Up	8x 01 04 02 01 FF	
	Down	8x 01 04 02 02 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq=Aperture Position (0h-0fh)
CAM_HR	On	8x 01 04 52 02 FF	High Resolution Mode On/Off
	Off	8x 01 04 52 03 FF	
CAM_NR		8x 01 04 53 0p FF	p= Noise Reduction level (0:Off,1-5)
CAM_Gamma		8x 01 04 5B 0p FF	p= Gamma setting (0:std,1:Straight)
CAM_LR_Reverse	On	8x 01 04 61 02 FF	LR Reverse On/Off (mirror)
	Off	8x 01 04 61 03 FF	
CAM_Freeze	On	8x 01 04 62 02 FF	Freeze On/Off
	Off	8x 01 04 62 03 FF	
CAM_PictureEffect	Off	8x 01 04 63 00 FF	Picture Effect Setting
	Neg.Art	8x 01 04 63 02 FF	
	Black & White	8x 01 04 63 04 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image-Flip On/Off
	Off	8x 01 04 66 03 FF	
CAM_ICR	On	8x 01 04 01 02 FF	ICR Mode On/Off - adds an IR
	Off	8x 01 04 01 03 FF	images
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs=Camera ID (0h-ffffh)

Command Set	Command	Command Packet	Comments
CAM_Memory	Reset	8x 01 04 3F 00 0p FF	Note
	Set standard	8x 01 04 3F 01 0p FF	These commands correspond to
	Set standard with 'scene'	8x 01 04 3F 21 0p FF	commands.
	Set Tri-sync	8x 01 04 3F 11 0p 0q 0r FF	p= preset number(0h-0fh)
	Set Tri-Sync with 'scene'	8x 01 04 3F 31 0p 0q 0r FF	qr= Speed(01h-18h)
	Recall	8x 01 04 3F 02 0p FF	
Cam_Display	On	8x 01 04 15 02 FF	Display On/Off
	Off	8x 01 04 15 03 FF	
	On/Off	8x 01 04 15 10 FF	
Cam_Mute	On	8x 01 04 75 02 FF	Mute On/Off
	Off	8x 01 04 75 03 FF	
	On/Off	8x 01 04 75 10 FF	
CAM_ColorEnhance	Parameter Set	8x 01 04 20 mm 00 pp	mm: Threshold level
		qq rr ss tt uu FF	pp: Y fixed color for high-intensity
			qq: Cr fixed color for high- intensity
			rr: Cb fixed color for high- intensity
			ss: Y fixed color for low-intensity
			tt: Cr fixed color for low-intensity
			uu: Cb fixed color for low- intensity
			Each parameter setting 00h to 7Fh
	On	8x 01 04 50 02 FF	Color Enhancement On/Off
	Off	8x 01 04 50 03 FF	
CAM_ ChromaSuppress		8x 01 04 5F pp FF	pp: Chroma Suppress level 00: Off
			01h to 03h: On (3 levels; larger number = larger effect)
CAM_ColorGain	Direct	8x 01 04 49 00 00 00 0p FF	p: Color Gain Setting 0h to 4h
CAM_ColorHue	Direct	8x 01 04 4F 00 00 00 0p FF	p: Color Hue Setting 0h (-14 degrees) to Eh (+14 degrees)
CAM_GammaOffset	Direct	8x 01 04 1E 00 00 00 0s 0t 0u FF	s: Polarity offset (0 is plus, 1 is minus) tu: RoboSHOT 12 – Offset s=0 (00h

Command Set	Command	Command Packet	Comments
			to 10h) RoboSHOT 30 – Offset s=1 (00h to 40h)
Pan-TiltDrive	Up	8x 01 06 01 vv ww 03 01 FF	vv= Pan speed (01h-18h)
	Down	8x 01 06 01 vv ww 03 02 FF	ww=Tilt speed (01h-14h)
	Left	8x 01 06 01 vv ww 01 03 FF	
	Right	8x 01 06 01 vv ww 02 03 FF	
	UpLeft	8x 01 06 01 vv ww 01 01 FF	
	UpRight	8x 01 06 01 vv ww 02 01 FF	
	DownLeft	8x 01 06 01 vv ww 01 02 FF	
	DownRight	8x 01 06 01 vv ww 02 02 FF	
	Stop	8x 01 06 01 vv ww 03 03 FF	
	Absolute Position	8x 01 06 02 vv ww 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	0Y0Y0Y0Y = Pan position (90E2h-6BD8h) 0Z0Z0Z0Z = Tilt position
	Home	8x 01 06 04 FF	Returns the camera to its default position
Pan-Tilt-ZoomDrive	Up	8x 01 06 0A vv ww rr 03 01 03 FF	vv= Pan speed (01h-18h) ww=Tilt speed (01h-14h)
	Down	8x 01 06 0A vv ww m 03 02 03 FF	rr=Zoom speed (00h-07h)
	Left	8x 01 06 0A vv ww m 01 03 03 FF	
	Right	8x 01 06 0A vv ww rr 02 03 03 FF	
	In	8x 01 06 0A vv ww m 03 03 01 FF	

Command Set	Command	Command Packet	Comments
	Out	8x 01 06 0A vv ww rr 03 03 02 FF	
	Stop	8x 01 06 0A vv ww rr 03 03 03 FF	
	Absolute Position	8x 01 06 0B vv ww 0Y 0Y 0Y 0Y	0Y0Y0Y0Y = Pan position (90E2h-6BD8h)
		0Z 0Z 0Z 0Z 0R 0R 0R 0R FF	0Z0Z0Z0Z = Tilt position (EB99h-3D59h)
			0R0R0R0R = Zoom position
			RoboSHOT 12: 0000h-4000h
			RoboSHOT 30 and RoboSHOT 20 UHD: 0000h-7AC0h
	Home	8x 01 06 0C FF	Returns the camera to the default position and zoom
CAM_PTZ_		8x 01 7e 01 0b pp qq rr FF	pp:pan speed (01h-18h),
PresetSpeed			qq:tilt speed (01h-14h),
			rr:zoom speed (0h-07h)
			Applies only if Tri-Synchronous Motion is not used.

Command Setting Values

Valid settings for these commands:

- CAM_ExpComp
- CAM_Shutter
- CAM_Iris
- CAM_Gain

Exposure Compensation

Command: CAM_ExpComp

Value	Iris	Gain
0x0E	+7	+10.5 dB
0x0D	+6	+9 dB
0x0C	+5	+7.5 dB
0x0B	+4	+6 dB
0x0A	+3	+4.5 dB
0x09	+2	+3 dB
0x08	+1	+1.5 dB
0x07	0	0 dB
0x06	-1	-1.5 dB
0x05	-2	-3 dB
0x04	-3	-4.5 dB
0x03	-4	-6 dB
0x02	-5	-7.5 dB
0x01	-6	-9 dB
0x00	-7	-10.5 dB

Shutter Speed Values

Command: CAM_Shutter

Value	60/59.94/30/29.97	50/25
0x15	1/10000	1/10000
0x14	1/6000	1/6000
0x13	1/4000	1/3500
0x12	1/3000	1/2500
0x11	1/2000	1/1750
0x10	1/1500	1/1250
0x0F	1/1000	1/1000
0x0E	1/725	1/600
0x0D	1/500	1/425
0x0C	1/350	1/300
0x0B	1/250	1/215
0x0A	1/180	1/150
0x09	1/125	1/120
0x08	1/100	1/100
0x07	1/90	1/75
0x06	1/60	1/50
0x05	1/30	1/25
0x04	1/15	1/12
0x03	1/8	1/6
0x02	1/4	1/3
0x01	1/2	1/2
0x00	1/1	1/1

Iris Position Values

Command: CAM_Iris

Value	RoboSHOT 20 UHD
0x11	F1.8
0x10	F2
0x0F	F2.4
0x0E	F2.8
0x0D	F3.4
0x0C	F4
0x0B	F4.8
0x0A	F5.6
0x09	F6.8
0x08	F8
0x07	F9.6
0x06	F11
0x05	F14
0x00	CLOSE

Integrator's Complete Guide to the RoboSHOT 20 UHD High Performance, Ultra High Definition PTZ Camera

Iris Gain Values

Command: CAM_Gain

Value	Gain
0x10	45 dB
0x0F	42 dB
0x0E	39 dB
0x0D	36 dB
0x0C	33 dB
0x0B	30 dB
0x0A	27 dB
0x09	24 dB
0x08	21 dB
0x07	18 dB
0x06	15 dB
0x05	12 dB
0x04	9 dB
0x03	6 dB
0x02	3 dB
0x01	0 dB

Note

Values 0D to 10 can be set only when the high-sensitivity mode is ON. By default, it is off at powerup/reboot.

Iris Gain Limit Values

Command: CAM_Gain

Value	High Sensitivity Off	High Sensitivity On
0x0C	33 dB	45 dB
0x0B	30 dB	42 dB
0x0A	27 dB	39 dB
0x09	24 dB	36 dB
0x08	21 dB	33 dB
0x07	18 dB	30 dB
0x06	15 dB	27 dB
0x05	12 dB	24 dB
0x04	9 dB	21 dB

RS-232 Inquiry Command List

Inquiry Command	Command	Response Packet Comments		
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On	
		y0 50 03 FF	Off (Standby)	
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position	
CAM_FocusModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus	
		y0 50 03 FF	Manual Focus	
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position	
CAM_ FocusNearLimitInq	8x 09 04 28 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Near Limit Position	
CAM_	8x 09 04 58 FF	y0 50 02 FF	AF Sensitivity Normal	
AFSensitivityInq		y0 50 03 FF	AF Sensitivity Low	
CAM_AFModeInq	8x 09 04 57 FF	y0 50 00 FF	Normal AF	
		y0 50 01 FF	Interval AF	
		y0 50 02 FF	Zoom Trigger AF	
CAM_ AFTimeSettingInq	8x 09 04 27 FF	y0 50 0p 0q 0r 0s FF	pq: Movement Time, rs: Interval	
CAM_	8x 09 04 11 FF	y0 50 00 FF	Standard	
IRCorrectionInq		y0 50 01 FF	IR Light	
CAM_WBModeInq	8x 09 04 35 FF	y0 50 00 FF	Auto	
		y0 50 01 FF	Indoor	
		y0 50 02 FF	Outdoor	
		y0 50 03 FF	One Push WB	
		y0 50 04 FF	ATW	
		y0 50 05 FF	Manual	
		y0 50 06 FF	Outdoor Auto	
		y0 50 07 FF	Sodium Lamp Auto	
		y0 50 08 FF	Sodium Lamp	
		y0 50 09 FF	Sodium Lamp Outdoor Auto	
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain	
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain	
CAM_AEModeInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto	
		y0 50 03 FF	Manual	
		y0 50 0A FF	Shutter Priority	
		y0 50 0B FF	Iris Priority	
		y0 50 0D FF	Bright	

Inquiry Command	Command	Response Packet	Comments
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_GainPosInq	8x 09 04 4C FF	y0 50 00 00 0p 0q FF	pq: Gain Position
CAM_GainLimitInq	8x 09 04 2C FF	y0 50 0q FF	p: Gain Limit
CAM_	8x 09 04 3E FF	y0 50 02 FF	On
ExpCompModeInq		y0 50 03 FF	Off
CAM_ ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_	8x 09 04 33 FF	y0 50 02 FF	On
BackLightModeInq		y0 50 03 FF	Off
CAM_TallyInq	8x 09 7E 01 0A FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_	8x 09 04 59 FF	y0 50 02 FF	On
SpotAEModeInq		y0 50 03 FF	Off
CAM_SpotAEPosInq	8x 09 04 29 FF	y0 50 0p 0q 0r 0s FF	pq: X Position, rs: Y Position
CAM_WDModeInq	8x 09 04 3D FF	y0 50 02 FF	On
		y0 50 03 FF	Off
		y0 50 06 FF	VE On
CAM_ WDParameterInq	8x 09 04 2D FF	y0 50 00 0q 0r 0s 0t 0u 00 00 FF	q: Display brightness level (0: Dark to 6: Bright)
			r: Brightness compensation selection (0: Very dark,
			1: Dark, 2: Standard, 3: Bright)
			s: Compensation level (00h: Low, 01h: Mid, 02h: High)
			tu: Always 0
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_HRModeInq	8x 09 04 52 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_NRInq	8x 09 04 53 FF	y0 50 0p FF	Noise Reduction p: 00h to 05h
CAM_GammaInq	8x 09 04 5B FF	y0 50 0p FF	Gamma p: 00h , 01h
CAM_LR_	8x 09 04 61 FF	y0 50 02 FF	On (mirror)
ReverseModeInq		y0 50 03 FF	Off
CAM_FreezeModeInq	8x 09 04 62 FF	y0 50 02 FF	On
		y0 50 03 FF	Off

Inquiry Command	Command	Response Packet	Comments
CAM_	8x 09 04 63 FF	y0 50 00 FF	Off
PictureEffectModeInq		y0 50 02 FF	Neg. Art
		y0 50 04 FF	Black & White
CAM_	8x 09 04 66 FF	y0 50 02 FF	On
PictureFlipModeInq		y0 50 03 FF	Off
CAM_ICRModeInq	8x 09 04 01 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_MemoryInq	8x 09 04 3F FF	y0 50 pp FF	pp: Memory number recalled last
CAM_ MemoryStatusInq	8x 09 04 3F 0p FF	y0 50 0p 0q 0r 0s FF	p: Memory number q: mode (00-std, 10-std /w ccu, 01-trisync,11-trisyc /w ccu) rs: speed (0x1-0x18) 1 - 24
CAM_MemSaveInq	8x 09 04 23 0X FF	y0 50 0p 0q 0r 0s FF	X: 00h to 07h (Address) pqrs: 0000h to FFFFh (Data)
CAM_	8x 09 04 15 FF	y0 50 02 FF	On
DisplayModeInq	(8x 09 06 06 FF)	y0 50 03 FF	Off
CAM_MuteModeInq	8x 09 04 75 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID
CAM_VersionInq	8x 09 00 02 FF	y0 50 00 10	mnpq: Model Code
		mn pq 0E 0E 02 FF	
Vaddio_ModelInq	8x 09 08 0e FF	y0 50 05 00 00 00 00 FF	RoboSHOT 12
		y0 50 05 01 00 00 00 FF	RoboSHOT 30
		y0 50 05 02 00 00 00 FF	RoboSHOT 12 USB
		y0 50 05 04 00 00 00 FF	RoboSHOT 12 HDMI
		y0 50 05 05 00 00 00 FF	RoboSHOT 30 HDMI
		y0 50 05 06 00 00 00 FF	RoboSHOT 12 HD-SDI
		y0 50 05 07 00 00 00 FF	RoboSHOT 30 HD-SDI
		y0 50 06 01 00 00 00 FF	RoboSHOT 20 UHD
CAM_ RegisterValueInq	8x 09 04 24 mm FF	y0 50 0p 0p FF	mm: Register No. (=00h to 7Fh) pp: Register Value (=00h to FFh)
CAM_ ColorEnhanceInq	8x 09 04 20 FF	y0 50 mm 00 pp qq rr ss tt uu FF	mm: Threshold level pp: Y fixed color for high-intensity qq: Cr fixed color for high-intensity rr: Cb fixed color for high-intensity ss: Y fixed color for low-intensity tt: Cr fixed color for low-intensity

Inquiry Command	Command	Response Packet	Comments
			uu: Cb fixed color for low-intensity
	8x 09 04 50 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ ChromaSuppressInq	8x 09 04 5F FF	y0 50 pp FF	pp: Chroma Suppress setting level
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: Color Gain Setting 0h to 4h
CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	p: Color Hue Setting 0h (- 14 degrees) to Eh (+ 14degrees)
CAM_TempInq	8x 09 04 68 FF	Y0 50 00 00 0p 0q FF	pq: Lens Temperature
CAM_ GammaOffsetInq	8x 09 04 1E FF	y0 50 00 00 00 0s 0t 0u FF	s: Polarity offset (0 is plus, 1 is minus) tu: Offset s=0 (00h to 40h) Offset s=1 (00h to 10h)
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	wwww= Pan position zzzz=Tilt Position

Specifications

Video and Image

Outputs/protocols	HDMI,	, HDBT, HD-SDI, IP (H.264) As		Aspect ratio	HDMI: 16:9 (all resolutions)	
					IP (H.264) Streaming: 16:9,	
				3:2, 4:3		
HDMI	QFHD	: 2160p/30/25 (3840 x 2160)		3Gb/s HD-SDI	FHD:	
resolutions/frame	FHD: '	1080p/59.94/50/29.97/25,		resolutions/frame	1080p/59.94/50/29.97/25,	
rates	1080i/	59.94/50		rates	1080i/59.94/50	
	HD: 72	20p/59.94/50			HD: 720p/59.94/50	
Streaming	Simult	aneous IP (RTSP format with I	1.264 (compression) up to 108	30p/30	
Camera						
Image device		1/2.3-Type Exmor R High-speed, Low-noise CMOS Sensor				
Pixels		9.03 Megapixels Total, 8.93 E	9.03 Megapixels Total, 8.93 Effective Megapixels			
Zoom		12X optical zoom, 1.67X digital zoom; combined total 20X zoom				
Minimum illuminati	on	3.0 lx (F1.8, 50IRE) color; rec	omme	ommended 100+ lux		
Horizontal FOV		74° (wide) to 4.8° (tele)	Min. working distance		10 mm (wide), 1500 mm (tele)	
Pan angle and speed		±160°, 0.35°/sec to 120°/sec	Tilt a	ingle and speed	+90, -30°, 0.35°/sec to	
					120°/sec	
Gain		Auto / Manual (0 to 33 dB)	Aperture/detail		16 Steps	
Focusing system		Auto Focus / Manual Focus N	lode / (One Push Trigger Mod	le	
White balance		Auto, ATW, Indoor, Outdoor, O	One-p	ush, Manual		
Backlight compens	sation	On/off	Syno	c system	Internal	
Noise reduction		6 steps	S/N ratio		Over 50 dB	
Control and		Vaddio IR Remote Commander, web interface, Telnet, RS-232 API (modified VISCA)				
management						
Power		12 VDC, 3.0 Amp power supply; LTPoE++				
Physical and Environmental						

Height	7.9 in (200 mm)	Operating temperatute	-5 °C to +60°C (23°F to 140°F)
Width	8.0 in (203 mm)	Operating humidity	20% to 80% RH (non-condensing)
Depth	7.7 in (196 mm)	Storage temperature	-20° to +60° C (-4°F to 140°F)
Weight	6 lbs (2.7 kg)	Storage humidity	20% to 95% RH (non-condensing)

Troubleshooting and Care

When the camera doesn't behave as you expect, check the color of the indicator light on the front before you do anything else.

- Purple booting or in standby (low power) mode.
- Blue normal operation.
- Blinking blue the camera has received a valid IR command.
- Red Tally function; the camera is on-air.
- Blinking red fault condition.
- Yellow firmware update in progress.
- Off no power to the camera.

Stuff happens – we get it. Use this table to determine whether it's time to call Vaddio Technical Support.

What is it doing?	Possible causes	Check and correct
Nothing. The light on the front is off.	At least one of the cables is bad.	Check using known good cables.
	If a OneLINK extension system is used: The camera is not connected to the OneLINK.	Plug the OneLINK into the camera.
	If a OneLINK extension system is used: The OneLINK system is not working properly.	Disconnect the OneLINK and connect the camera directly to the 12V power pack that was shipped with it to determine where the problem is. If the camera works without the OneLINK system, the OneLINK is had
		Contact your reseller or Vaddio Technical Support.
	The wall outlet is not active. (Check by finding out if it powers something else, such as a laptop or phone charger.)	Use a different outlet.
	The camera or its power supply is bad.	Contact your reseller or Vaddio Technical Support.
The camera is not responding to the remote and the light is yellow.	A firmware update is in progress.	Wait a few minutes, and try again when the light turns blue.
The camera does not respond to the remote, but the web interface is available	The remote is not using the same IR channel as the camera.	Push the Camera Select 1 button on the remote. Try the other Camera Select buttons if necessary.
	IR is switched off (DIP switch 3 down)	Turn IR on (DIP switch 3 up) - see Camera Settings for more information.
	The batteries in the remote are dead.	Put new batteries in the remote.
The camera responds to the remote but the web interface is not available.	The camera is not using the IP address you browsed to.	Press the Data Screen button on the remote to see camera information.

What is it doing?	Possible causes	Check and correct
	The web interface has stopped responding.	Reboot the camera.
The camera's web UI is available but the camera does not respond to commands via RS-232 connection.	The RS-232 cable is not connected, or is bad.	Connect a known good cable.
	The camera's RS-232 settings don't match the settings on the controlling device.	Check the settings at both ends to be sure they match. The camera's current settings can be viewed on the System page in the web UI.
		Correct the settings where it's more convenient to do so.
The camera loses all its settings when power is cycled.	All the DIP switches are in the ON (down) position.	Set the DIP switches to their proper positions. Default is all OFF (up). See <u>Switch Settings</u> for more information.
No H.264 video stream.	Streaming is not enabled.	Enable streaming: Streaming page in the web interface.
The video stream displays poorly - for example, there is a jagged band where the image is not displayed	The stream requires more bandwidth than is available to the viewer.	Reduce the streaming resolution.

Operation, Storage, and Care

For smears or smudges on the product, wipe with a clean, soft cloth. Use a lens cleaner on the lens. Do not use any abrasive chemicals.

Keep this device away from food and liquids.

- Do not operate or store the device under any of the following conditions:
- Temperatures above 40°C (104°F) or below 0°C (32°F)
- High humidity, condensing or wet environments
- Inclement weather
- Severe vibration
- Between converging tectonic plates
- Dry environments with an excess of static discharge

Do not attempt to take this product apart. There are no user-serviceable components inside.

Compliance Statements and Declarations of Conformity

Compliance testing was performed to the following regulations:

FCC Part 15 (15.107, 15.109), Subpart B	Class A
ICES-003, Issue 54: 2012	Class A
EMC Directive 2004/108/EC	Class A
EN 55022: December 2010	Class A
EN 55024: November 2010	Class A
KN22 2008 (CISPR 22: 2006)	Class A
KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002)	Class A
IEC 60950-1:2005 (2nd Edition); Am 1: 2009 + Am 2: 2013	Safety
EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013	Safety

FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by Vaddio can affect emission compliance and could void the user's authority to operate this equipment.

ICES-003 Compliance

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'emet pas de bruits radioélectriques dépassant les limites applicables aux appareils numeriques de la classe A

préscrites dans le Règlement sur le brouillage radioélectrique édicte par le ministère des Communications du Canada.



Industrie

Canada

Industry

Canada

European Compliance

This product has been evaluated for electromagnetic compatibility under the EMC Directive for Emissions and Immunity and meets the requirements for a Class A digital device. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. Standard(s) To Which Conformity Is Declared:

EMC Directive 2004/108/EC EN 55022: December 2010 EN 55024: November 2010 EN 61000-4-2: 1995 + Amendments A1: 1998 + A2: 2001 EN 61000-4-3: 2006 + A1: 2008 EN 61000-4-4: 2004 + Corrigendum 2006 EN 61000-4-5: 2006 EN 61000-4-6: 2009 EN 61000-4-8: 2010

EN 61000-4-11: 2004

KN22 2008 (CISPR 22: 2006) KN24 2008 (CISPR 24: 1997 + A1: 2000 + A2: 2002) EN 61000-4-2 EN 61000-4-3 EN 61000-4-4 EN 61000-4-5 EN 61000-4-6 EN 61000-4-8 EN 61000-4-11

IEC 60950-1: 2005 (2nd Edition); Am 1: 2009 + Am 2: 2013 EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

Conducted and Radiated Emissions Immunity Electrostatic Discharge Radiated Immunity **Electrical Fast Transients** Surge Immunity Conducted Immunity Power Frequency Magnetic Field Voltage Dips, Interrupts and Fluctuations Conducted and Radiated Emissions **IT Immunity Characteristics** Electrostatic Discharge Radiated Immunity Electrical Fast Transients Surge Immunity Conducted Immunity Power Frequency Magnetic Field Voltage Dips, Interrupts and Fluctuations Safety Safety

65

Warranty Information

See Vaddio Warranty, Service and Return Policies posted on <u>support.vaddio.com</u> for complete details.

Hardware* warranty: Two (2) year limited warranty on all parts and labor for Vaddio manufactured products. Vaddio warrants its manufactured products against defects in materials and workmanship for a period of two years from the day of purchase, to the original purchaser, if Vaddio receives notice of such defects during the warranty. Vaddio, at its option, will repair or replace products that prove to be defective. Vaddio manufactures its hardware products from parts and components that are new or equivalent to new in accordance with industry standard practices.

Exclusions: The above warranty shall not apply to defects resulting from improper or inadequate maintenance by the customer, customers applied software or interfacing, unauthorized modifications or misuse, mishandling, operation outside the normal environmental specifications for the product, use of the incorrect power supply, modified power supply or improper site operation and maintenance. OEM and special order products manufactured by other companies are excluded and are covered by the manufacturer's warranty.

Vaddio Customer Service: Vaddio will test, repair, or replace the product or products without charge if the unit is under warranty. If the product is out of warranty, Vaddio will test then repair the product or products. The cost of parts and labor charge will be estimated by a technician and confirmed by the customer prior to repair. All components must be returned for testing as a complete unit. Vaddio will not accept responsibility for shipment after it has left the premises.

Vaddio Technical Support: Vaddio technicians will determine and discuss with the customer the criteria for repair costs and/or replacement. Vaddio Technical Support can be contacted by email at support@vaddio.com or by phone at one of the phone numbers listed on support.vaddio.com.

Return Material Authorization (RMA) number: Before returning a product for repair or replacement request an RMA from Vaddio's technical support. Provide the technician with a return phone number, e-mail address, shipping address, product serial numbers and original purchase order number. Describe the reason for repairs or returns as well as the date of purchase. See the General RMA Terms and Procedures section for more information. RMAs are valid for 30 days and will be issued to Vaddio dealers only. End users must return products through Vaddio dealers. Include the assigned RMA number in all correspondence with Vaddio. Write the assigned RMA number clearly on the shipping label of the box when returning the product. All products returned for credit are subject to a restocking charge without exception. Special order product are not returnable.

Voided varranty: The warranty does not apply if the original serial number has been removed or if the product has been disassembled or damaged through misuse, accident, modifications, use of incorrect power supply, use of a modified power supply or unauthorized repair.

Shipping and handling: Vaddio will not pay for inbound shipping transportation or insurance charges or accept any responsibility for laws and ordinances from inbound transit. Vaddio will pay for outbound shipping, transportation, and insurance charges for all items under warranty but will not assume responsibility for loss and/or damage by the outbound freight carrier. If the return shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

Products not under warranty: Payment arrangements are required before outbound shipment for all out of warranty products.

Index

Α

admin login 13-14, 22 changing 22 default 13 anatomy of the camera 3-4 API 31, 43 syntax help 43 auto focus 17, 34 auto iris 24, 37 auto white balance 24, 37

В

backlight compensation 24, 36-37 baud rate setting 6 behavior on power-up 10, 23 blue gain 24, 37 browser compatibility 13

С

cable connectors 4,7 Camera Control page (web) 16 camera ID setting (DIP switch) 6 camera mount, installing 8 camera select 11-12. See also camera ID setting (DIP switch) Camera Settings page (web) 23 camera specifications 61 camera standby position 16 CCU scenes 19, 23-24, 38 custom 19, 24, 38 recalling 38 CCU settings 35-37 ceiling-mounted cameras 8 cheat sheet 3, 11-12, 15 indicator light 3 Vaddio IR Remote Commander 11-12 web interface 15 chroma setting 24, 37 cleaning 63 color settings 19, 24, 36-37 colors of the status light 3, 62 command history 43 compatibility, browsers 13 connection example 8 connector identification 4

connector pin-out, RS-232 45 custom CCU scenes 24

D

damage, preventing 7, 45 default IP address 13 default settings, restoring 27, 42 detail setting 24, 37 DHCP 21 diagnostic logs 30 Diagnostics page (web) 30 DIP switch settings 27 soft 27 directional controls 11-12, 17

F

factory defaults, restoring 27, 42 fault isolation 62 firmware update 27 firmware version 27, 43 focus 11-12, 17, 34

G

gain 24 blue 24 red 24 getting help 30 guest access 14, 22 allowing 22

Н

Help page (web) 30 home position 17, 23, 32 hostname 21

I

image flip setting (DIP switch) 6
inactive sessions (web interface) 22
indicator light 3, 62
information, conference room 22
installation, typical 8
inverted installation 8
IP address 11-13, 21
default 13, 21
IP streaming 25-26, 40
resolutions and frame rates 25
settings 26, 40
IR on/off (DIP switch) 6
IR remote 11-12

iris settings 24, 36-37

L

labels, room 22 lighting settings 19, 24, 36-37 locations of connectors 4 log files 30 login 13-14 admin 13-14 user 13 low-power state 16, 39

Μ

manual focus 11-12, 17, 34 mounting cameras 7-9

Ν

network configuration 13, 21, 41 current 41 default 13, 21 Networking page (web) 21 NTP server 21

0

OneLINK system 8, 62 operating environment 63

Ρ

packing lists 2 page 16, 21-23, 25, 27, 30 Camera Control 16 Camera Settings 23 Diagnostics 30 Help 30 Networking 21 Room Labels 22 Security 22 Streaming 25 System 27 pan 20, 32 direction 20 pan/tilt/zoom 11-12, 24 pan/tilt/zoom controls 17 passwords 22 pin-out, RS-232 connector 45 ping command 41 power-up settings 23 power on/power off 10-12

presets 11-12, 18, 35 clearing 12 moving to 18, 35 setting 12, 18, 35 product returns and repairs 66

Q

quick reference 3, 11-12, 15indicator light 3Vaddio IR Remote Commander 11-12web interface 15

R

ready state 16, 39 rebooting the camera 27, 41 red gain 24, 37 remote control 11-12 resolution 4, 25 IP streaming 25 switch setting 4 restoring default settings 27, 42 RJ-45 connectors 7 room information 22 Room Labels page (web) 22 RS-232 commands 46, 57 RS-232 serial connection 4, 45

S

scenes, CCU 19, 24 naming 24 storing 24 Security page (web) 22 settings, default, restoring 42 shelf-mounted cameras 9 shelf, camera mount 8 soft DIP switches 27 solving problems 62 specifications 61 speed 17, 23-24, 32-34 focus 34 pan/tilt/zoom 17, 24, 32-33 standby state 16, 39 start-up behavior, setting 23 static IP address 21 status light, meanings of colors 3, 62 storage environment 63 Streaming page (web) 25 streaming settings 25, 40 supported web browsers 13

switch settings 6, 8, 27 3G Level A/Level B 27 baud rate (DIP switch) 6 camera ID (DIP switch) 6 color space 27 image flip (DIP switch) 6, 8 IR 6 reading from web interface 27 switch, video resolution 4 System page (web) 27

Т

technical specifications 61 technical support 30 Telnet command help 43 Telnet session 31, 43-44 ending 44 history 43 temperature, operating and storage 61, 63 till 20, 32 direction 20 time zone 21 Tri-Synchronous Motion (Tri-Sync) 18, 24, 35 troubleshooting 62 typical installation 9

U

user login 13, 22 changing 22 default 13

V

Vaddio IR Remote Commander 11-12 version, firmware 43 video resolution setting 4

W

warranty 7, 66 web browsers supported 13 web interface 16, 21-23, 25, 27, 30 Camera Control page 16 Camera Settings page 23 Diagnostics page 30 Help page 30 Networking page 21 Room Labels page 22 Security page 22 Streaming page 25 System page 27

Ζ

zoom 17, 33 zoom speed 11-12, 17, 33
RoboSHOT[™], OneLINK[™], EZCamera[™], and IR Remote Commander[™] are trademarks of Vaddio. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.HDBaseT[™] and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance. Exmor® is a trademark of Sony Corporation. All other trademarks in this document are the property of their respective owners. Copyright © 2016 Vaddio. All rights reserved. Vaddio 131 Cheshire Ln., Suite 500

Minnetonka, MN 55305

