

EDISON™
PROFESSIONAL

Call or email with any
questions,
concerns or comments
(please do not return to
mail)

Service@britelite.net

COMPLETE DIGITAL DJ SYSTEM DJ PRO 5500 BT



QUICK START GUIDE




EDISON™
PROFESSIONAL

DJ PRO 5500 BT System Includes:

- (3) AC Power Cord – AC100
- (1) AC Power Cord for Scratch 3000 MKII – AC2500
- (1) Dual CD/USB Mixer – Scratch 2500
- (1) Console Performing Stand – XT1000
- (2) Powered Speakers – ACT1505
- (2) Tripod Speaker Stand – ST102
- (1) Professional Wired Microphone – WM1000
- (2) Professional XLR Speaker Cables – XLR100
- (1) Monitoring Headset – H100
- (1) RCA Cable Input
- (1) Console Carrying Case for Scratch 2500 – SC200

DJ Pro 5500 BT Controller : Controls & Layout

EDISON
PROFESSIONAL

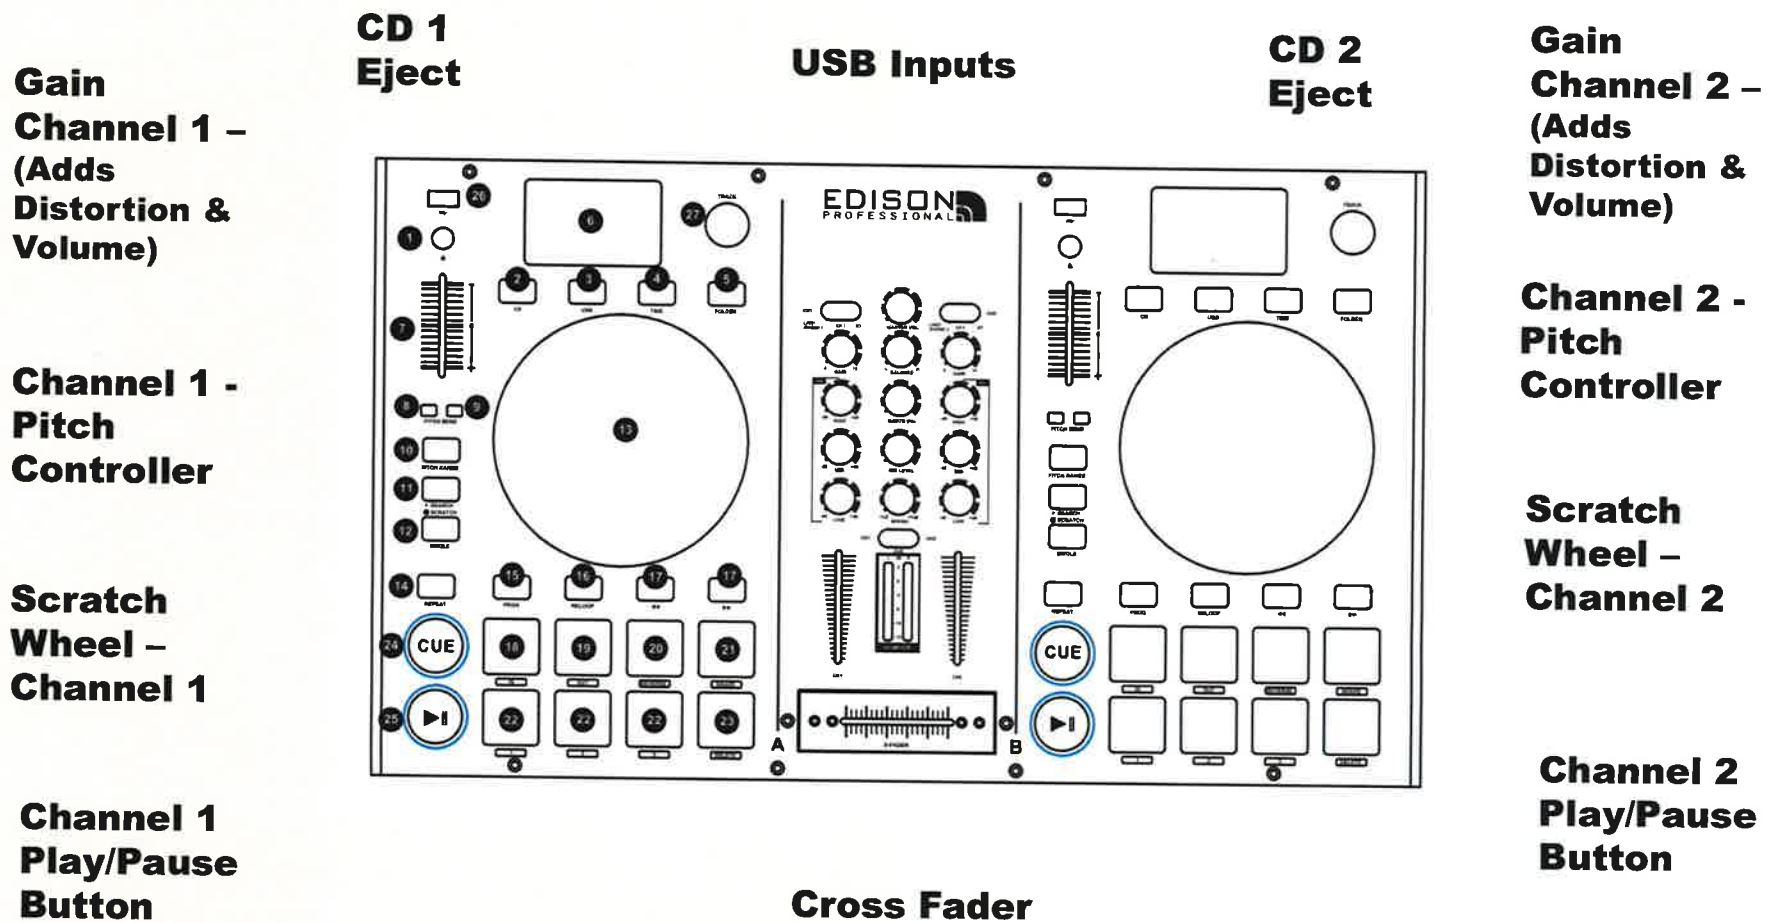

Volume Controls

EDISON
PROFESSIONAL

*Make sure all volume controls are turned up here as well as on the two speakers for audio

Channel 1 –
Gain Volume

Master
Volume


Channel 2 –
Gain Volume

Channel 1 –
Controllers

Channel 2 –
Controllers

Channel 1 –
Volume


Channel 2 –
Volume

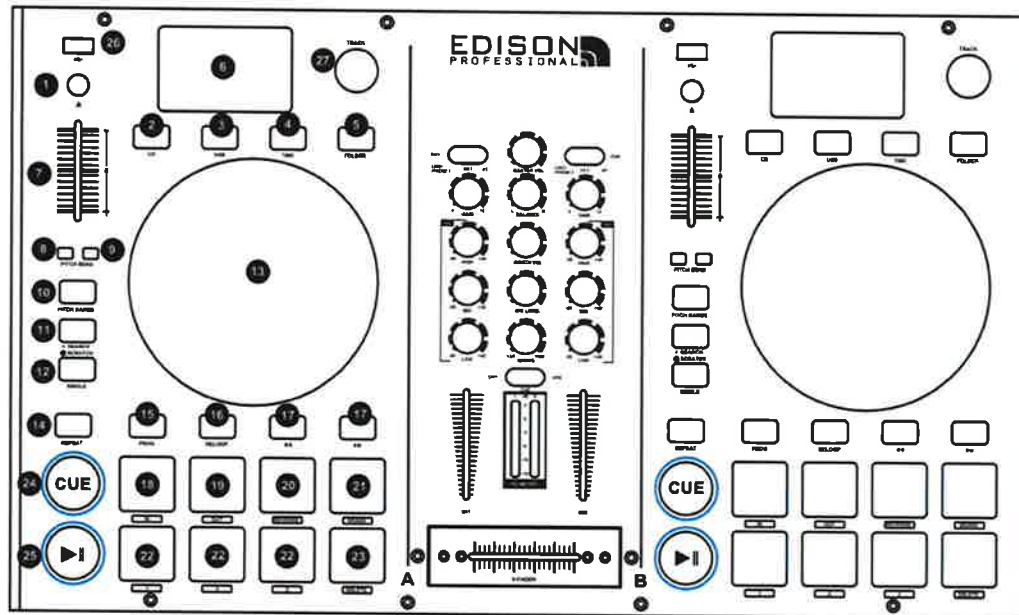

Microphone
Volume

Headset Volume

DJ Pro 5500 BT Controller

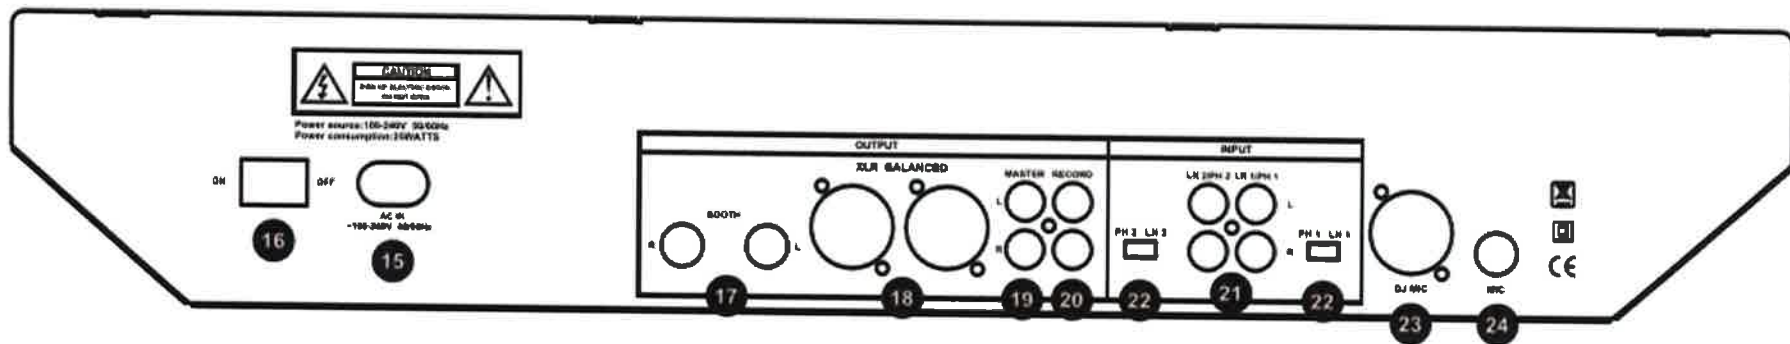

15 - AC Power Cord

16 - Power On/Off Switch

17 - Booth Output

18 - XLR Output

19 - Master Output

20 - Rec Output

21 - Input

22 - Line / Phono Input Switch

23 - DJ Mic


24. Mic Input

DJ Pro 5500 BT QUICK START

EDISON™
PROFESSIONAL




AC Power connections
All Power Cables supplied in Box

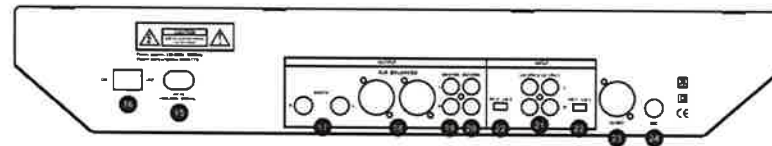

DJ Pro 5500 BT QUICK START

EDISON[™]
PROFESSIONAL

XLR - Speaker Cable Connection
XLR Left & Right Out of Controller
to each Speakers XLR Line -In

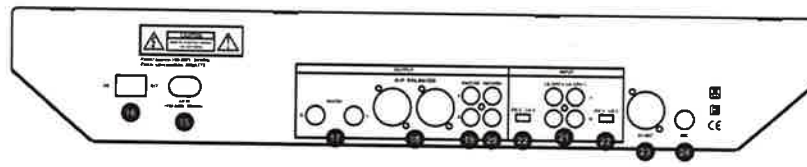

****Please do not plug
XLR cable in Mic
Inputs**