



Notes:

- Do not scale drawing.
- Dimensions are given in inches (mm).

Electrical Ratings: Two types of wiring are offered:

Specify EH340-2 for two-wire #18 AWG circuits, rated 3 amps continuous. Low voltage only.
Specify EH340-4 for four-wire #22 AWG circuits rated 2 amps continuous. Low voltage only.

Installation Instructions:

- Prepare door and frame per details shown.
- To insure proper operation of door, the centerline of the top pivot pin must be straight and plumb with bottom spindle.
- Connect wires in door frame and install jamb portion with pin retracted.
- Place door on bottom pivot and raise door so that its top is within two feet of the top jamb.
- Push wires through door portion bearing hole and connect wires in door.
- Install door portion.
- Raise door to vertical position while carefully pushing wires down inside door.
- Engage top pivot pin by turning adjusting screw clockwise when door portion is in alignment with the jamb portion.
- Test the electrical installation for proper operation of the wired door devices.

**EH340 Top Pivot
Center Hung, Non Handed
With Concealed Wires**

RIXSON®
ASSA ABLOY

www.rixson.com

TEMPLATE NUMBER

IS-EH340

REV

3

DATE

05-24

Approved 2024-05-15