


NOTE: WHEN USING HOLDER ARM:

- Holder adjusting nut up for left hand door.
- Holder adjusting nut down for right hand door.
- Hand of arm must be opposite hand of door.
- Closer must also be of the opposite hand from that of door for this installation.

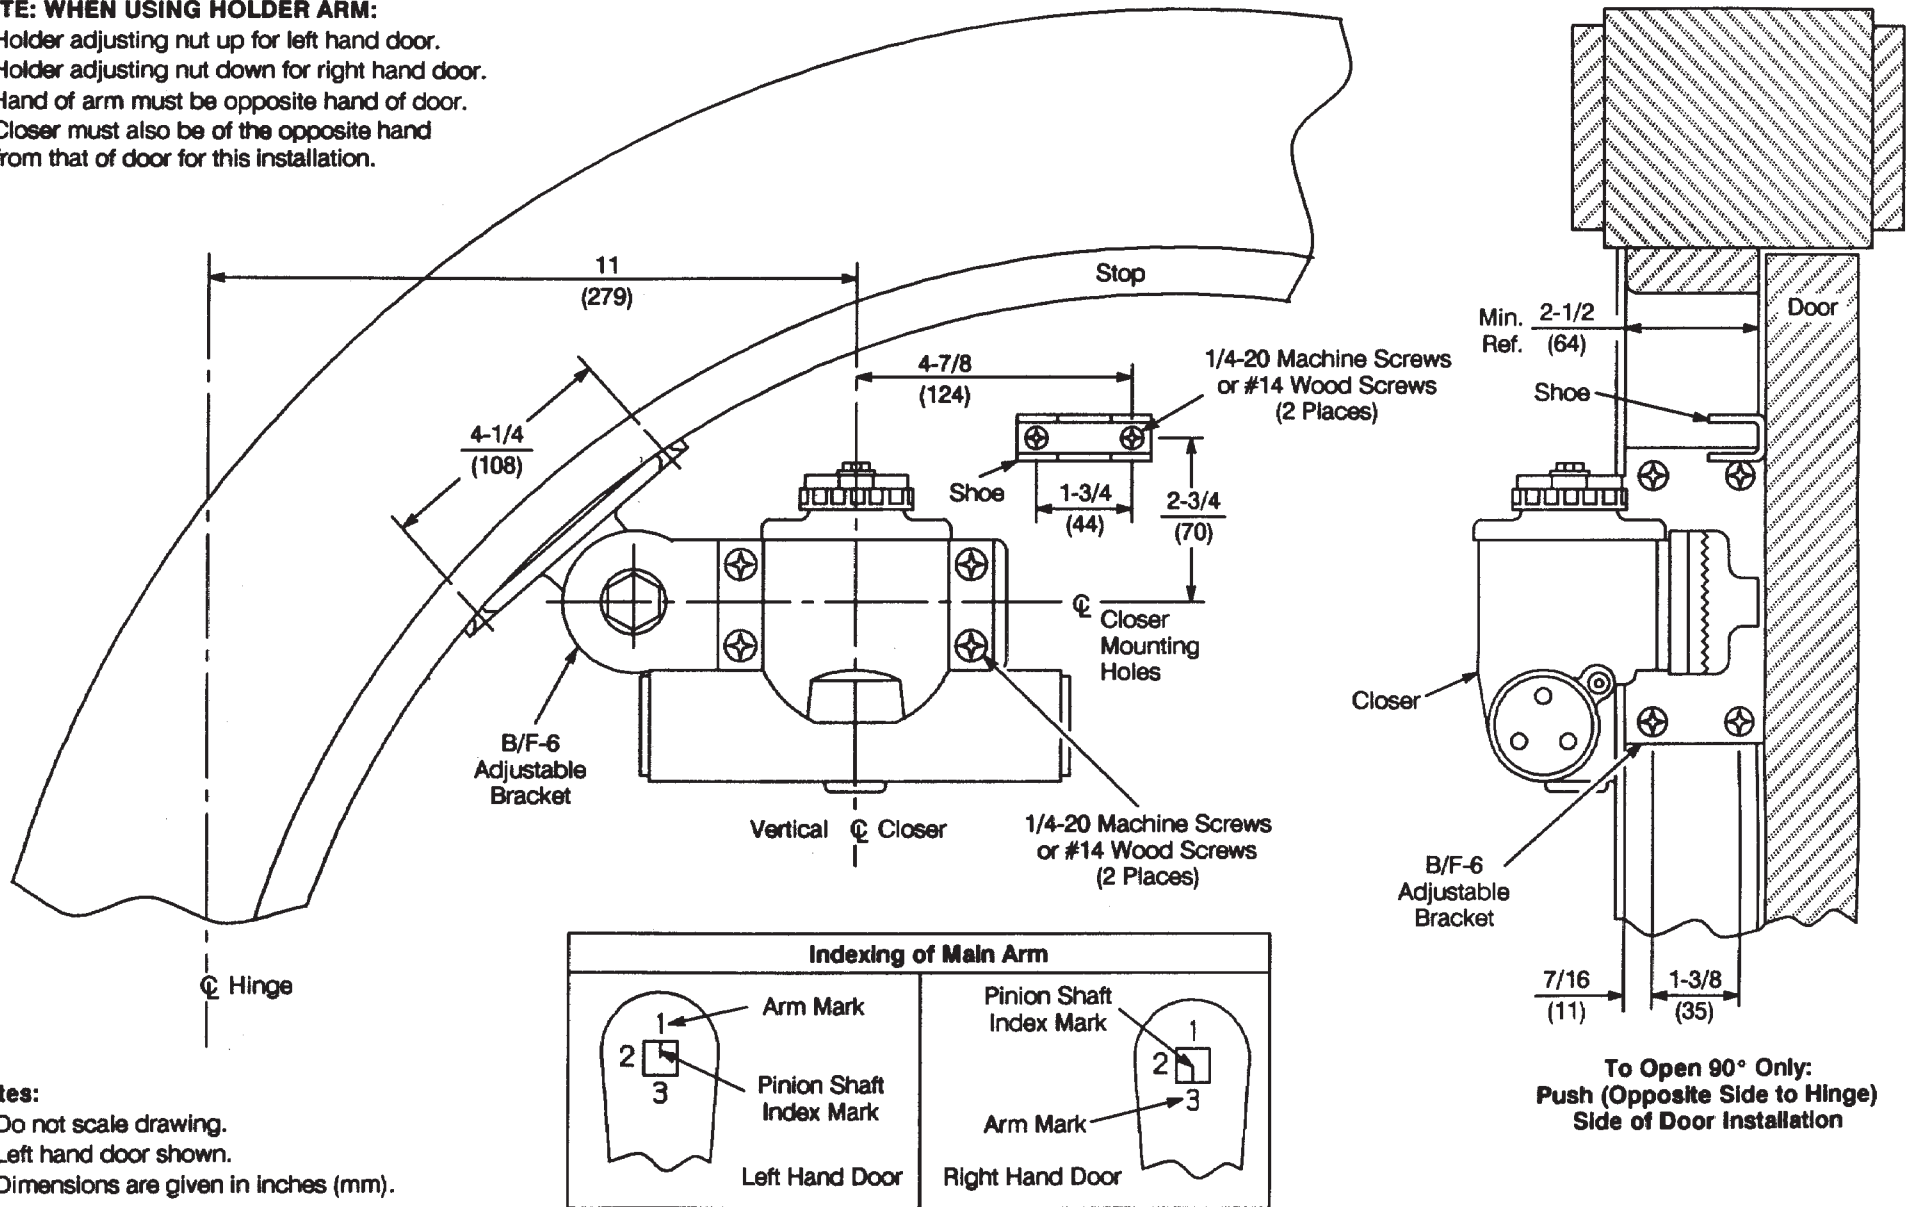

- Notes:**
1. Do not scale drawing.
 2. Left hand door shown.
 3. Dimensions are given in inches (mm).

**To Open 90° Only:
Push (Opposite Side to Hinge)
Side of Door Installation**

**Series 78B/F-RA Door with B/F-6 Adjustable Bracket
Push Side Arched Door Installation
Closer Sizes 78B/D-RA or 78E/F-RA**



ASSA ABLOY

www.nortondoorcontrols.com

TEMPLATE NUMBER	DATE
7349-0148	02-09