

UNITYTM UC MATRIX TA-HUS42M

4x2 5K/4K Conference Presentation Switch
Seamless | Smart | Meeting-Room Ready



User Manual

VER 1.1

Contents

Important Safety Instructions	2
1. Introduction	3
1.1 Overview	3
1.2 Features	4
1.3 Package Contents	5
1.4 Specifications	5
2. Panel Overview	7
2.1 Front Panel	7
2.2 Rear Panel	9
3. Installation	9
4. Typical Applications	10
5. Auto Switching	12
6. Button Control	13
7. RS232 Operation	13
7.1 Device Control	14
7.2 Control 3rd-party Device	14
7.3 TCP to RS232 routing	15
8. LAN Control	15
8.1 Obtain the IP Address of the Device	16
8.2 Telnet	16
8.3 Log in to the Web UI	16
8.4 Reset password and IP mode	17
8.5 Web UI	18
8.5.1 Switch	18
8.5.2 AV Setting	22
8.5.3 Control	26
8.5.4 Network	30
8.5.5 System	34

Important Safety Instructions



1. Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



6. Clean this apparatus only with dry cloth.



2. Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.



7. Unplug this apparatus during lightning storms or when unused for long periods of time.



3. To prevent risk of electric shock or fire hazard due to overheating, do not obstruct the unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.



8. Protect the power cord from being walked on or pinched particularly at plugs.



4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9. Only use attachments / accessories specified by the manufacturer.



5. Do not place sources of naked flames, such as lighted candles, on the unit.



10. Refer all servicing to qualified service personnel.

1. Introduction

1.1 Overview

This 4x2 conference presentation switcher is specially designed for modern meeting room environments, offering multiple models and specifications to meet diverse user requirements. It supports 4x2 matrix switching and features dual full- featured USB-C inputs along with dual HDMI + USB 3.0 inputs, allowing seamless connection to multiple laptops or desktop computers.

The switcher includes 4 local USB 3.0 device ports, enabling direct connection to a variety of USB conferencing devices such as USB cameras, audio bars, and USB speakers, making it ideal for comprehensive conference setups.

In terms of audio, the device supports flexible configuration options. HDMI and USB audio can be output via a local balanced audio output port, providing compatibility with various professional audio systems.

The presentation switcher is equipped with multiple control interfaces, including RS232, GPIO, RELAY, and sensor ports, allowing smooth integration with external control systems. It offers robust network functionality with two independent RJ-45 ports and supports USB-to-Ethernet conversion. Through VLAN segmentation and 802.1x authentication, the switcher ensures secure separation between presentation and USB networks.

It also supports various switching modes, including automatic switching, manual switching, and configurable priority switching. Additional features include support for HTTP/HTTPS configuration, 802.1x security, CEC and RS232 control, customizable GPIO functions, and a built-in Web UI and API for remote management and system integration.

1.2 Features

- 4x2 conference presentation switcher integrating video, audio, USB, control, and Ethernet functionality.
- **Inputs and outputs support resolutions up to 5120x2160@30Hz and 5120x1440@60Hz.**
- Equipped with dual USB-C and dual HDMI + USB 3.2 inputs; all ports support secure cable lock connections.
- Full-featured USB-C inputs support **5120x2160@30Hz and 5120x1440@60Hz** video, USB 3.2 data, USB-to-Ethernet bridging, and up to 60W charging.
- One USB-C input supports MST (Multi-Stream Transport) for dual-screen conferencing scenarios.
- Supports various switching modes, including automatic switching, USB/video independent switching, and priority-based switching.
- Offers 4 USB 3.2 device ports for connecting conference peripherals such as cameras, speakerphones, and audio devices.
- Provides one balanced audio output for external audio systems; supports audio de-embedding and UAC (USB Audio Class).
- Includes RS232, GPIO, RELAY, and OCS sensor ports for integration with control systems and automation devices.
- Includes a dedicated USB charging port on the conference table interface to power mobile devices.
- Each input port features an independent USB-to-Ethernet bridge, enabling 1Gbps Ethernet connectivity for connected computers.
- Features two independent RJ-45 ports for Ethernet switching or VLAN configuration.
- Supports Ethernet-based control via HTTP and HTTPS, with 802.1x network authentication support.

1.3 Package Contents

- 1 x Matrix Switcher
- 1 x DC 20V/10A Power Adapter
- 1 x AC Power Cord with US Pins
- 2 x USB 3.2 Type-C to Type-C Cable (L = 2m)
- 2 x USB 3.0 Type-A to Type-B Cable (L = 1.8m)
- 1 x 3.5mm 3-Pin Phoenix Male Connector
- 2 x 3.5mm 3-Pin Phoenix Male Connector (Double Layer)
- 1 x 3.5mm 5-Pin Phoenix Male Connector
- 1 x 3.5mm 6-Pin Phoenix Male Connector
- 4 x Mounting Brackets (with Screws)

1.4 Specifications

Technical	
Input/Output Port	2 x HDMI IN, 2 x USB-C IN, 2 x HDMI OUT, 2 x USB HOST (USB Type-B), 1 x AUDIO OUT (3.5mm, 5-pin phoenix connector), 4 x USB DEVICE (USB Type-A), 2 x RS232, 1 x GPIO (3.5mm, 6-pin phoenix connector), 2 x RELAY, 1 x SENSOR, 2 x ETHERNET (RJ45), 1 x DC 20V
Input/Output Signal Type	Supports HDMI with 5K Ultrawide Resolutions (5120x2160@30Hz) and 5K Super-wide Resolutions (5120x1440@60Hz) . Supports HDCP 2.2/1.4.
USB HOST IN 1 & 2	Supports USB 3.2 Gen 2x1 standard, up to 10Gbit/s
USB-C IN 3&4	USB-C IN 3: USB-C supports USB 3.2 Gen 2x1 standard, and supports: <ul style="list-style-type: none"> • Video: DP alt mode, SST only, up to 5120x2160@30Hz and 5120x1440@60Hz. • USB data: Up to 10Gbit/s. • Charging: 60W. USB-C IN 4 : USB-C supports USB 3.2 Gen 2x1 standard, and supports: <ul style="list-style-type: none"> • Video: DP alt mode, MST dual output, up to 5120x2160@30Hz and 5120x1440@60Hz • USBdata: Up to 10Gbit/s. • Charging: 60W.

Technical	
USB DEVICE	Maximum supports USB 3.2 Gen 2x1 standard, up to 10Gbit/s. 5V/1.5A output per port.
Input/Output Resolution Supported	VESA: 800 x 6006, 1024 x 7686, 1280 x 7686, 1280 x 8006, 1280 x 9606, 1280 x 10246, 1360 x 7686, 1366 x 7686, 1440 x 9006, 1600 x 9006, 1600 x 12006, 1680 x 10506, 1920 x 12006, 2048 x 11526, 2560 x 14406, 3440 x 14406, 5120x14403,6, 120x21603 CTA: 1280x720P5,6,1920x1080P1,2,3,4,5,6,3840x2160P1,2,3,4,5,6, 4096x2160P1,2,3,4,5,6, 5120x14406, 5120x21603,6 (4:2:0) 1 = at 24 (23.98) Hz, 2 = at 25 Hz, 3 = at 30 (29.97) Hz, 4 = at 48 Hz, 5 = at 50 Hz, 6 = 60 (59.94) Hz
HDR	All HDR formats, including HDR 10, HLG, HDR 10+ and Dolby Vision
Audio Format	<ul style="list-style-type: none"> • USB-C IN/HDMI IN/ HDMI OUT: Up to 7.1ch, including PCM 2.0/5.1/7.1ch, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos, DTS 5.1, DTS-HD Master Audio and DTS:X. • Audio de-embedding: Stereo only.
ETHERNET	1000M/100M adaptive network USB-C IN: 10Gbit/s
Maximum Data Rate	(per lane) HDMI: 18Gbps USB 3.2: 10Gbit/s
Control Method	Front Panel Buttons, RS232, LAN (Telnet &Web UI)

General	
Operating Temperature	0°C to 45°C (32°F to 113°F)
Storage Temperature	-20°C to 70°C (-4°F to 158°F)
Humidity	10% to 90%, non-condensing
ESD Protection	Human-body Model: ±8kV (Air-gap discharge)/ ±4kV (Contact discharge)
Power Supply	DC 20V/10A
Power Consumption (Maximum)	Without USB and Charging: 13.1W With USB + Charging: 155.6W
Device Dimension (W x H x D)	300mm x 25mm x 180.2mm/11.81" x 0.98" x 7.09"
Product Weight	1.45kg/3.20lbs

Transmission Distance

Cable Type	Range	Supported Video
USB Type-C to USB Type-C Cable (USB 3.2 Gen 2, 10Gbps per lane)	2m/7ft	1080P@60Hz24bpp 4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp 4K@60Hz 4:4:4 24bpp
HDMI	Input/Output: 10m/33ft	1080P@60Hz 24bpp

Cable Type	Range	Supported Video
		4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp
	Input/Output: 5m/16ft	4K@60Hz 4:4:4 24bpp

2. Panel Overview

2.1 Front Panel

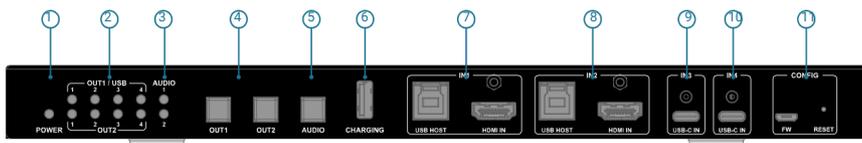


Figure 1: Front Panel

#	Name	Description
1	POWER LED	<ul style="list-style-type: none"> On: The device is powered on. Off: The device is powered off.
2	OUTPUT 1 / USB LEDs and OUTPUT 2 LEDs	<ul style="list-style-type: none"> Red:USB devices are connected to the corresponding USB host. Green:The corresponding video input is selected or thecorresponding video input and USB host are selected. Off: Thecorresponding input are not selected.
3	AUDIO 1&2 LEDs	<ul style="list-style-type: none"> On: Thecorresponding de-embedded audio from HDMIOUT 1/2 is selected as source. Off: Thecorresponding de-embedded audio from HDMIOUT 1/2 is not selected as source form AUDIOOUT.
4	OUTPUT 1&2 Selection Button	Press the button to select input source for HDMI OUT 1/2.
5	AUDIO OUT Selection Button	Press thebutton to switch the audio source between the de-embedded audio from HDMI OUT 1 and HDMI OUT 2 forAUDIO OUT port.
6	CHARGING	USB 2.0Type-A port. 5V/2A USB charging.
7 & 8	IN 1 & IN 2	<p>HDMI IN USB :Connect to HDMI sources. HOST :USB 3.2 type-B ports. Connect to USB HOSTdevices.</p> <p>Note:</p>

#	Name	Description
		<ul style="list-style-type: none"> • USB HOST ports in IN 1 and IN 2 groups are bound with HDMI IN ports in IN 1 and IN 2 respectively. For example, when select HDMI IN in IN 1 group as input source, all USB devices will be routed to the USB HOST in IN 1 group. • Both USB HOST ports support USB-to-Ethernet bridging, allowing laptops connected to these ports to access the network through the device's ETHERNET ports. The two USB HOST ports and the two USB Type-C ports share a 1Gbps Ethernet connection.
9 & 10	INPUT 3&4 (USB-C IN)	<p>USB 3.2 type-C ports. Connect to USB-C sources. The two full-featured USB-C ports support the following three functions:</p> <ul style="list-style-type: none"> • Supports audio, video and USB signal transmission, maximum 10Gbit/s data rate. <ul style="list-style-type: none"> ◦ USB-C IN 3 and 4 support DP SST, one video output with 4K signal transmission; ◦ USB-C IN 4 supports DP MST, two video outputs with 4K signal of each channel transmission. • Supports PD 3.0, and can supply up to 60W power for the connected device; • Supports 1G network connection, the laptop connected with these ports can access the Ethernet the matrix connected; <p>The following cable are recommended to use: USB Type-C to Type-C cable (USB 3.2 Gen 1x1 or above)</p>
11	FW	<p>FW: Micro-USB port. For ARM firmware upgrade. RESET: Insert a tool such as a needle.</p> <ul style="list-style-type: none"> • Press and hold it for about 5s: Reset the IP settings, including reset the IP mode to DHCP, and reset the login password to "admin". • Press and hold it for about 15s: Reset the device to factory defaults.

2.2 Rear Panel



Figure 2: Rear Panel

#	Name	Description
1	20V/10A	Connect to the power adapter provided.
2	USB DEVICE	USB 3.2 type-A ports, 5V/1.5A output per port. Connect to USB devices such as camera and speakerphone.
3 & 4	HDMI OUT (1~2)	Connect to the HDMI display devices.
5	AUDIO OUT	Connect to an audio receiver.
6	RS232 1 & 2	<ul style="list-style-type: none"> RS232 1: Connect to a RS232 control device for API control or connect to a 3rd party device for RS232 routing. RS232 2: Connect to a RS232 3rd party device for RS232 routing.
7	GPIO RELAY	Connect to GPIO devices. The device supports connecting to 6 GPIO devices.
8	1 & 2	Connect to relay devices for relay control.
9	SENSOR	Connect to OCS sensor.
10 & 11	ETHERNET 1 (SECURE) & 2	Connect to a network device (e.g., network switch, router, computer, etc.) for LAN control (Web UI & Telnet). VLAN function can be configured via API commands and web UI, please refer to the separate document "API Command Set_MS0402-N008-000" or " Network " part in "Web UI" section.

3. Installation

 **Note:** Before installation, ensure the device is disconnected from the power source.

1. Attach the bracket to one side of the enclosure using the screws provided.

The bracket is attached to the enclosure as shown.

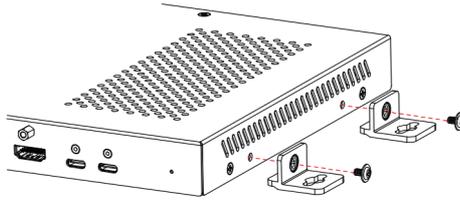


Figure 3: Bracket Installation

2. Repeat step 1 for the other side of the enclosure.
3. Attach the brackets to the surface or location desired using screws (not included in the package).

4. Typical Applications

Note:

- Before wiring, disconnect the power from all devices.
- During wiring, connect and disconnect the cables gently.

 **Note:** By default, USB-C IN 4 is in DP SST mode, use the command “SET USBC4_DM MST<CR><LF>” or refer to web UI page (see the separate document “API Command Set_MS0402-N008-000” or refer to “[Switch](#)” part in “Web UI” section) to set the USB-C IN 4 to MST mode. In this mode, the USB-C IN 3 is disabled, and the USB-C IN 4’s source can transmit two video signals with 4K each to the two HDMI outputs respectively.

1. 4x2 Presentation Switch with Dual Screen Mode

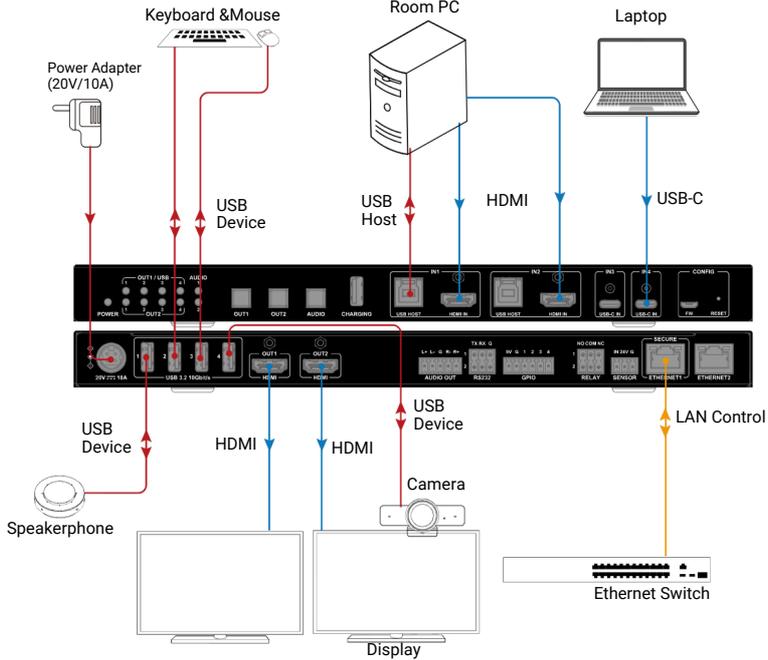


Figure 4: 4x2 Presentation Switch with Dual Screen

2. 4x2 Presentation Switch with Matrix Mode

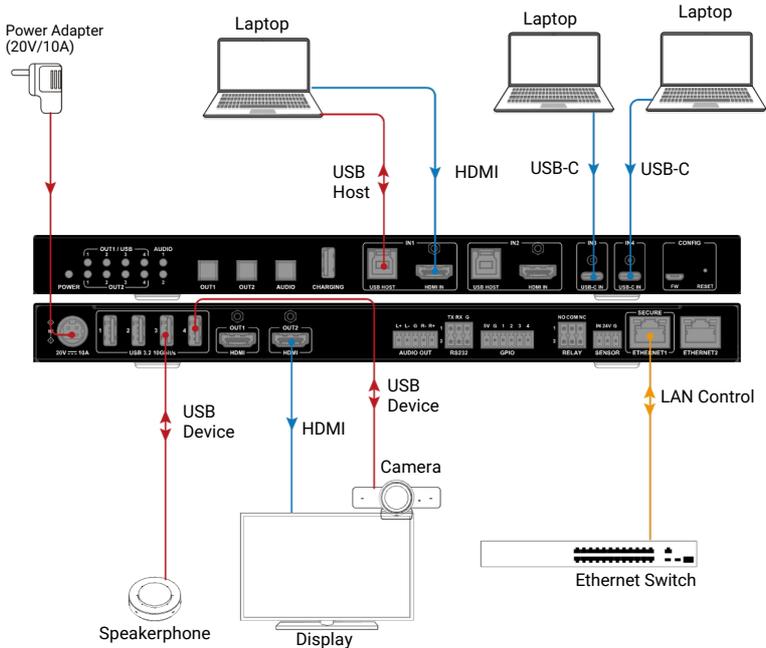


Figure 5: 4x2 Presentation Switch with Matrix Mode

5. Auto Switching

The device supports automatic switching (HDMI and USB-C video and USB) and provides two modes:

- **LIFO mode.**
- **Priority mode.**

This function can be enabled/disabled through Web UI or API Commands.

Note:

1. Please refer to “[Switch](#)” part in the “Web UI” section or separate document “*API Command Set_MS0402-N008-000*” to get detailed configuration information.
2. Video switching to detect valid signals, and USB switching to detect VBUS.

6. Button Control

Users can perform basic switching of input sources to outputs and audio source selection.

- **OUT 1** button: Press the button continuously to switch the input source for **HDMI 1** output. The LED will light when the corresponding source is selected.

 **Note:** The default mode of the USB switch is "**Follow video out 1**", using the "**OUT 1**" button will switch the video out 1 and the USB device at the same time.

- **OUT 2** button: Press the button continuously to switch the input source for output 2. The LED will light when the corresponding source is selected.
- **AUDIO** button: Select the audio de-embedding from which output, **OUT 1** or **OUT 2**. The LED will light when the corresponding audio source is selected.

 **Note:** Audio routing can be set via the Web UI and API, refer to the separate document "*API Command Set_MS0402-N008-000*" or "**Audio Routing**" part in "Web UI" section for details.

7. RS232 Operation

The device provides two RS232 ports for device control or control of 3rd-party devices.

Supported functions are as follows:

- **RS232-1:**
 - Device control (API). Control
 - 3rd-party device. TCP to
 - RS232 routing.
- **RS232-2:**
 - Control 3rd-party device.
 - TCP to RS232 routing.

7.1 Device Control

Users may need to control the device via API commands. Connect an RS232- enabled device (such as a PC) to the **RS232-1** port. For detailed command information, please refer to the separate document "*API Command Set_MS0402- N008-000*". Before sending API commands to control the device, ensure the serial ports between this device and the PC are configured correctly. A professional RS232 serial interface software (e.g., Serial Assit) may be needed as well.

Parameters	DefaultValue
Baud Rate	115200 bps
Data bits	8 bits
Parity Stop	None
bits Flow	1 bit
control	None

7.2 Control 3rd-party Device

Advanced users may need to control the 3rd-party device perform automated operations, such as automatically turning the projector on/off. MS0402-N008 provides "**RS232 automatic/manual control**".

RS232 automatic/manual control

RS232 control is performed by pre-stored instructions in the device. When the trigger condition is met, the configuration command is automatically sent out through the RS232 port.

Users can store the following instructions in settings:

- Display ON/OFF.
- Volume MUTE/UNMUTE.
- Volume UP/DOWN.

Users can set these instructions through the Web UI or API and turn on the **Auto-RS232** function to automatically execute, or perform these operations by manually sending APIs.

Auto-RS232 conditions:

- **Display ON:** When any active source is connected to the device.
- **Display OFF:** When all sources are disconnected from the device and after the "**Delay Time**" set.

Please refer to the "RS232" part in the "Web UI" section or separate document "*API Command Set_MS0402-N008-000*" to get detail command information.

7.3 TCP to RS232 routing

The TCP to RS232 routing function provides a tunnel from the network to the RS232 port, which can bypass the network control commands to the RS232 port. This function makes it easier for third-party devices such as a central-control device to control other devices connected to MS0402- N008. TCP port number:

- RS232-1: 5000;
- RS232-2: 5001.

8. LAN Control

8.1 Obtain the IP Address of the Device

The default IP mode of the device is: **DHCP**. The user can obtain an IP address in the following ways:

1. Send API command via RS232-1 port.

Send API command "GET IPADDR<CR><LF>" to get the IP address, for example:

Input:

```
GET IPADDR<CR><LF>
```

Response:

```
IPADDR 172.16.18.173 MASK 255.255.255.0 GATEWAY  
172.16.18.1
```

2. Use the tool "SmartSetGUI" to search the IP address. Check
3. the IP address in the DHCP server.

8.2 Telnet

Telnet port: 23.

8.3 Log in to the Web UI

The Web UI designed for this device allows for basic controls and settings. It can be accessed through a modern browser with latest version, e.g., Chrome, Safari, Firefox, IE10+, etc.

To get access the Web UI:

1. Connect one of the two ETHERNET ports of the device to a local area network. (Ensure there's a DHCP server in the network so that the device can obtain a valid IP address.)
Note: When VLAN is set to "Separate", please connect **ETHERNET-1** to the local area network for web UI control.

2. Connect the PC to the same network.
3. Input the device's IP address in the browser and press Enter, the following window will pop up. (Refer to [Obtain IP Address of the Device](#) section to get the device's IP address quickly).
4. The following window pops up. Input the password (default password: admin) and click "Login".



The image shows a login page titled "MS42 Switcher". It contains three input fields: "Username", "Password", and a "Login" button.

Figure 6: Login Page

5. Input a new password in the dialog box and click "Apply" to enter the main page. The password must be 4 to 16 characters long, alphanumeric, and include at least one uppercase letter, one lowercase letter, and one number.



The image shows a "Change password" dialog box. It contains the following text and fields:

- Title: Change password
- Text: Please change your username and password to continue
- Old password: [password field]
- New password: [password field]
- Verify password: [password field]
- Apply button
- Note: Password must be 4 to 16 characters in length and must contain upper and lower case letters and numbers.(alphanumeric only)

Figure 7: Change Password

8.4 Reset password and IP mode

If users forget the login password, the following ways can be used to restore the default password:

- Hold the "RESET" hole on the front panel for about 5s to reset the IP mode to DHCP and login password to "admin".

- Hold the “RESET” hole on the front panel for about 15s to reset the device to factory defaults, which includes resetting the password.
- Send the API command “RESET<CR><LF>” to reset the device to factory defaults, which includes resetting the password.

8.5 Web UI

The main page consists of five tabs: Switch, General, Control, Network and System.

MS42 Switcher

Switch AV Setting Control Network System Web: V1.1.2

Video & USB

OUT \ IN	IN 1 (HDMI)	IN 2 (HDMI)	IN 3 (USB-C)	IN 4 (USB-C)
VIDEO OUT 1				
VIDEO OUT 2				
ALL				

USB Mode:

OUT \ IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)	IN 4 (USB-C)
USB DEVICE				

Audio

FROM \ TO	USB HOST	AUDIO DE-EMBED (VIDEO OUT 1)	AUDIO DE-EMBED (VIDEO OUT 2)

Figure 8: Main Page

8.5.1 Switch

1. Video & USB

Video & USB

OUT \ IN	IN 1 (HDMI)	IN 2 (HDMI)	IN 3 (USB-C)	IN 4 (USB-C)
VIDEO OUT 1				
VIDEO OUT 2				
ALL				

USB Mode:

OUT \ IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)	IN 4 (USB-C)
USB DEVICE				

Figure 9: Video & USB

This section allows users to switch video/USB input for output, and set USB mode.

- **VIDEO OUT 1/2:** Click the button in the table to switch one input source for VIDEO OUT 1 / VIDEO OUT 2 (button turns from white to green when the selection is done).
- **ALL:** Click to select one input for all Video outputs (button turns from white to green when the operation is done).
- **USB Mode:** Click to select USB-A devices switching mode (Follow VIDEO OUT 1, Follow VIDEO OUT 2, and Independently), and click “Apply” to take effect.

Default setting: Follow VIDEO OUT1, the USB-A devices switching follows the VIDEO OUT 1 switching. When set USB Mode to “Independent”, users can manually switch the USB host for the USB devices to be connected to by clicking the corresponding button in the table

USB Mode:

OUT \ IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)	IN 4 (USB-C)
USB DEVICE				

Figure 10: USB Mode – Independently

2. Audio



Audio		FROM	USB HOST	AUDIO DE EMBED (VIDEO OUT 1)	AUDIO DE EMBED (VIDEO OUT 2)
TO	AUDIO OUT				

Audio Mute

All:

HDMI OUT 1:

HDMI OUT 2: ANALOG OUT:

Figure 11: Audio

This section allows users to switch audio input to output.

AUDIO OUT: Three audio sources can be selected. Default Setting: AUDIO DE-EMBED (VIDEO OUT 1). **Audio Mute (ON/OFF):** Click to set the corresponding audio output to mute/unmute.

All: Click to set all audio to mute/unmute.

Default Setting: Unmute.

3. USB MST



USB-C MST

USB-C IN 4 MST

> Only USB-C IN 4 support MST.
> Enable the USB-C IN 4 MST function will occupy another input, which can be selected through the settings below.

Disabled USB-C IN 3 Input

Disabled HDMI IN 2 Input

Figure 12: USB-C MST

This section allows users to enable the **USB-C IN4 MST** function.

- **USB-C IN 4 MST:** Click to enable the MST function of USB-C IN 4 to ON/OFF. Default setting: OFF. When enabling this function, the USB-C IN 4 will occupy another input channel, check the box from the following inputs to set which input channel is occupied.



Figure 13: USB-C MST - ON

4. Auto-Switch

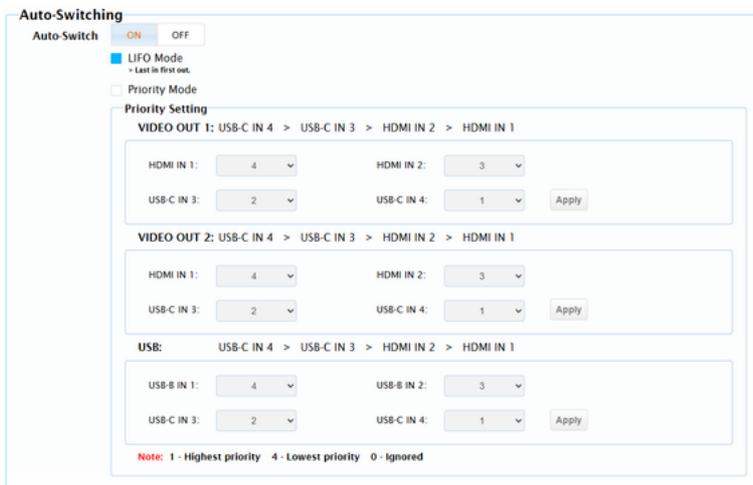


Figure 14: Auto-Switch

This section allows users to set the auto-switch function to ON/OFF, and select auto-switching mode. **Default:** ON. When the function is set to on, users can select auto switch mode between LIFO Mode and Priority Mode.

- **LIFO Mode (Default):** When inserting a new active input, all outputs will switch to this input automatically. When removing the current selected input, all outputs will switch to the previously active input.
- **Priority Mode:** When set to this mode, users can set input switching priority for **VIDEO OUT1**, **VIDEO OUT 2** and **USB** from each zone.

Note:

- o "1" indicates the highest priority, "4" indicates the lowest priority, and "0" means this port will be ignored in automatic switching
- o When two inputs are set to the same priority, will follow the sequence of priority is **USB IN 4 > HDMI IN 1 > USB IN 3 > HDMI IN 2.**
- o When the USB Switch mode is set to follow video out 1/2, it will follow the corresponding video output to switch.
- o When the USB Switch mode is set to independently, USB device switching also follows LIFO mode, and can set priority.

8.5.2 AV Setting

1. Down-Scaler

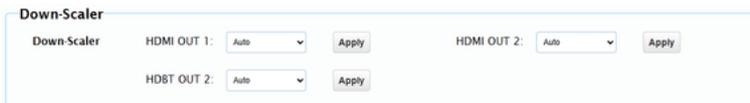


Figure 15: Down-Scaler

This section allows users to set the down-scaler function for each output.

- **Down-Scaler:** Select the mode from the drop-down menu, and click "Apply" to take effect.
 - o **Auto (Default):** Automatically convert 4K resolution to 1080P when connected to a 1080P display.
 - o **Forced 1080P:** Forcely converts the input 4K resolution to 1080P regardless of the connected display's capabilities.
 - o **OFF:** Disabled down-scaler function.

2. EDID

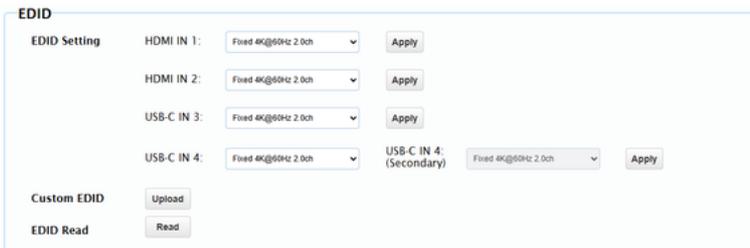


Figure 16: EDID

This section allows users to set the EDID for each input and read the EDID of each output.

- **EDID Setting:** Select EDID for the input port, and click “Apply” to take effect.

The default setting for all inputs: Fixed 4K@60Hz 2.0ch.

EDID Values include:

Copy from the HDMI OUT 1;

Copy from the HDMI OUT 2;

Fixed 5120x2160@60Hz 2.0ch;

Fixed 5120x2160@60Hz 2.0ch;

Fixed 4K@60Hz 7.1ch;

Fixed 4K@60Hz 2.0ch;

Fixed 4K@30Hz 7.1ch;

Fixed 4K@30Hz 2.0ch;

Fixed 1080P@60Hz 7.1ch;

Fixed 1080P@60Hz 2.0ch;

Custom EDID 1;

Custom EDID 2.

- **Custom EDID:** Click “Upload” to enter the following page:

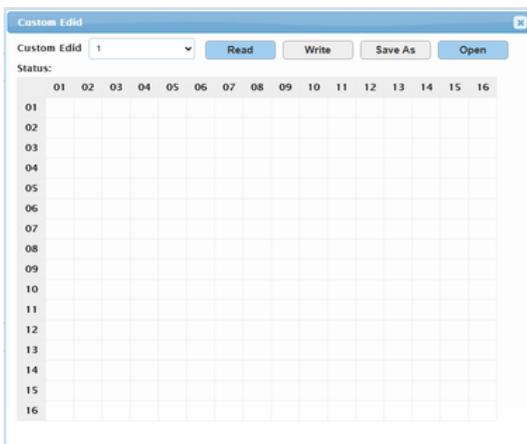


Figure 17: Custom EDID

- o **Custom EDID:** Select a customized EDID from the drop-down menu (1 or 2).
- o **Read:** Click to read the selected customized EDID. The result is shown on the table of the page.
- o **Write:** Click to write the opened EDID to the selected customized EDID space.

- o **Save As:** Click to save the customized EDID to the local PC.
- o **Open:** Click to select an EDID bin file from the local PC.
- o **Status:** Shows the status of reading selected customized EDID.
- **EDID Read:** Read the EDID of the output port and save it. Click “Read” button to enter the following page:

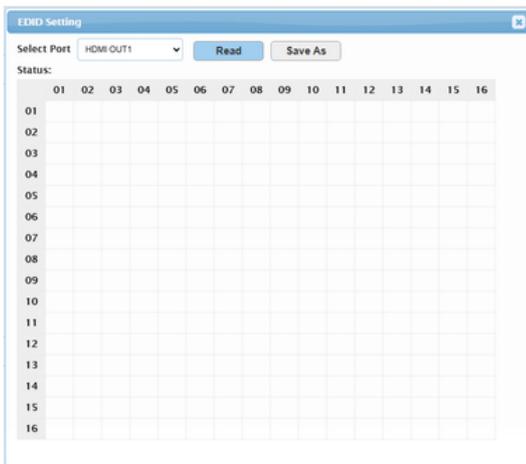


Figure 18: EDID Setting

- o **Select Port:** Select an output port from the drop-down menu.
- o **Read:** Click to read the EDID of the selected output. The result is shown on the table of the page.
- o **Save As:** Click to save the EDID as a bin file to the local PC.
- o **Status:** Shows the status of reading EDID.

3. HDCP



Figure 19: HDCP

This section allows users to enable/disable the HDCP capability of inputs. Default setting: HDMI IN 1/2: ON; USB-C IN 3/4: OFF.

8.5.3 Control

1. CEC



The screenshot shows a control panel for CEC. At the top, there's a 'CEC port' dropdown menu currently showing 'All Outputs'. To its right are two buttons: 'Display ON' and 'Display OFF'. Below this is the 'Auto-CEC' section with 'ON' and 'OFF' toggle buttons, where 'OFF' is selected. To the right of the toggle is a 'Delay Time (sec):' input field with the value '30' and an 'Apply' button. A small note below reads '> The delay time is only valid for the Display OFF command.' The bottom section is 'CEC Command', containing two rows: 'Display ON:' with an input field containing '40 04' and 'Display OFF:' with an input field containing '40 36'. Each row has three buttons: 'Save', 'Test', and 'Reset'.


Figure 20: CEC

This section allows users to control the connected CEC-enabled displays to power on/off and set the **Auto-CEC** function.

- **CEC port:** Select the output port to control.
- **isplay ON/OFF:** Click to control the corresponding CEC-enabled display to power on/off immediately.
- **Auto-CEC:** Enable/disable the auto-CEC function of the selected output. Default setting: OFF.
- **Delay Time:** Delay time for CEC "**Display OFF**" command. When the CEC display-off conditions are met, the command will not be issued until the set time arrives. Default setting: 30s. Range: 30s~1800s.
- **CEC Command:** Input the display on/off command to control the corresponding display.
 - **Save:** Click to save the input command.
 - **Test:** Click to send the input command test the input command.
 - **Reset:** Click to reset the command to default value.

 **Note:** Please get the commands from the display's manufacturer supplier or user manual.

2. RS232

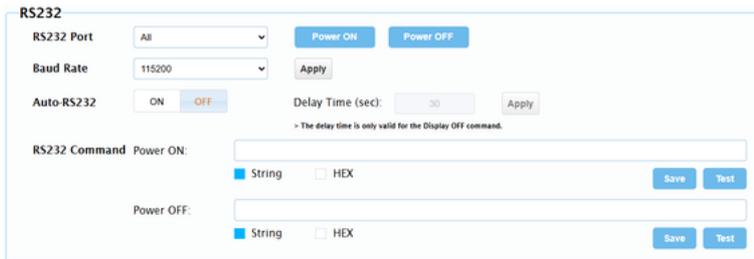

The screenshot shows a configuration panel for RS232. At the top, there are buttons for 'Power ON' and 'Power OFF'. Below these are dropdown menus for 'RS232 Port' (set to 'All') and 'Baud Rate' (set to '115200'), with an 'Apply' button. The 'Auto-RS232' section has 'ON' and 'OFF' radio buttons, with 'OFF' selected. A 'Delay Time (sec):' field is set to '30' with an 'Apply' button. A note states: '> The delay time is only valid for the Display OFF command.' Below this are two text input fields for 'RS232 Command'. The first is for 'Power ON' and the second is for 'Power OFF'. Each field has 'String' (selected) and 'HEX' radio buttons, and 'Save' and 'Test' buttons.

Figure 21: RS232

This section allows users to set parameters for the RS232 port, set the **Auto- RS232** function and set the RS232 pre-stored command.

- **RS232 Port:** Select RS232 port to set from the drop-down menu.
- **Power ON/OFF:** Click to send the saved display on/off command to power on/off the 3rd device connected to the selected RS232 port.
- **Baud Rate:** Select the baud rate from the drop-down menu and click “Apply” to take effect. Default setting: 115200.
- **Auto-RS232:** Enable/disable the auto-RS232 function of the selected output. Default setting: OFF.
- **Delay Time:** Delay time for RS232 “Power OFF” command. When the RS232 display-off conditions are met, the command will not be issued until the set time arrives. Default setting: 30s. Range: 30s~1800s.
- **RS232 Command:** Input the Display ON/OFF commands for the 3rd party device in the corresponding field. The serial commands for displays and projectors are provided by their manufacturer and can be found in the instructional documentation.
 - **String/HEX:** If the command for display on/off is only available in Hex format, check the “HEX” button and input the Hex command in the field, otherwise, check the “String” button.
 - **Save:** Click to save the input command to the matrix.
 - **Test:** Click to send the input command to the 3rd device directly to test it.

Note: The RS232 command must be set before use, otherwise the RS232 port will not send anything.

3. RELAY

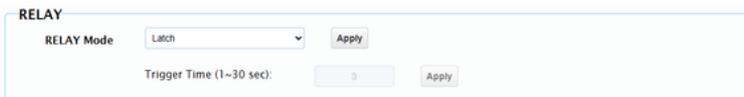


Figure 22: RELAY

This section allows users to configure the RELAY.

- **RELAY Mode:** Select relay mode from the drop-down menu (Latch or Momentary), and click “Apply” to take effect. Default setting: Latch.
 - o **Latch:** Level mode.
 - o **Momentary:** Pulse mode.
- **Trigger Time:** When setting relay mode to momentary, input the trigger time in this field, and click “Apply” to take effect. Default setting: 3s. Range: 1s~30s.

4. SENSOR



Figure 23: SENSOR

This section allows users to set 24V output voltage of the sensor to on/off and get I/O status.

- **24V Power:** Enabled/disable the 24V power out for the sensor port.
- **I/O Status:** Click “Get” to get the current I/O status of the sensor port.

5. USB Device



Figure 24: USB Device

This section allows users to set VBUS mode for USB device ports.

VBUS Mode: Select VBUS mode.

- **Pass-through (default):** If the selected USB Host is not connected, all USB device ports will have no VBUS output.
- **Always High:** The USB device ports always provide VBUS output.

6. GPIO

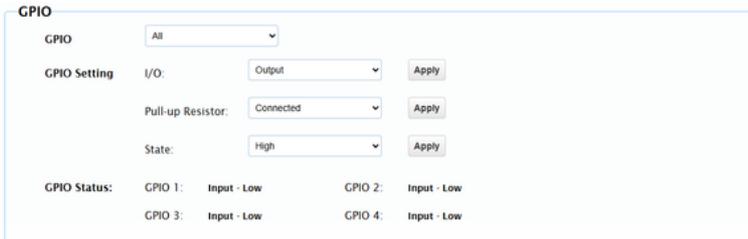


Figure 25: GPIO

This section allows users to configure GPIO.

- **GPIO:** Select the GPIO port from the drop-down menu to configure.
- **GPIO Settings:**
 - o **I/O:** Select the GPIO type between “Output” and “Input”, and click “Apply” to take effect.

When select "Output":

1. **Pull-up Resistor:** Enable/disable the Pull-up Resistor.
2. **State:** Set GPIO output state to “High” or “Low”.

When select "Input":

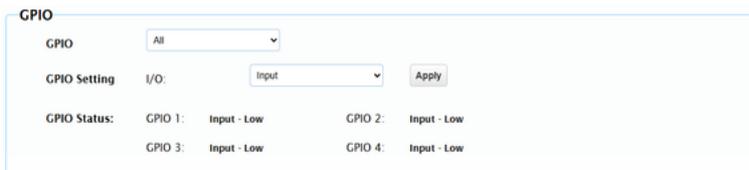


Figure 26: GPIO - Input

- **GPIO Status:** Shows the current GPIO type and status.

8.5.4 Network

1. Network Setting



Network Setting

IP Type: Static DHCP

IP Address:

Subnet Mask:

Default Gateway:

Note: After changing network configuration, please reopen the web page with the new network settings.

Figure 27: Network Setting

The network is used to set the IP mode.

Note:

- When "Static" is selected, please ensure your PC is in the same network segment as the Matrix.
- Please wait for 2-3 minutes for the LAN module to reboot and reconnect after the network setting is changed.

2. Service Capability



Service Capability

Web Service HTTP: ON OFF


HTTPS: ON

Figure 28: Service Capability

This section allows users to set HTTP and HTTPS.

- **HTTP:** Enable/disable the HTTP connection. Default Setting: ON.
- **HTTPS:** HTTPS is supported and CAN NOT disabled.

3. USB to Ethernet Bridge

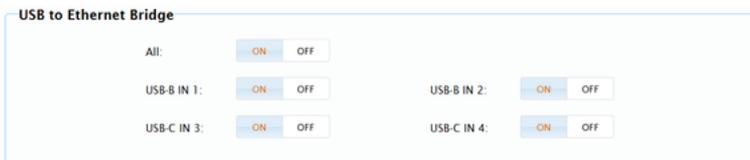

USB to Ethernet Bridge

All: ON OFF

USB-B IN 1: ON OFF

USB-B IN 2: ON OFF

USB-C IN 3: ON OFF

USB-C IN 4: ON OFF

Figure 29: USB to Ethernet Bridge

USB Bridge refers to the USB Network Card.

The device provides four USB network cards on USB-C and USB-B ports.

This section allows users to enable/disable the USB bridge function for each port.

Default setting: ON. When it is set to on, the device connected to the USB-B 1/2 or USB-C 3/4 can access to the network the ETHERNET ports connected.

4. VLAN Mode



Figure 30: VLAN Mode

VLAN settings can help administrators isolate the internal network and the guest network to protect the network security. The device provides **TWO** Ethernet ports, which can be used for VLAN settings.

- **VLAN Mode:** Select VLAN mode from the drop-down menu, and click “Apply” to take effect.
 - o **Transparent:** Network interconnection of all devices.

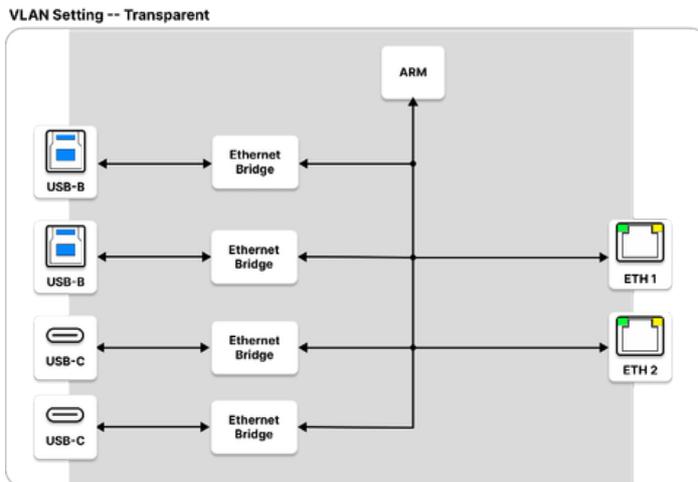


Figure 31: VLAN Setting - Transparent

- o **Separated:** Isolate the device network from the USB NIC network. Only the secure network port, **Ethernet 1**, can access the device's Web UI. Other USB NIC devices are connected to **Ethernet 2**.


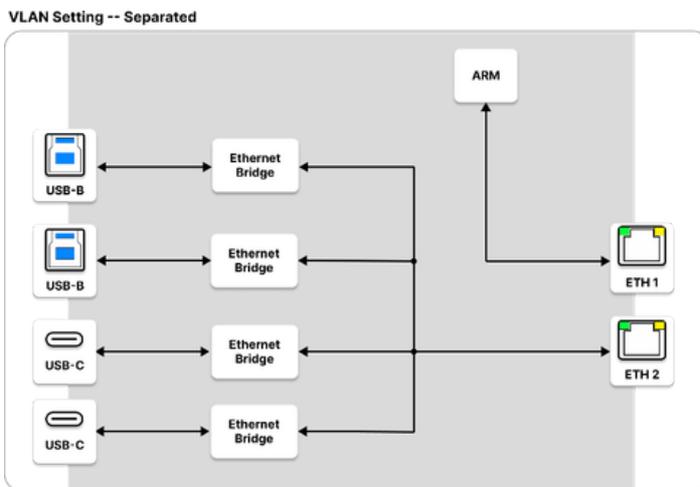


Figure 32: VLAN Setting - Separated

5. 802.1x

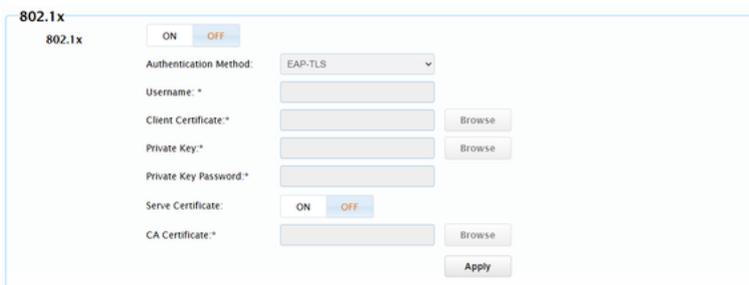

The screenshot shows the "802.1x" configuration page. At the top left, "802.1x" is displayed. Below it, there are two radio buttons: "ON" and "OFF", with "OFF" selected. The "Authentication Method" is set to "EAP-TLS" via a dropdown menu. There are four input fields: "Username:*", "Client Certificate:*", "Private Key:*", and "Private Key Password:*". Each of the last three fields has a "Browse" button to its right. Below these is a "Serve Certificate:" section with "ON" and "OFF" radio buttons, where "OFF" is selected. At the bottom, there is a "CA Certificate:*" input field with a "Browse" button to its right, and an "Apply" button at the very bottom right.

Figure 33: 802.1x

- **802.1x:** Click to enable/disable 802.1x Authentication service. The device supports "EAP-TLS" and "EAP-MSCHAP V2" two mode. Default setting: OFF. When set 802.1x to ON:

802.1x supports authentication based on port and MAC address. The two following authentication methods are offered:

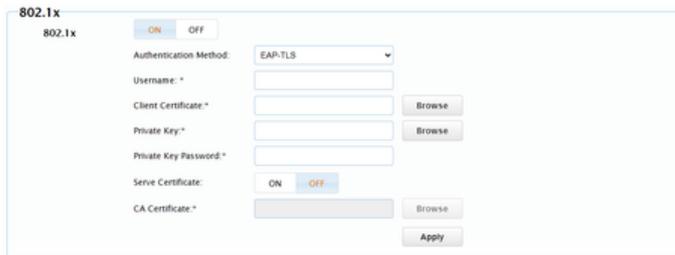


Figure 34: 802.1x – EAP-TLS

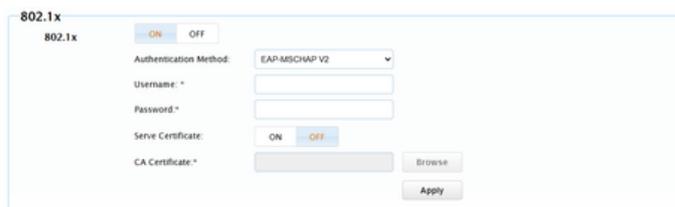


Figure 35: 802.1x – EAP-MSCHAP V2

- **EAP-TLS:** This method requires to submit username, CA certificate, Client Certificate, private key and private key password for authentication.
 - Username require alphanumeric, “-”, “_” and characters within length of 1 to 24 characters, “-” and “_” cannot be at beginning or end.
 - Private Key Password require printable ASCII characters within length of 1 to 24 characters.
- **EAP-MSCHAP V2:** This method requires to submit username and password for authentication.
 - Username require alphanumeric, “-”, “_” and characters within length of 1 to 24 characters, “-” and “_” cannot be at the beginning or end.
 - Password require printable ASCII characters within length of 1 to 24 characters.
- **Server Certificate:** Click to set server certificate to on/off. Default setting: OFF. When it is set to on, users need to submit a CA certificate for authentication.
- **Apply:** Click to perform above settings and reboot the device.

8.5.5 System

1. Login Password



The screenshot shows a form titled "Login Password" with the following fields and controls:

- Old UserName:
- Old Password:
- New UserName:
- New Password:
- Confirm New Password:

Note: Password must be 4 to 16 characters in length and must contain upper and lower case letters and numbers.(alphanumeric only)

Figure 36: Login Password

Default Username&Password: "admin"

-  **Note:** The password must be 4 to 16 characters long, alphanumeric, and include at least one uppercase letter, one lowercase letter, and one number.

2. FW Update



The screenshot shows a form titled "FW Update" with the following controls:

- File:
-
-

Figure 37: FW Update

- 1) Click "Browse" to select the update file from local PC.



The screenshot shows the "FW Update" form with a file selected in the "File" field:

- File: MS0402_N011_000-Whole-V1.0.6.zip
-
-

Figure 38: FW Update - Step 1

- 2) Click "Upgrade" to start the upgrading.

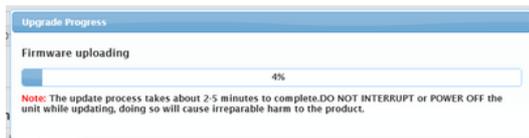


Figure 39: FW Update - Step 2)

- 3) When the upgrade is success, the following window pops up. Click “OK” and refresh the web page to re-login web UI.



Figure 40: FW Update - Step 3)

Note: DO NOT power off the device during the updating process.

3. Configuration Import and Export



Figure 41: Configuration Import and Export

- **Export Settings:** Click to export the settings file to the local PC.
- **Import Settings:** Click to import the settings file from the local PC and apply the imported settings.

4. Restore Factory



Figure 42: Restore Factory

- **Factory Default:** Click to set the device to factory defaults.
- **Reboot:** Click to reboot the device.

5. Version

Version		
ARM: V1.1.2	USB-C VIDEO: V1.4.0	CPLD: V1.0.5
Main: V1.1.2	HDMI: V3.3.8	
USB-C CC: V1.0.3	HDDBT 3.0: V5.4.87	

Figure 43: Version

This section shows the device's firmware version information.

6. Log

Log

[Export Log](#)

Note: Please wait a few moments for log retrieval.

```

10:13:06 Receive : CPLD 1.0.5
10:13:06 Receive : HDDBT_3.0 5.4.87
10:13:06 Receive : USB_C_CC 1.0.3
10:13:06 Receive : HDMI 3.3.8
10:13:06 Receive : USB_C_VIDEO 1.4.0
10:13:06 Receive : ARM 1.1.2
10:13:06 Receive : MAIN 1.1.2
10:13:06 Send : GET VER ALL

```

Figure 44: Log

This section displays system setting change records.

Export Log: Click to download the log file to the local PC.

Note: Please wait for a few moments for log retrieval.