

NEW**PATENT**


ARC LOCK

Adjustable Standoff Glass Railing System




Installation Guide

Step 1.
Drill holes.

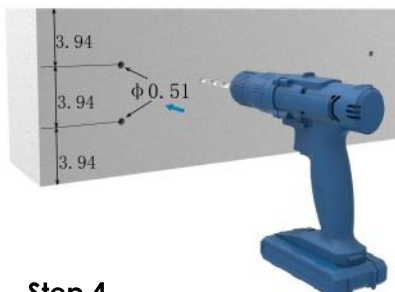


Step 2.
Use anchor bolts or wood screw to secure the base.

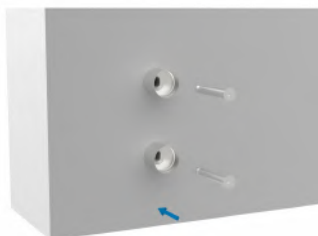

Step 3.
Install the stand off body and T-profile gasket.




Step 4.
Install the glass.

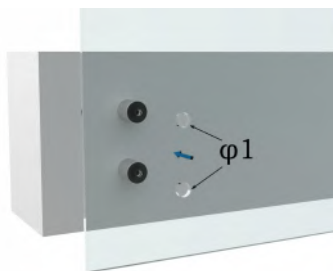

Step 5.
Install the gasket and cap.



Step 6.
Check if the glass is aligned.

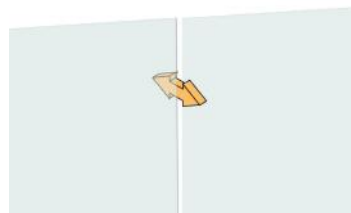

Step 7.
When the glass is NOT aligned, use allen hex tool to adjust the body without removing the glass. Front and rear angle adjustment range is $\pm 2^\circ$.



Step 8.
ARC LOCK's unique "gyro" design allows the glass to be adjusted 360° to match the actual installation.



Step 9.
Once the glass is aligned, reinstall the gasket and cover. And use the tool to tighten it.



Step 10.
Finish.

