


GUARD

Semi-frameless Aluminum Post Glass Railing System Sample




INSTALLATION GUIDE


Step 1.
Tighten post to deck by screws through the holes dig in advance.

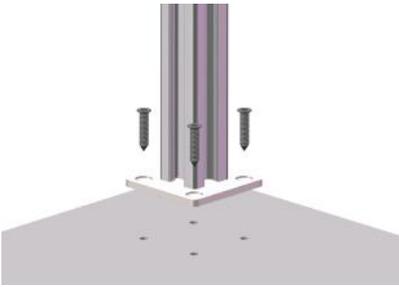


Step 2.
Install the bottom infill and rubber block.

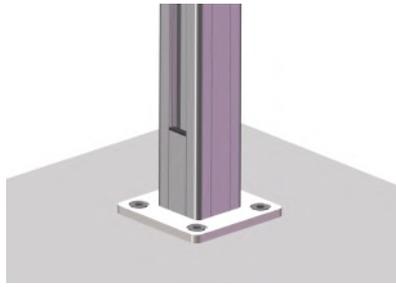


Step 3.
Install and insert the outside rubber strip along the slot on the post.

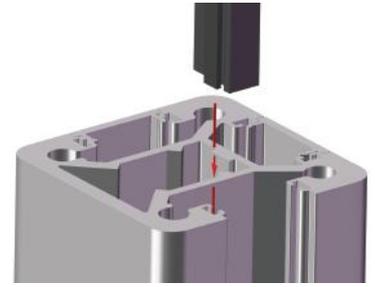


Step 4.
Slide the glass panel from the side or top.

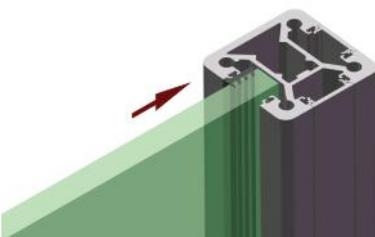




Step 5.
Insert the inside rubber strip.

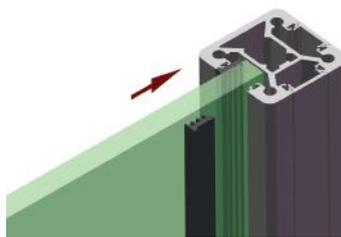

Step 6.
Place the cap in position.

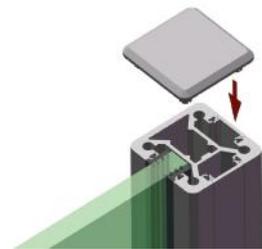

Step 7.
Fit the cover plate.

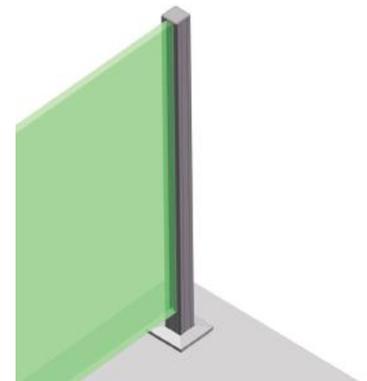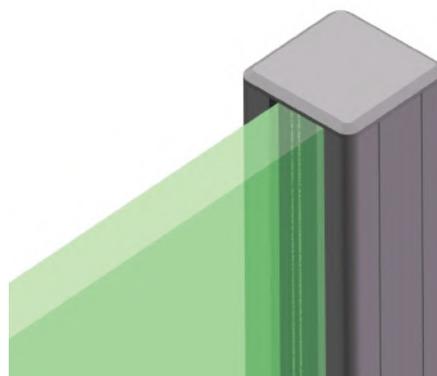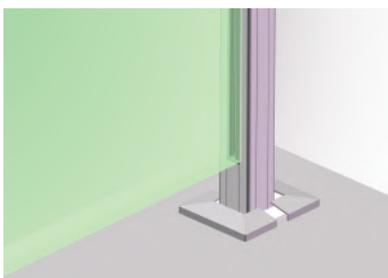

*Snap-on Cover Plate for Powder Coating finish only.