




## WHAT YOU NEED

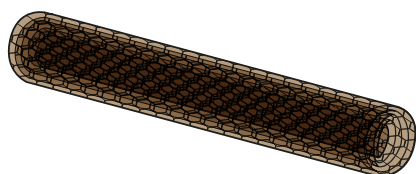

Maccaferri RENOMESH rolls




Pneumatic fastening tool



C-Ring



Steel pins  $\varnothing$  6/8 mm


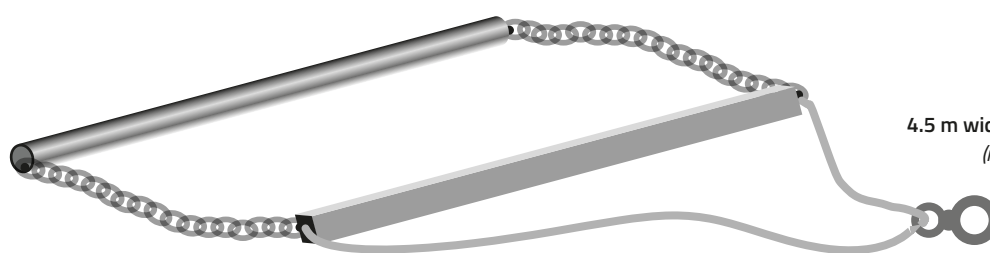


4.5 m wide lifting equipment  
(not included)

## 1

## SITE PREPARATION


1. Grade and lightly compact the slope to an even surface, filling in surface depressions as required;

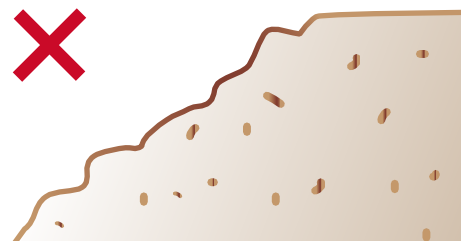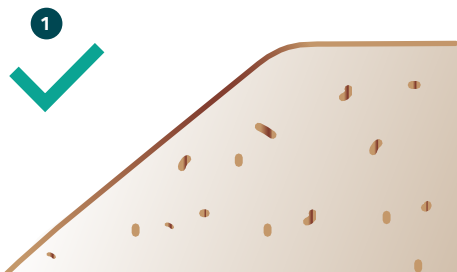


## 2

## PRELIMINARY STEPS

1. Unload RENOMESH rolls;
2. (Optional) position the lower bar of the lifting equipment inside the roll;
3. (Optional) fasten the lifting equipment to the excavator/crane;

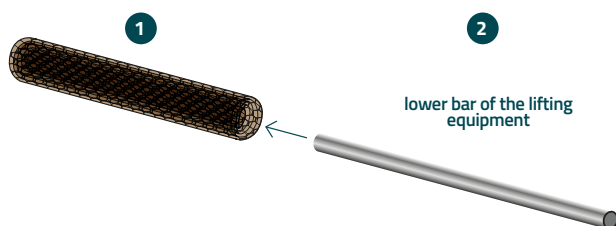

lower bar of the lifting equipment

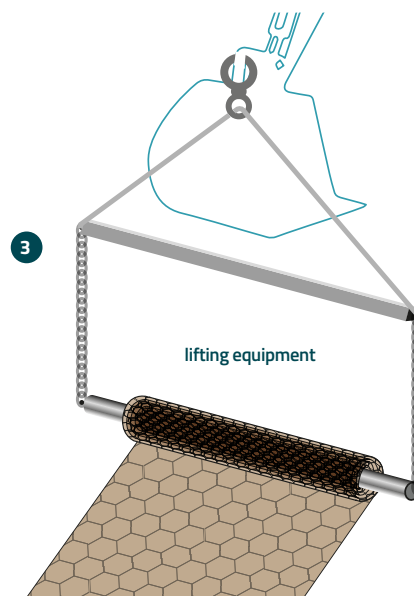



# RENOMESH

## INSTALLATION SHEET

3

### DT MESH SETTING


1. Anchor one mesh extremity to the ground using **steel pins**;
2. While unrolling the mesh roll, apply **some weight** on it in order to make it fit together with the ground;
3. After the unrolling of 20 m, anchor the mesh sticking the **steel pins** into the ground (1 pins each m<sup>2</sup>).

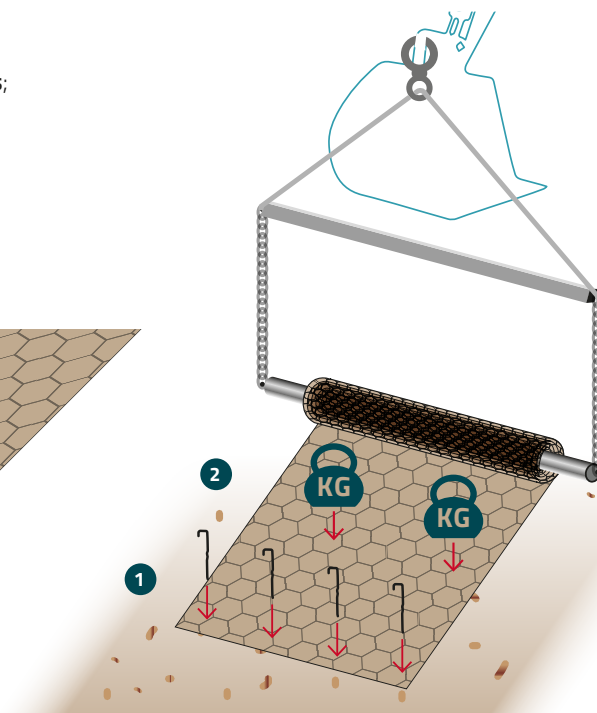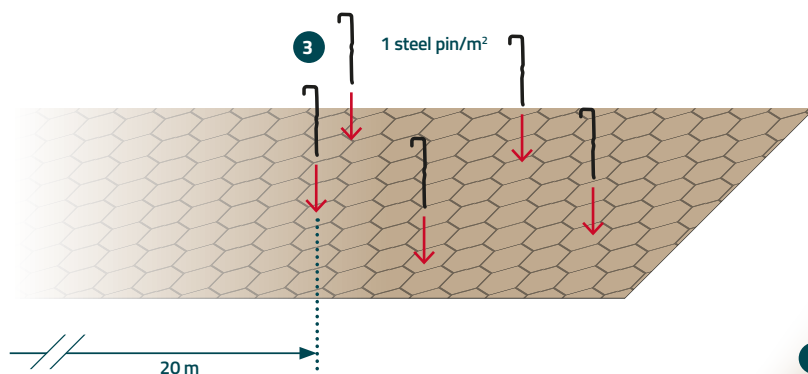

4

### MESH TO MESH JUNCTION

1. Bring closer the longitudinal edges of the two mesh rolls;
2. Fasten together with **C-Rings** the two mesh edges.

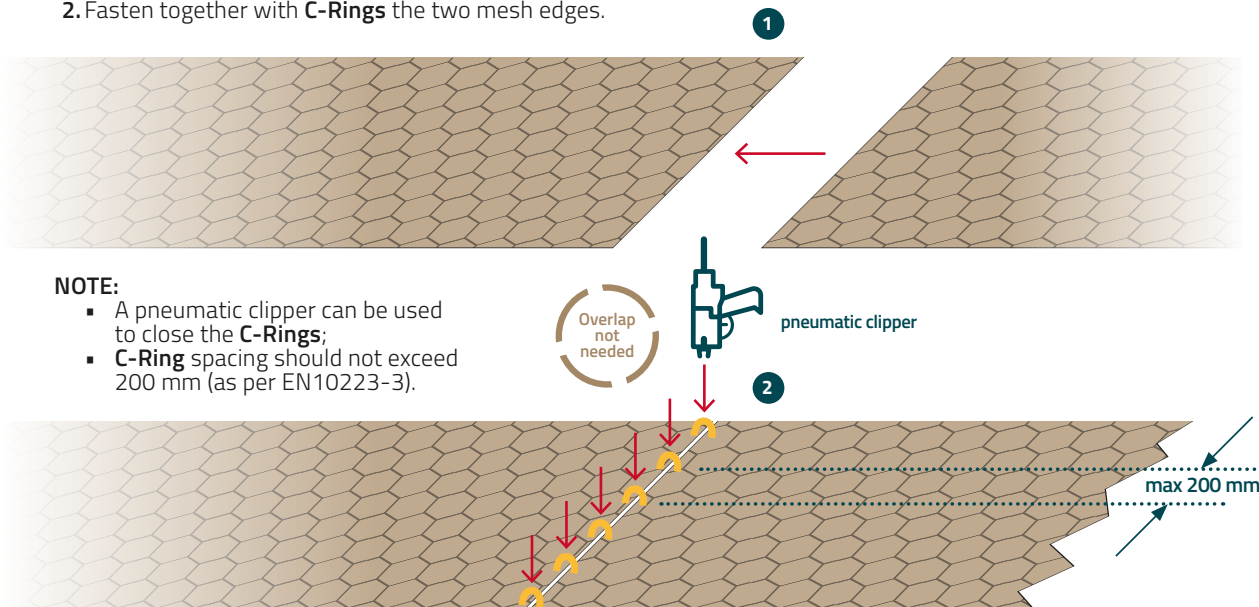

#### MACCAFERRI ROMANIA S.R.L

Strada Nicolae G.Caramfil, nr.53, et.5, Sector 1  
 014145, Bucuresti, Romania  
 T: +40 21 7942220  
 E: info.ro@maccaferri.com

maccaferri.com/ro