


# GREEN TERRAMESH

## INSTALLATION SHEET

MACCAFERRI

### WHAT YOU NEED

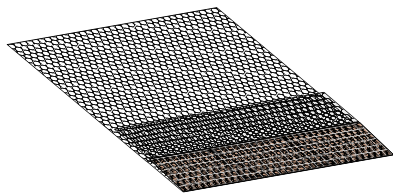

Bundle of Green Terramesh



Pneumatic fastening tool




C-Ring

1

### BUNDLE UNBOXING


Each individual **Green Terramesh unit** will be removed from the bundle; unfold the unit flat on the ground and stretch the unit making sure all the creases are in correct position for forming the System.

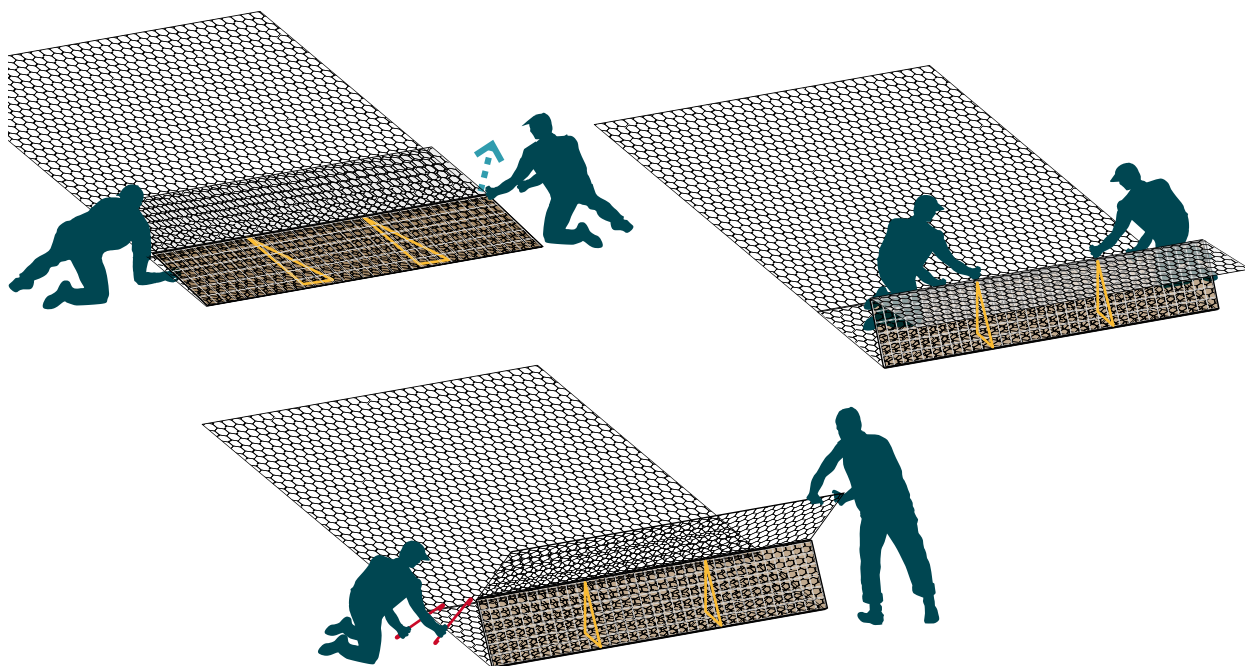

2

### ASSEMBLING

The front section shall be lifted up and all the components shall be placed and fastened together (open the triangle and install the steel ties) in order to give the required slope angle as per design specification. Two adjacent GTM units shall be connected with C-Rings with maximum spacing of 200 mm (according to EN-10223-3).

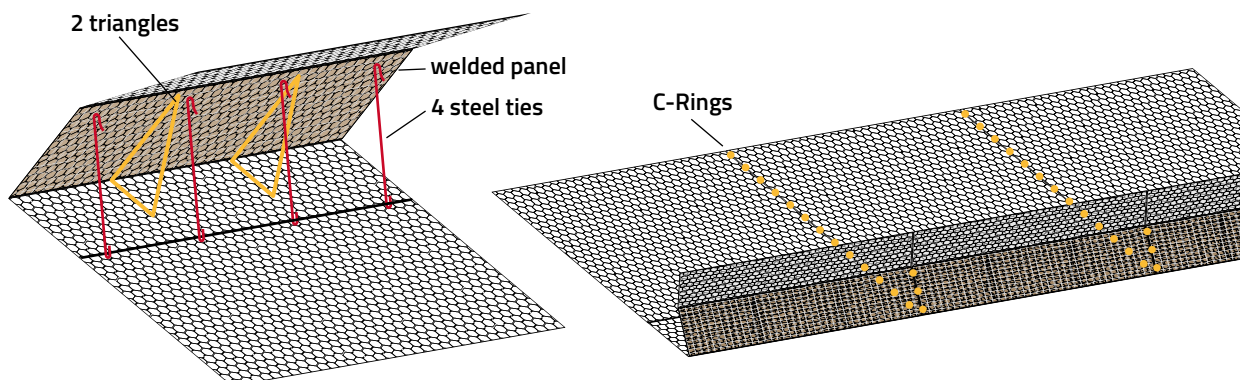


# GREEN TERRAMESH

## INSTALLATION SHEET

3

### VEGETATIVE SOIL PLACEMENT


Vegetative soil shall be placed on the back of the facing element with a thickness of approximately 50 cm. Suitable packing density in the topsoil must be achieved by using a hand steel tamper or similar in order to not have voids behind the facing. Irrigation of the surface may be required if dry weather conditions occur.

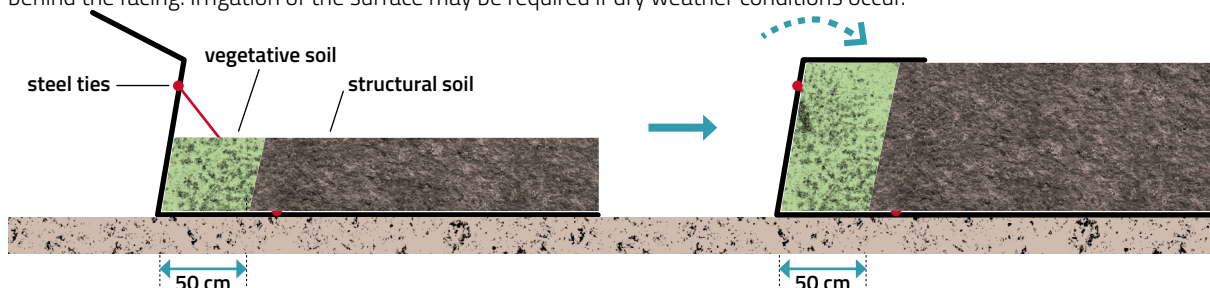

4

### PLACING AND COMPACTION OF THE STRUCTURAL BACKFILL

Compaction shall be performed to min. **95% of Standard Proctor** or as indicated on the construction drawings. Great care should be taken when placing, spreading and compacting fill to ensure that heavy machinery is kept away from the area immediately behind the **Green Terramesh units** for 1 m.

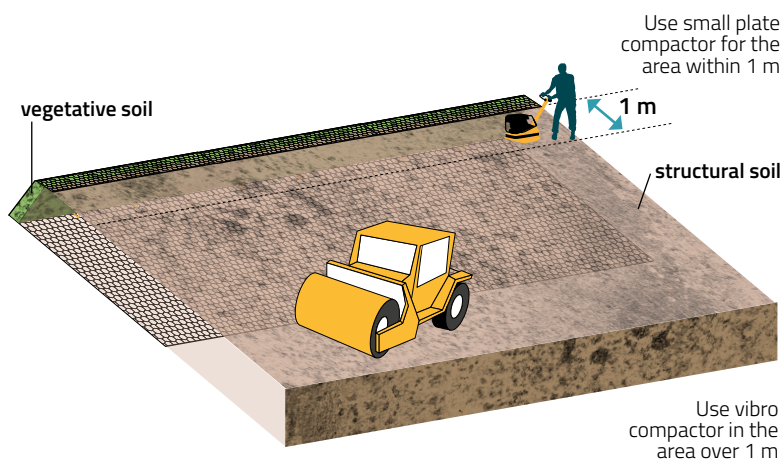


5


### VEGETATION TECHNIQUES



**Vegetative soil**  
Special care shall be taken to ensure good quality of the topsoil

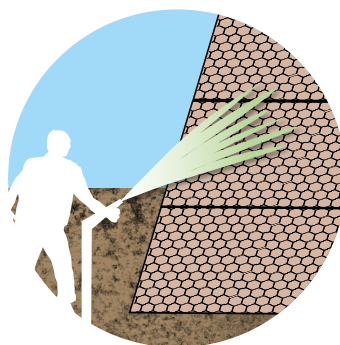

**Hydroseeding**  
By applying a proper mixture of seeds, bonding agents, organic material and mulch

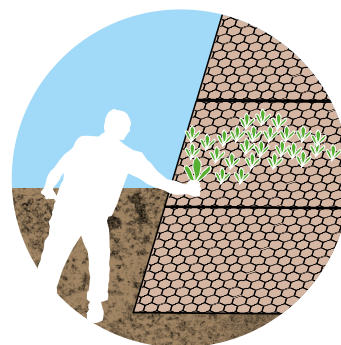

**Manually plant live stakes**

NOTE: for additional info please refer to the installation manual.

Maccaferri Ltd

T: +(44) 01865 770 555  
E: info.uk@maccaferri.com

maccaferri.com/uk