


RENO MATTRESS PLUS

INSTALLATION SHEET

MACCAFERRI

+ Reno Mattress Plus
with X-Ties

WHAT YOU NEED

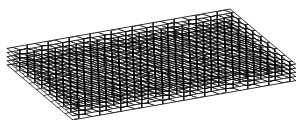


Bundle of Reno Mattress Plus



Pneumatic fastening tool



MacRing

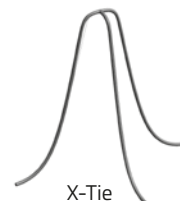


X-Tie

1

BUNDLE UNBOXING

Each unit of Reno Mattress Plus will be removed from the bundle; unfold the Reno Mattress on the ground and stretch the unit making sure all creases are in the correct position to form the box.

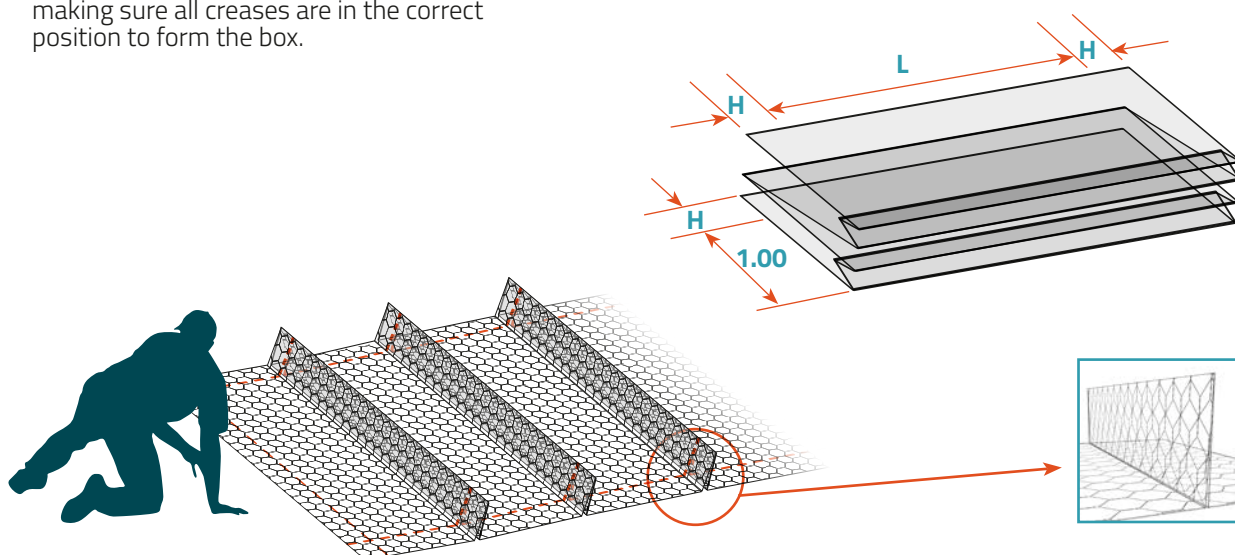
2


RENO MATTRESS PLUS ASSEMBLING

Folded diaphragms shall be lifted to a vertical position to form an open box shape; end flaps shall be folded and/or overlapped as appropriate.

Panels shall be fastened together with MacRings around the selvedge, or edge of the intersecting panel, or back panel.

A pneumatic clipper can be used to close the MacRings.

MacRing spacing has not to exceed 200 mm (as per EN10223-3).

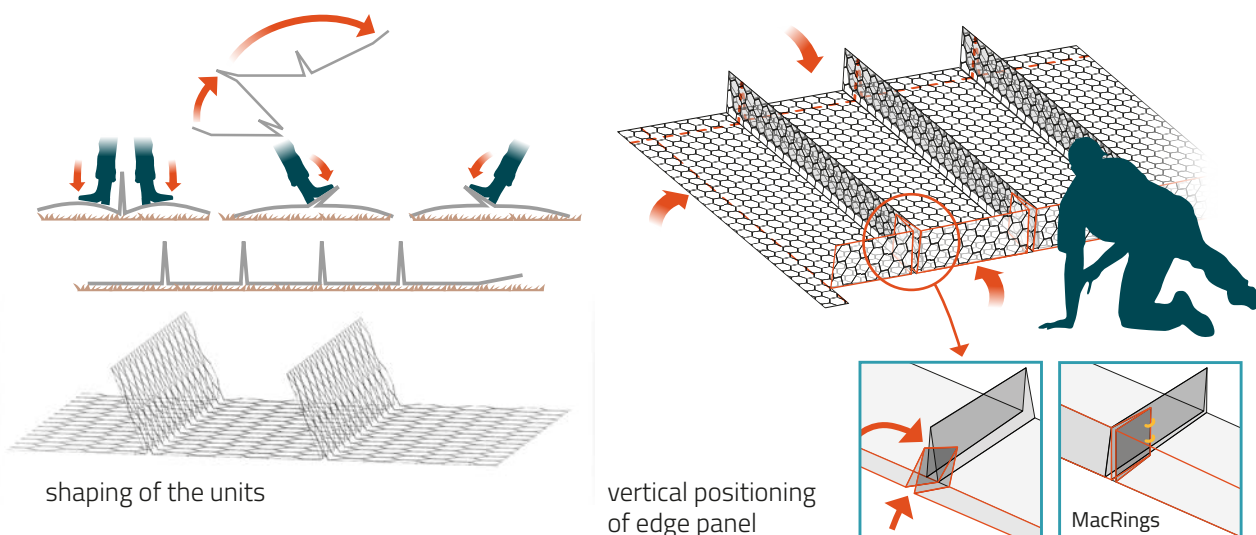

RENO MATTRESS PLUS


INSTALLATION SHEET



Place the X-Ties in the Reno Mattress Plus (X-Ties are included in the Reno Mattress Plus kit)

A minimum of one X-Tie per square meter of mattress is recommended.


X-Ties are self-standing hence making the installation easier.

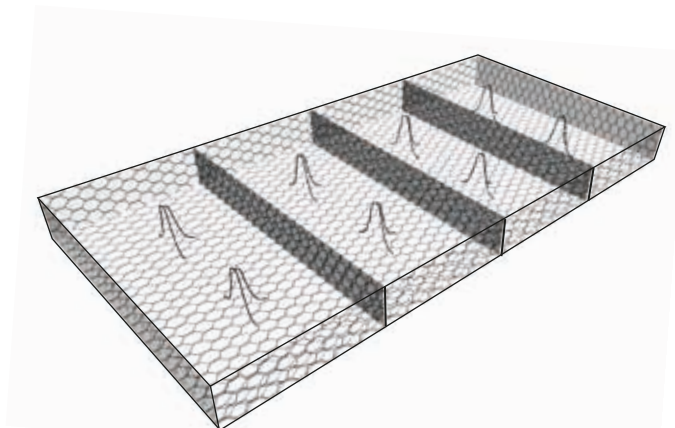

3

FILLING


Once the mattress has been assembled, each cell can be filled with stones.

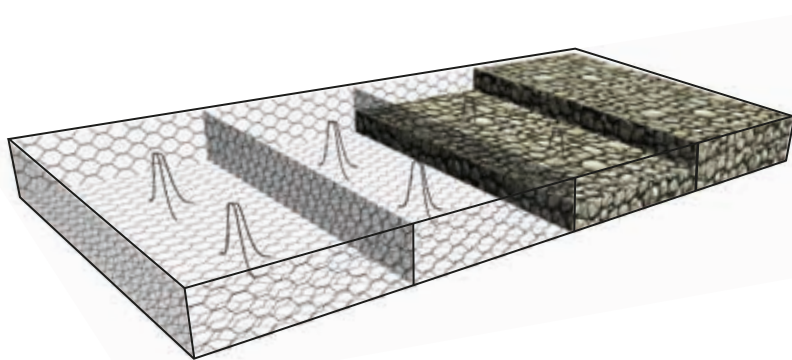

4

CLOSING

Place the lid on top of the filled Reno Mattress Plus. Connect the lid with the lateral faces through MacRings (max spacing 200 mm) and with X-Ties (2 MacRings per X-Tie). Connect the lid to the lateral faces through MacRings

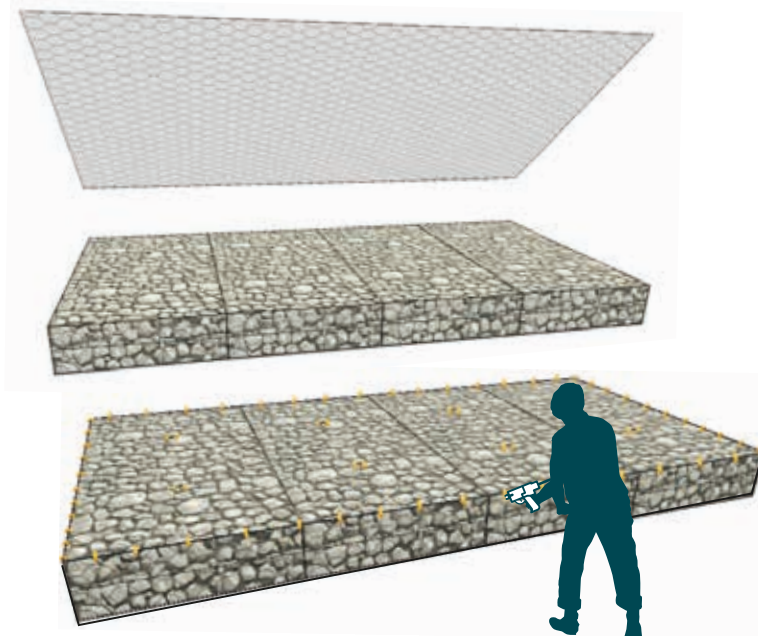

MACCAFERRI ROMANIA S.R.L

Strada Nicolae G.Caramfil, nr.53, et.5, Sector 1
014145, Bucuresti, Romania
T: +40 21 7942220
E: info.ro@maccaferri.com

maccaferri.com/ro