

Model W93 Overhead Concealed Closer

Non-Hold Open and Hold Open

Wood Frame Installation Instructions

RIXSON[®]

ASSA ABLOY

WARNING


This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

Pour la version française voir www.nortondoorcontrols.com.


READ AND FOLLOW ALL INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

Model W93 (Left Hand shown)


Center Pivot Hung

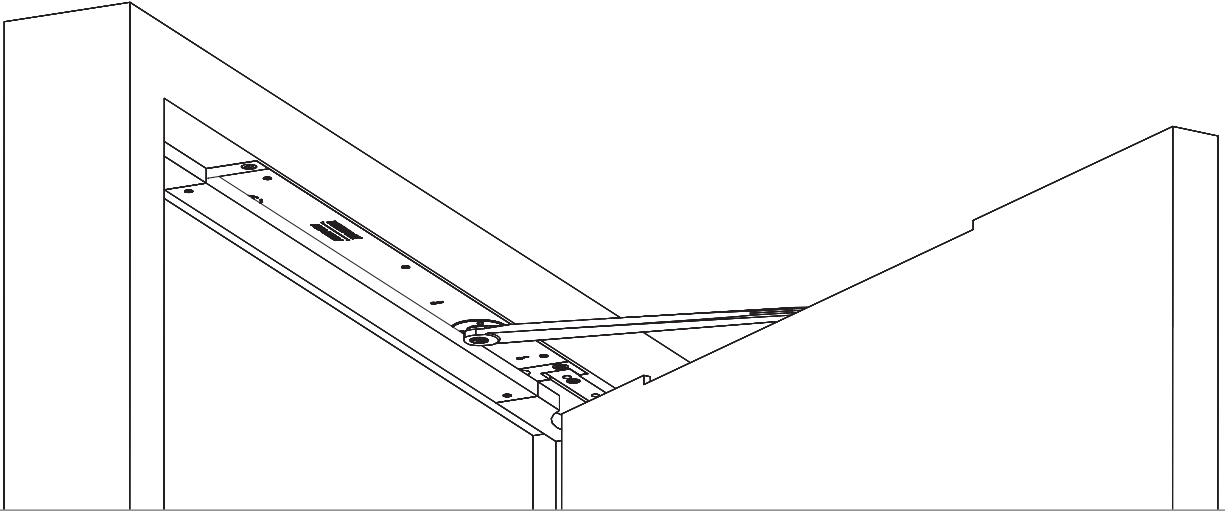

Components

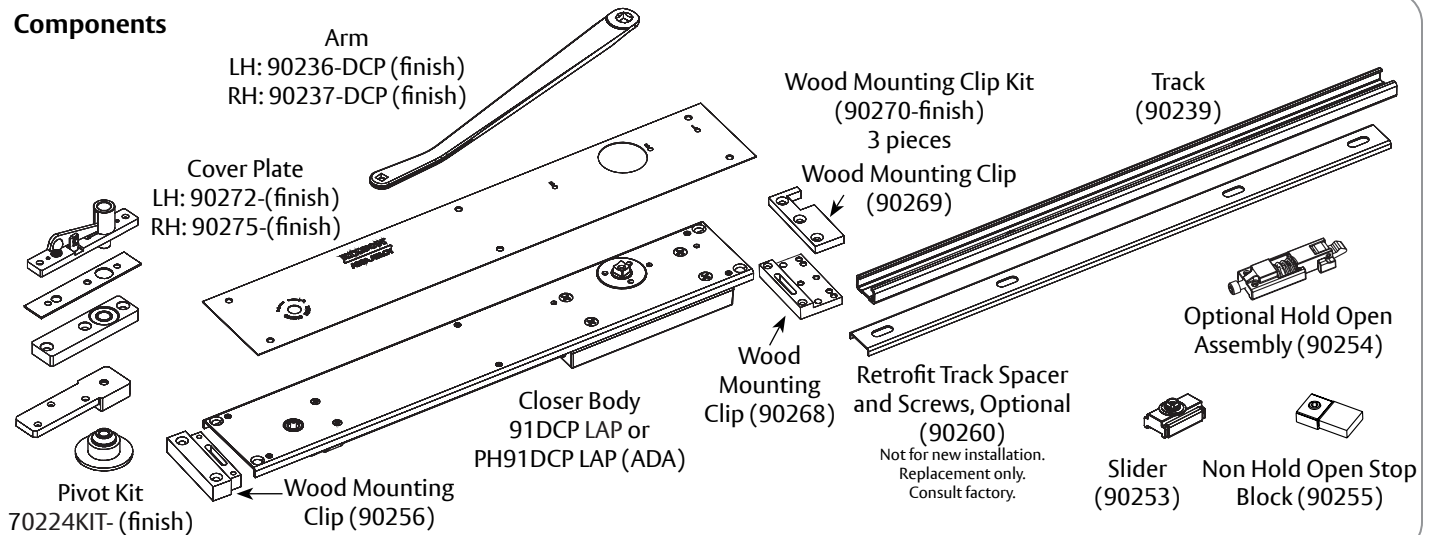

Tools Needed

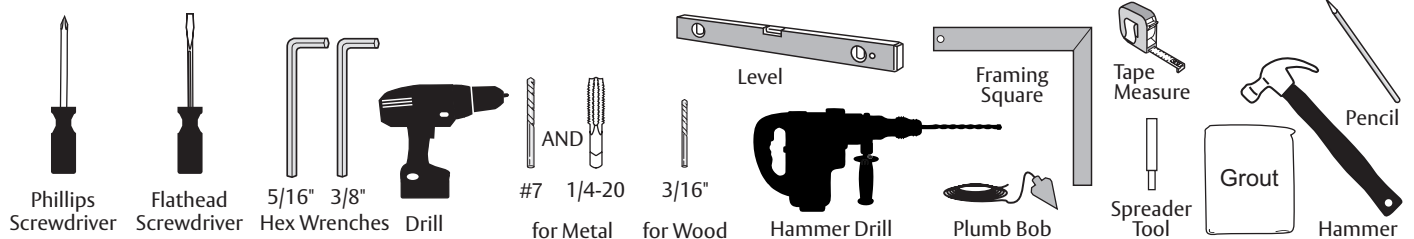

Contents

Important.....	2
Before You Begin	2
Mounting Hardware and Drill Table.....	2
Supplied Fasteners	3
Pivot Installation	4
Track Installation	6
Closer Installation	7
Adjustments	9
Closer and Pivot, Wood Frame Template	11-12





IMPORTANT:

- An improperly installed or incorrectly adjusted door closer may cause **property damage** or **personal injury** and will void product warranty.
- To avoid personal injury, **DO NOT DISASSEMBLE THIS DOOR CLOSER BODY.**
- Door closers must be securely fastened to a prepared door and frame with fasteners provided.
- HOLD OPEN option not permitted to be installed in fire door assemblies.

Before You Begin:




- The Americans with Disabilities Act (ADA) requires that doors having door closers have an opening force not to exceed 5 lbf.
- Door closer's power size adjustment feature may require adjustment to its lowest setting to comply with ADA opening force guidelines.
- **ADA compliant closers may not latch doors, manufacturer does not guarantee latching on lower opening force settings.**
- A separate Rixson Surface Checkmate® or other door stop, supplied by others, is strongly recommended to avoid damage to door closer and adjacent property.
- Doors should be hung on ball bearing or anti-friction hinges/pivots. Door must swing freely. For other hanging means a special layout may be required, consult factory.
- Door and frame must be reinforced for attaching screws.
- All dimensions are given in inches (millimeters).


Mounting Hardware		Door / Frame	Drill
	Closer, Top Pivot and Bottom Pivot: #14 x 1-1/2"	Wood	3/16" (4.76mm)
	Closer, Top Pivot and Bottom Pivot: 1/4-20 x 5/8"	Metal	Drill #7 (.201 dia. or 5.10mm) Tap 1/4-20
	Track: #14 x 1-1/4"	Aluminum or Wood	3/16" (4.76mm)
	Track: 1/4-20 x 7/16"	Hollow Metal	Drill #7 (.201 dia. or 5.10mm) Tap 1/4-20

Supplied Fasteners

Top Pivot Screw Pack (70242-finish)



5x
1/4-20 x 5/8"
PFHMS
Pivot




5x
#14 x 1-1/2"
PFHWS
Pivot




2x
8-32 x 1/4"
PFHUCMS
Finish Plate


Bottom Pivot Screw Pack (70243)




4x
1/4-20 x 5/8"
PFHMS
Pivot



4x
#14 x 1-1/2"
PFHWS
Pivot

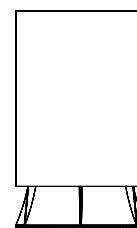

1x
3/8-16 Female
Threaded
Drop-in Anchor




1x
3/8-16 x 2-1/4"
SHCS
Base Plate

Cover Plate Screw Pack (90278-finish)




6x
6-32 x 1/4"
PFHMS
Cover


Closer Screw Pack (90241)




4x
1/4-20 x 5/8"
PFHMS
Closer Body




4x
#14 x 1-1/2"
PFHWS
Closer Body

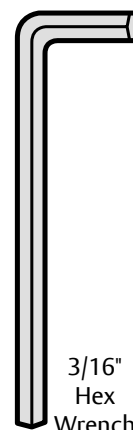

3/16"
Hex
Wrench

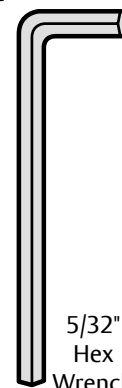

5/32"
Hex
Wrench




1/8"
Hex
Wrench

Closer Track Screw Kit (90242)



4x
1/4-20 x 7/16"
PFHUCMS
Track




4x
#14 x 1-1/4"
PFHWS
Track

Arm Screw Pack (90283-finish)



2x
1/4-20 x 1/2"
PFHMS
Arm Attach

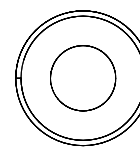

1x
Conical
Washer
Arm Attach

Installation

A. Prepare frame and door.

1. Using supplied templates, prepare and mortise door and head jamb for pivot set. (Figure 1)
2. Confirm all cutout dimensions for closer.



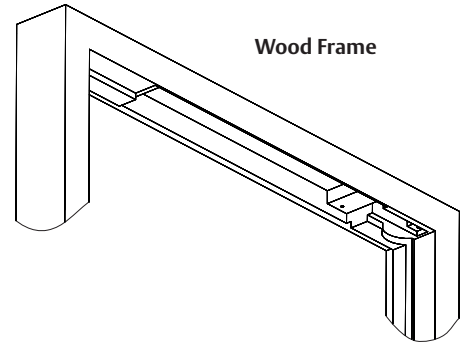


Figure 1

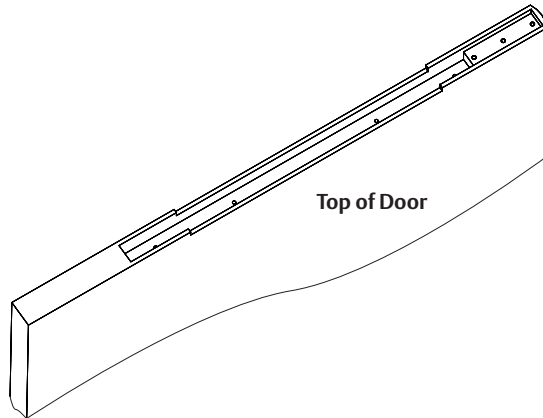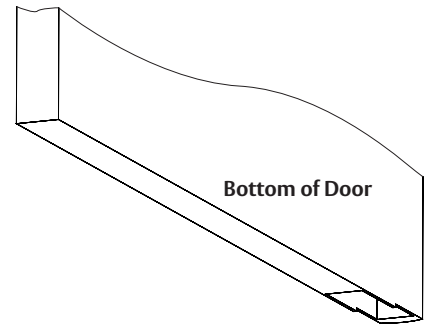

Bottom of Door

B. Install wood mounting clips.

1. Drill pilot holes into frame.
2. Install clips with four (4) #14 x 1-1/2" wood screws. (Figure 2)

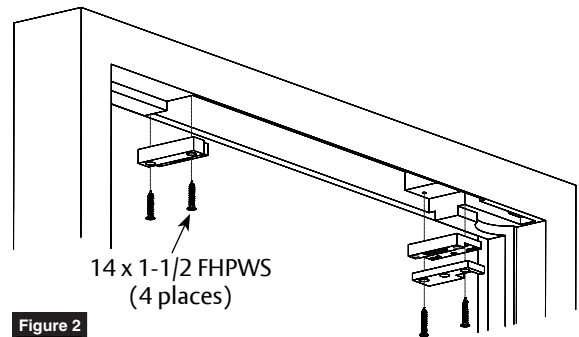



Figure 2

14 x 1-1/2 FHPWS
(4 places)

C. Install top pivot set.

1. Install jamb portion in prepared frame with one (1) #14 x 1-1/2" wood screw into frame and one (1) 1/4-20 x 5/8" machine screw into mounting clip. (Figure 3)
2. Install door portion in prepared door with three (3) #14 x 1-1/2" wood screws or 1/4-20 x 5/8" machine screws. (Figure 3)
3. Attach finish plate to jamb portion with two (2) 8-32 x 1/4" machine screws. (Figure 3)

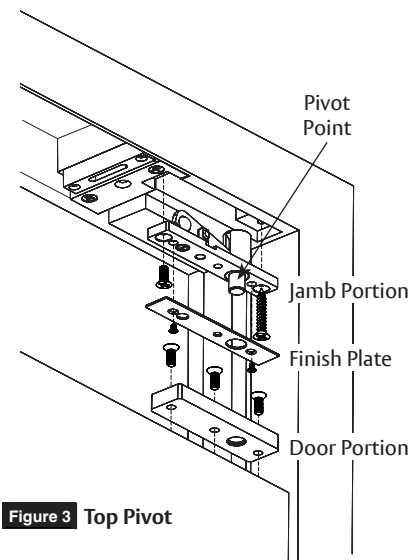




Figure 3 Top Pivot

Installation

D. Install bottom pivot set.

IMPORTANT: Pivot point of bottom pivot must be plumb with top pivot point. Be sure to properly locate and mark pivot center point of bottom base plate.

1. Install door portion into prepared door with four (4) 1/4-20 x 5/8" machine screws or #14 x 1-1/2" wood screws. (Figure 4)

NOTE: Depth of mortise in door bottom will determine clearance.

2. Using a plumb bob attached to top pivot, locate and mark position of base plate on floor.
3. Drill 3/4" dia. x 1-3/4" (19 x 44mm) deep hole in floor on center of pivot point for base plate mounting.

IMPORTANT: It is critical to door alignment and proper frame clearance that this anchor hole is positioned within 1/32" of true plumb alignment with the top jamb portion pivot point.

4. With open side up, place drop-in anchor into floor hole. If necessary, tap lightly with hammer until anchor is at bottom of hole.

NOTE: Clean all concrete dust from hole before installing drop-in anchor.

5. Set anchor by striking spreader tool with hammer until the sleeve of the anchor is fully expanded. (Figure 5)
6. Insert provided base plate screw into anchor to plug opening.

NOTE: Apply grease to base plate screw to prevent grout from sticking to screw and to facilitate removal.

7. Grout anchor into place. After grout has set, remove base plate screw.
8. Place base plate over anchor and securely fasten to floor with base plate screw.
9. If using a threshold, install it at this time.

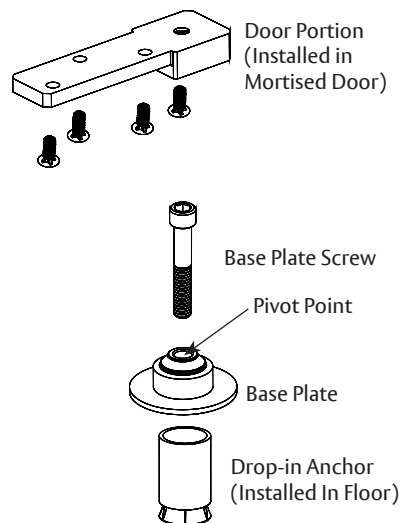


Figure 4 Bottom Pivot

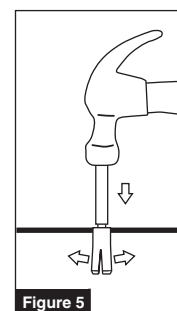


Figure 5

Installation

E. Hang door.

1. Ensure pivot stud is fully retracted into pivot by turning pivot adjustment screw counter clockwise with a flathead screwdriver. (Figure 6)
2. With door in open position about 90° to jamb, carefully fit door onto bottom pivot at a slight angle. (Figure 7)
3. Tip door into vertical position aligning frame portion pivot stud to door portion hole. (Figure 8)
4. With top pivot stud aligned with door portion hole, use a flathead screwdriver to turn pivot adjustment screw clockwise to extend pivot stud into door pivot portion. (Figure 9)

! IMPORTANT: Fully tighten adjustment screw to ensure pivot stud is fully extended into door portion. There is a door tipping hazard until door is held vertical by pivot stud.

5. Verify frame is square by using a framing square. Gaps between door and frame should be consistent. Gap should be 1/8" (3mm) at jamb and header. (Figure 10)

NOTE: Door should swing freely.

- If vertical height adjustment is necessary, use shims between door bottom and bottom pivot portion to increase clearance.
- To decrease clearance, increase mortise in bottom of door.
- To remove door, retract pivot stud and tip door out of vertical position then lift door from bottom pivot.

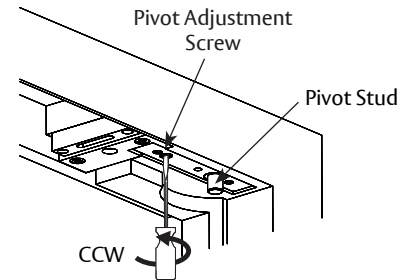


Figure 6

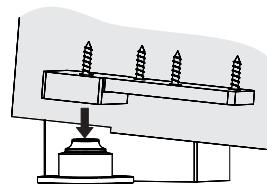


Figure 7

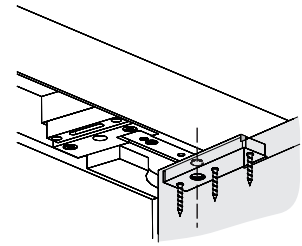


Figure 8

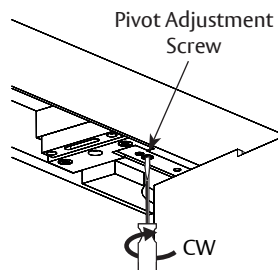


Figure 9

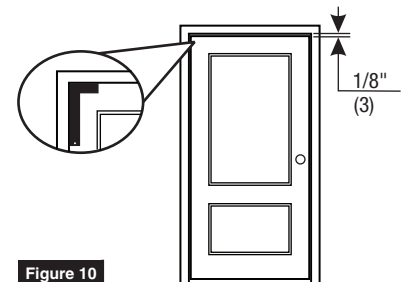


Figure 10

F. Assemble track.

1. Slide track components into track. (Figure 11)

NOTE:

- All track components must be placed in track before installing track into door.
- Insert slider into track first.
- Stop block (or optional hold open) should be last component at hinge side of door.
- The longer end of slider should be pointed towards hinge side of door.



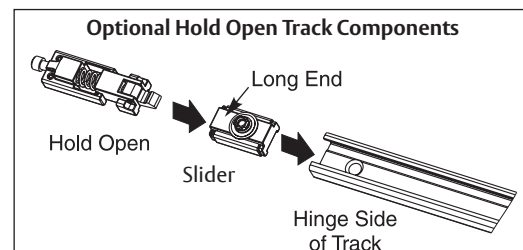


Figure 11

Installation

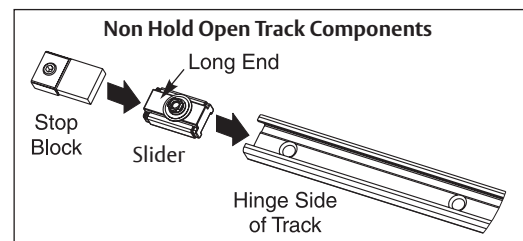

G. Install track to door.

1. Make sure slider and track components are installed prior to installing track to door.
2. Install track and, if necessary, optional spacer (replacement application only, consult factory) using four (4) #14 x 1-5/8" FHPWS screws provided. (Figure 12)


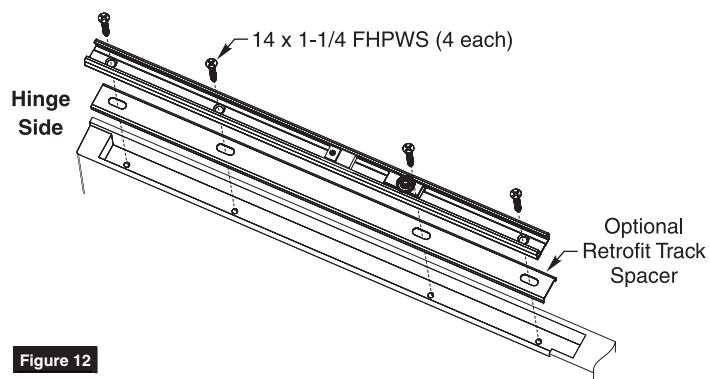


Figure 12



H. Install closer.

1. Install closer into wood mounting clips with four (4) 1/4-20 x 5/8" machine screws. (Figure 13)

NOTE: Mounting plate should be flush with frame soffit.

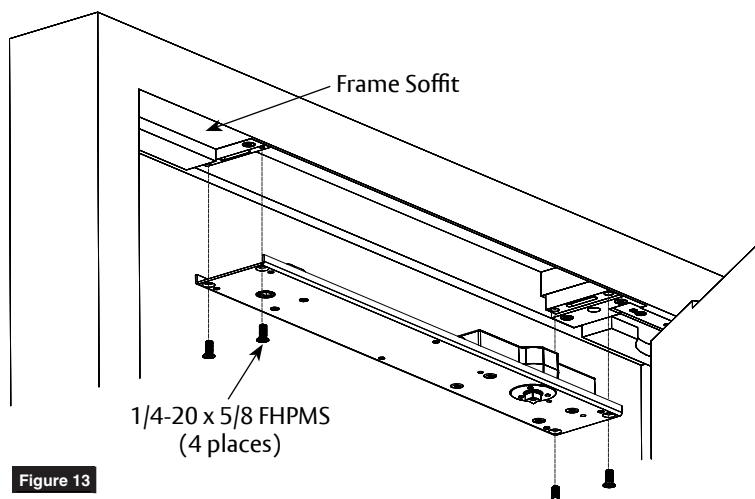


Figure 13



I. Install cover plate.

1. Install cover plate to closer mounting plate with six (6) 6-32 x FHPMS mounting screws provided. (Figure 14)


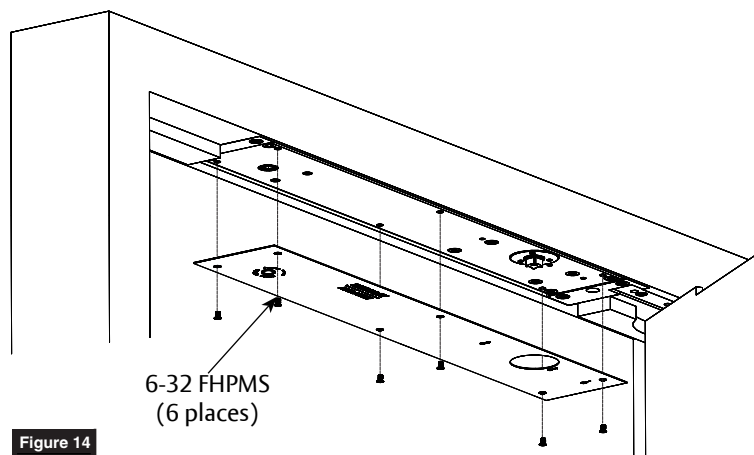


Figure 14

Installation

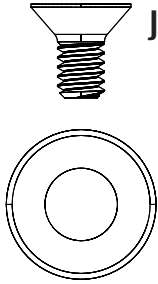

J. Attach arm to closer.

1. Attach arm to closer shaft with 1/4-20 x 1/2" machine screw and washer. Tighten securely. (Figure 15)



IMPORTANT: Arm should rest at 15° away from door side of closer mounting plate. Arm always rotates in direction of door.


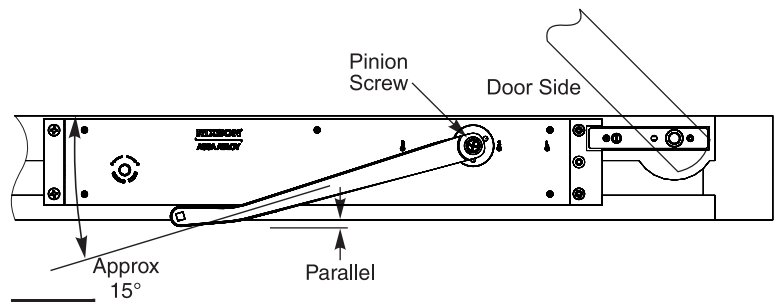


Figure 15



K. Attach arm to track.

1. With provided 1/8" hex wrench, completely tighten latch and sweep valves by turning screws clockwise. This will allow for an easier closer-to-door connection. (Figure 16)
2. Open door to about 45° then rotate arm over to door.

NOTE: Arm should maintain position because latch and sweep valves have been tightened.

3. Align slider square with arm square and connect using 1/4-20 x 1/2" machine screw. (Figure 17)

NOTE: If you choose to open door beyond 45°, backcheck may need to be adjusted counter clockwise to easily rotate arm to door position.

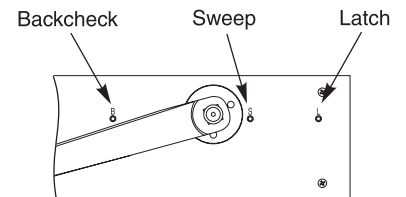


Figure 16

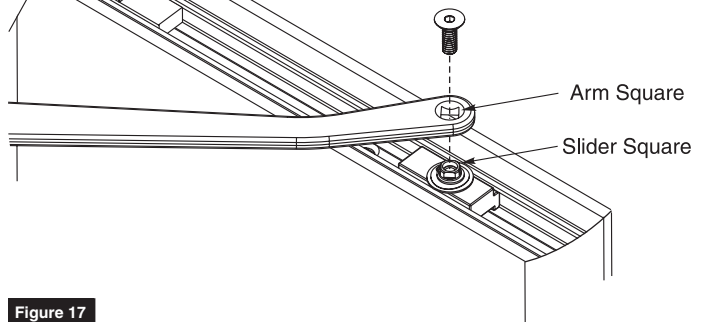


Figure 17

Adjustments

Speed Adjustment

Use provided 1/8" hex wrench to adjust sweep, latch and backcheck valves to control speed of door. (Figure 18)



NEVER completely close backcheck valve.
NEVER use backcheck as a dead stop.
NEVER fully open valves. Valves will leak.
Do not use a power drill.
Warranty will be void.

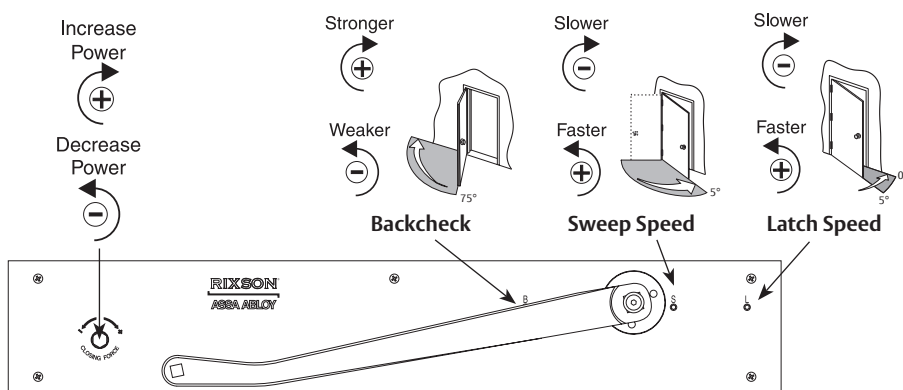


Figure 18

Closing Force Adjustment

If additional force is needed, use 3/8" hex wrench to adjust closing force. (Figure 19)



Do not use a power drill.
Warranty will be void.



All 93 Series closers are factory set to minimum force. Adjust closer as necessary for more force taking into consideration door size, weight, positive room pressure, etc.

Spring Power Adjustment for Closing Force (Closer shipped at lowest setting)			
Model PH93		Model 93	
Closer Size	Approx # of 360° Turns	Closer Size	Approx # of 360° Turns
ADA	0	3	0
1	15	4	17
2	30	5	25
3	55	6	32

Figure 19

Optional Hold Open Adjustment

1. Insert locking tab of hold open assembly into track slider. (Figure 20)

NOTE: Hold open assembly should be on hinge side of track slider.

2. Open door to desired hold open position.
3. Tighten hold open set screws to lock down hold open assembly.
4. Pull door in closing direction to disengage hold open assembly and track slider.
5. Adjust hold open by turning adjustment screw with provided 3/16" hex wrench.

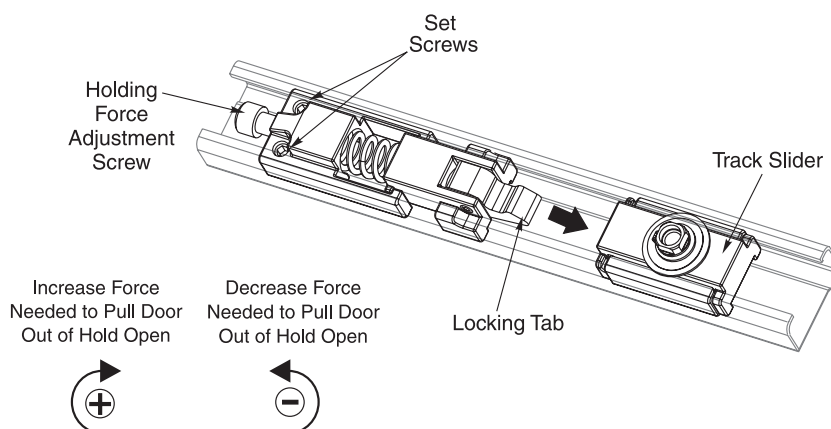


Figure 20



NOTE: THIS FEATURE CANNOT BE USED ON FIRE-RATED DOORS

The ASSA ABLOY Group is the global leader in access solutions. Every day we help people feel safe, secure and experience a more open world.

Installation

L. Install removable stop.

After closer is installed and all adjustments are complete, install removable stop. (Figure 21)



NOTE: DO NOT drill holes into closer cover plate.

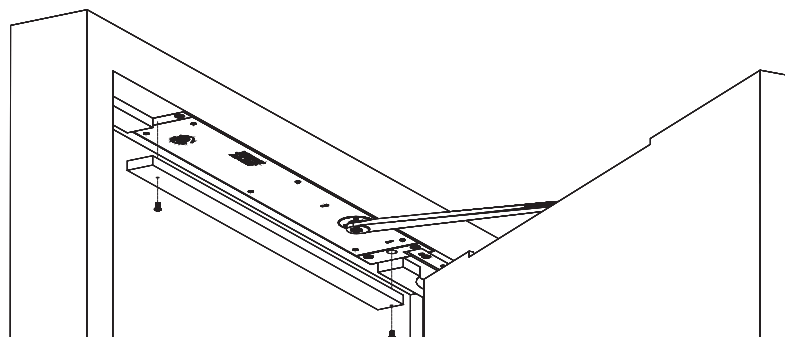


Figure 21

You've now installed the **Model W93 Overhead Concealed Closer**.

Troubleshooting


Symptom	Cause	Remedy
Door won't latch	Spring tension not strong enough	Increase opening force. See Adjustments section.
	Latch speed control not fast enough	Adjust latch speed valve. See Adjustments section.
	Door hung on product other than center pivot	Send template for hanging means to factory. A new installation sheet is required. Closer will need to be relocated.
	Arm is not preloaded	See Step G. Attach Arm to Door
Door is too difficult to open	Spring tension is set too strong	Decrease opening force. See Adjustments section.

Rixson Technical Product Support:
Monroe, NC 28112 USA
Phone: 800.438.1951 ext: 6030
TechSupport.Rixson@assaabloy.com
rixson.com

Rixson is a brand associated with ASSA ABLOY Accessories and Door Controls Group, Inc., an ASSA ABLOY Group company. Copyright © 2021, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.

Center Pivot Hung Wood Frame

ASSA ABLOY

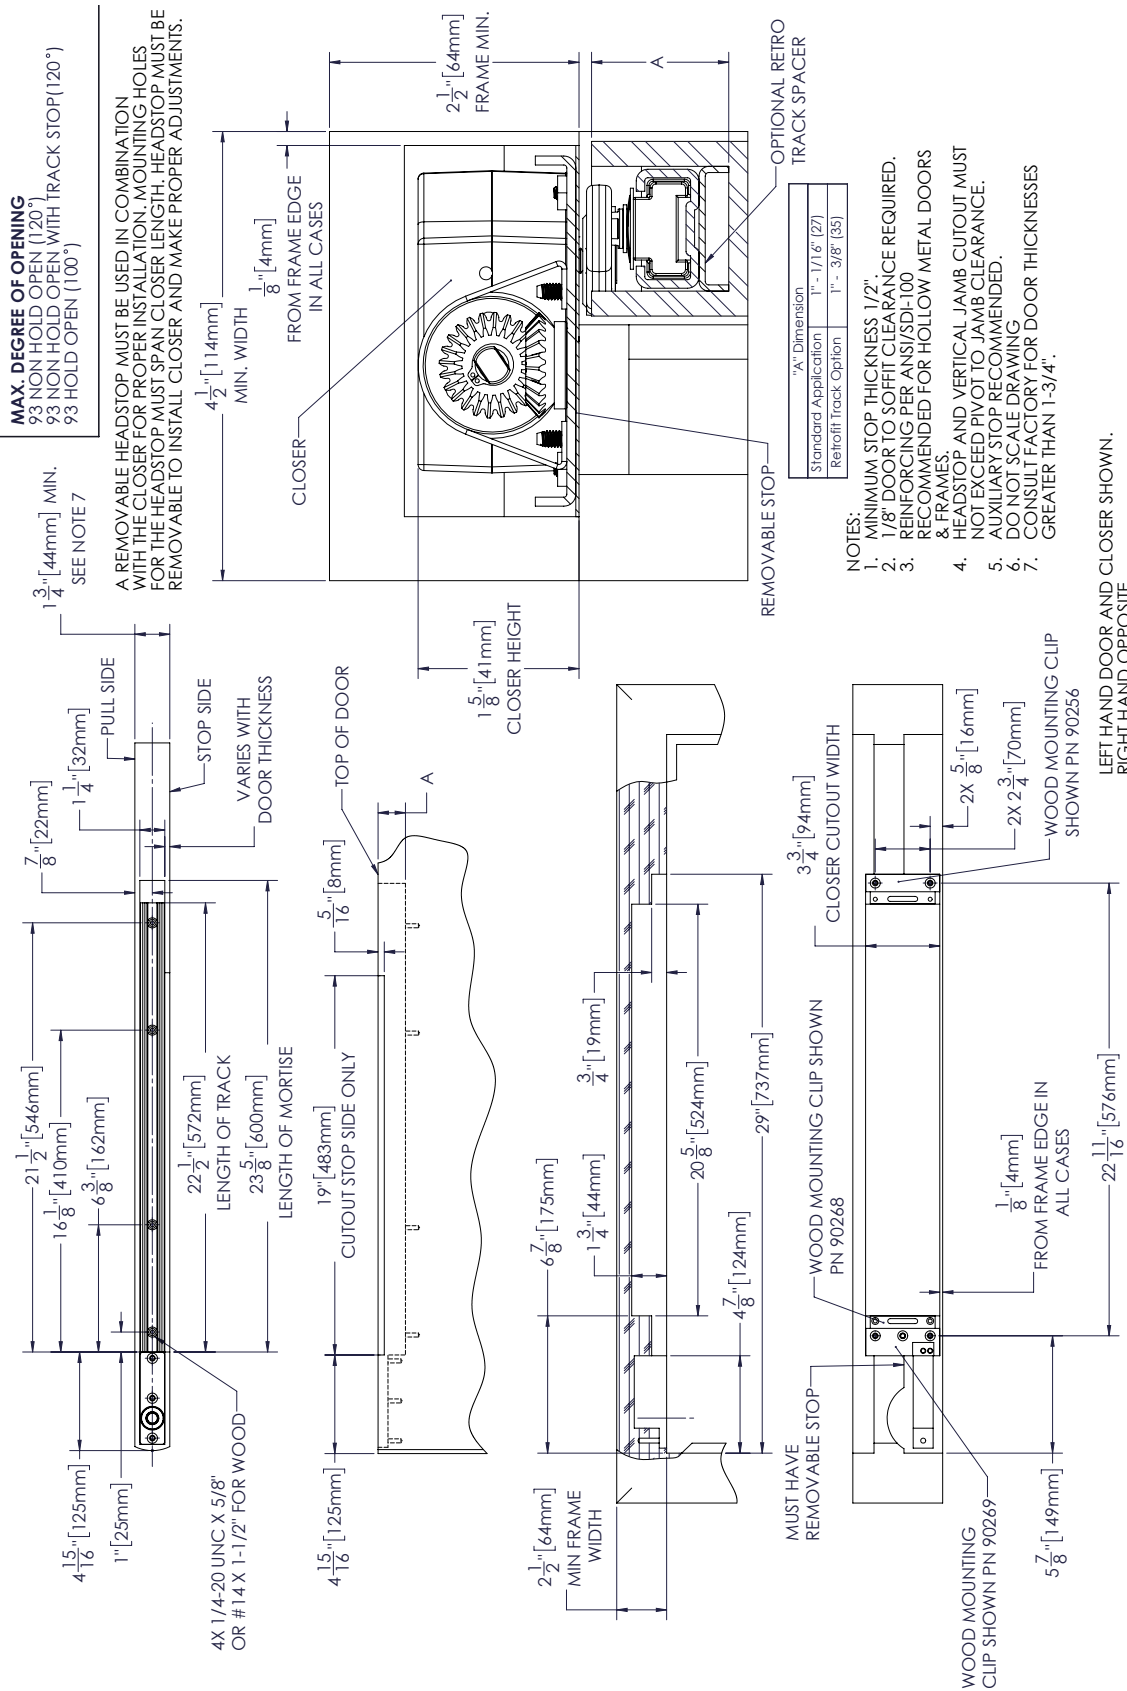

Model W93 Overhead Concealed Closer Template

Center Pivot Hung

Wood Frame

RIXSON®

ASSA ABLOY

