



User Manual

Wireless AC1200 4G LTE Router

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Hardware	Revision	Date	Description
B1	1.00	27/10/2021	• Initial release

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2021 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview	1	Internet Settings	18
Package Contents.....	1	APN Settings.....	20
System Requirements	2	Connection Mode Settings	22
Introduction	3	PIN Management.....	23
Hardware Overview	4	My Operator (PLMN).....	24
Overview.....	4	Wi-Fi Settings	26
LED Indicators	6	Wi-Fi Status	26
Installation	7	Basic Settings	27
Initial Setup.....	7	Advanced Settings	29
RESET.....	7	Wi-Fi Clients	31
SIM.....	7	Settings	32
WPS.....	7	Router LAN Settings	32
Wireless Installation Considerations.....	8	DHCP Settings.....	33
Configuration	9	MAC Filter	34
Initial Connection to the Router	9	Firewall Settings.....	36
Connect via Ethernet Cables	9	DDNS.....	40
Connect via Wi-Fi	10	System	41
Web-based Configuration	12	Information	41
Configuration Utility	12	Admin Settings.....	42
Navigation.....	13	Account	42
Quick Access.....	14	Language.....	43
Setup Wizard	15	Date & Time.....	44
Internet Settings	16	Settings Profile.....	46
Network Status	16	Reset / Reboot.....	48
Failover	17	Firmware Upgrade.....	49
		System Logs.....	50

Parental Control	51
SMS	52
Short Messages	52
USSD.....	53
Connecting to a Wireless Network	54
WPS Button.....	54
Connecting to a Wireless Network	55
Using Windows 10	55
Using Windows 8	57
Using Windows 7	59
Using Windows® XP	62
Troubleshooting	63
Networking Basics	65
Check your IP address.....	65
Statically Assign an IP address	66
Technical Specifications	67
Regulatory Information	68

Product Overview

Package Contents



D-Link DWR-960 Wireless AC1200 4G LTE Router



Power Adapter



3G/4G Antennas



RJ45 Cable

If any of the above items are missing or damaged, please contact your reseller.

System Requirements

Network Requirements	<ul style="list-style-type: none">• A compatible mini-SIM/UICC card with mobile data service¹
Web-based Configuration Utility Requirements	<p>Computer with the following:</p> <ul style="list-style-type: none">• Windows®, Macintosh, or Linux-based operating system <p>Browser Requirements:</p> <ul style="list-style-type: none">• Internet Explorer 9 or higher• Firefox 12 or higher• Safari 4 or higher• Chrome 20 or higher

¹ Subject to services and service terms available from your carrier.

Introduction

The D-Link DWR-960 Wireless AC1200 4G LTE Router lets you share a fast mobile Internet connection with multiple PCs and devices letting you and your friends enjoy the advantage of wireless connectivity anywhere, anytime. It offers 4G LTE and 3G HSPA+ compatibility for fast downlink and uplink data rates, so you get fast upload and download speeds in areas without wired Internet connectivity.

High-Speed Mobile Internet with LTE Connectivity

The DWR-960 Wireless AC1200 4G LTE Router gives you high-speed Internet wherever you are and lets you share it on the go. Using LTE technology, you can achieve a download speed of up to 300 Mbps and a upload speed of up to 100 Mbps¹. The built-in LTE antenna provides a reliable connection to your mobile service provider, and separate internal Wi-Fi antenna give extended coverage to the computers and wireless devices connected to the DWR-960.

Mobile Internet for All of Your Devices

With the DWR-960, you can get online with your notebook, smartphone, tablet, or any other wireless device using a single mobile connection. The DWR-960 provides high-speed Wireless AC coverage with 2.4G and 5G radio bands, giving high-speed wireless access to everybody – whether you are with colleagues on a business trip or travelling with friends and family.

Built-in Software for Instant Access Anywhere

The DWR-960 is truly plug-and-play, with drivers already on the router, so you can connect without installing anything. Open a browser, connect to the router, and you can set up your network right from the web interface. Once the device is set up, you can simply power it on to start up your portable mobile network without further configuration, meaning that you can share your mobile Internet connection without a cable or DSL .

¹ All references to speed are for comparison purposes only. Actual speeds will vary depending on a range of factors including mobile network coverage, signal strength, network activity, and environmental conditions.

Hardware Overview

Overview




1	SIM/UICC Card Slot	Insert a SIM/UICC card to access the Internet through mobile connectivity. Or you may opt to use the W/LAN port below (No.8).
2	WPS Button	Press this button to add new wireless devices quickly and easily using Wi-Fi Protected Setup (WPS).
3	Reset Button	Using a paper clip, press and hold this recessed button for 5 seconds to reset the device to factory defaults. All LEDs will be on and then off except the Power LED which will remain on during the reset.
4	LED Indicators	Status display. Please refer to LED Indicators on page 6.

5	Power Button	Press this button to power on or off the device.
6	Power Input	Receptacle for the included 12 V/1 A power adapter.
7	LAN	Use a RJ-45 Ethernet cable to connect a computer, network equipment such as NAS (Network Attached Storage) or switch.
8	W/LAN	Use a RJ-45 Ethernet cable to connect the device to an Ethernet-based cable, DSL or fiber modem.

Hardware Overview

LED Indicators

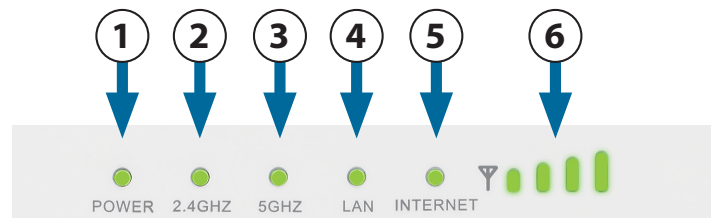

Number	Name	Explanation	
1	Power	Solid Green	Powered on.
		Off	Powered off.
2	2.4 GHz	Solid Green	Wi-Fi is enabled.
		Blinking Green (slow)	Traffic is being transmitted over Wi-Fi.
		Blinking Green (fast)	WPS is activated. The LED will flash for 120 seconds or until a user connects.
		Off	Wi-Fi is disabled.
3	5 GHz	Solid Green	Wi-Fi is enabled.
		Blinking Green (slow)	Traffic is being transmitted over Wi-Fi.
		Blinking Green (fast)	WPS is activated. The LED will flash for 120 seconds or until a user connects.
		Off	Wi-Fi is disabled.
4	LAN	Solid Green	RJ-45 Ethernet cable connected.
		Blinking Green	Traffic is being transmitted over the Ethernet cable.
		Off	RJ-45 Ethernet cable not connected.
5	Internet	Solid Blue	Connected to an LTE network/Ethernet WAN.
		Blinking Blue	Traffic is being transmitted over LTE/Ethernet WAN.
		Solid Green	Connected to a 2G/3G network.
		Blinking Green	Traffic is being transmitted over 2G/3G.
		Solid Red	No SIM/UICC card inserted or no Internet service.
6	Signal Strength	Green (Level 1-4)	Indicates mobile connection signal strength. The stronger the signal, the more the lit bars.

Installation

This section will guide you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in an attic or garage.




Initial Setup

Ensure that your DWR-960 is disconnected and powered off before performing the steps below.

1. Verify that your SIM/UICC card is installed and has been activated by your carrier. To install your SIM/UICC card, follow the orientation diagram next to the slot. Push gently until it locks into place.

Caution: Always unplug/power off the router before installing or removing the SIM/UICC card. Never insert or remove the SIM/UICC card while the router is powered on.

2. Attach the included antennas to the back of the router, screwing them in clockwise. Arrange them so that they point upwards.
3. Connect the power adapter to the socket on the back panel of your DWR-960. Plug the other end of the power adapter into the wall outlet or power strip.
4. Press the power button and wait for three seconds for the device to be powered on.
 - a. The Power LED will light up green to indicate that power is being supplied to the router and the router is turned on.
 - b. After a few moments, the LED indicators will show the status of the router's various functions. For more information, please refer to **LED Indicators** on page **6**.

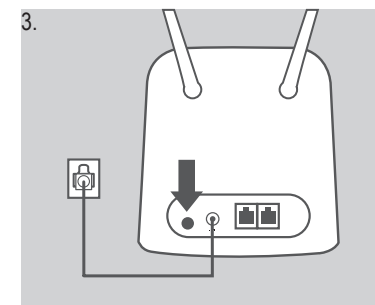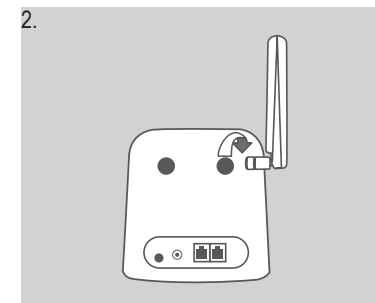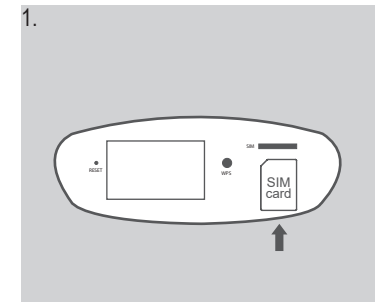

Wireless Installation Considerations

The DWR-960 can be accessed using a wireless connection from anywhere within the operating range of its wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may adversely affect wireless signals. Ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:

1. Minimize the number of walls and ceilings between the router and other network devices. Each wall or ceiling can reduce your adapter's range from 3 to 90 feet (1 to 30 meters).
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters) appears to be almost 3 feet (1 meter) thick at a 45-degree angle. At a 2-degree angle it appears over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using a 2.4 GHz cordless phone, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even when the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

Configuration


This section shows you how to configure your new DWR-960 using the configuration utility that can be accessed via your web browser.

Initial Connection to the Router

By default, the DWR-960 comes configured to work with most 4G SIM/UICC cards. If you wish to configure the router, you will need to establish a direct connection with the router in order to access the web-based configuration utility. Refer to the following two sections for wired and wireless connection methods. Once you have configured your router, you will be able to connect to a wireless network using the Wi-Fi settings that you specified in the configuration process.



Connect via Ethernet Cables

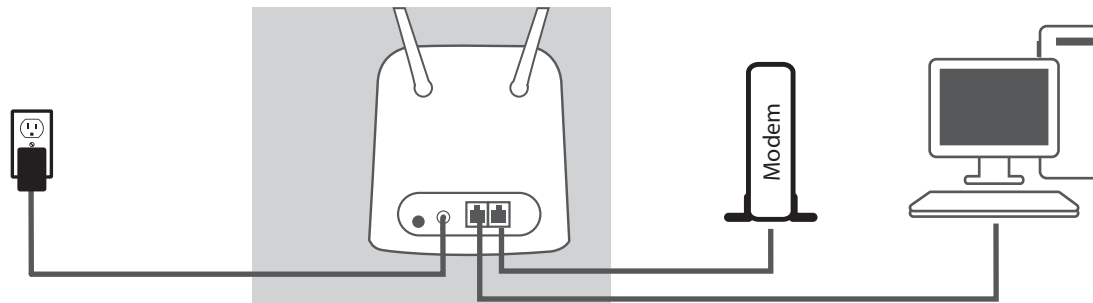If you are configuring the router from a PC with a wired Ethernet connection, plug one end of an Ethernet cable into the port labelled LAN on the back of the router, and the other end into the Ethernet port on your computer.



Connect via Wi-Fi



Note: The following example uses Windows 10's built-in wireless connection utility. If you are using a different operating system, or a third-party connection utility, the process may be different. Please refer to the documentation that came with your operating system or wireless adapter for further information on how to connect to a wireless network.

To connect to the router using Wi-Fi, on the taskbar of your Windows, click the  or the  icon.

Note: If you see the  icon, unplug the network cable and try again.


By default, the network name (SSID) of the DWR-960 will be in the format **dlink_DWR-960_XXXX** or **dlink_DWR-960-5G_XXXX** (where XXXX represents the last 4 digits of the Wi-Fi interface's MAC address). Note that the default **SSID** and **password** can be found on the device label on the bottom of the device .

Once you have located your DWR-960's wireless network, select it and click **Connect**.

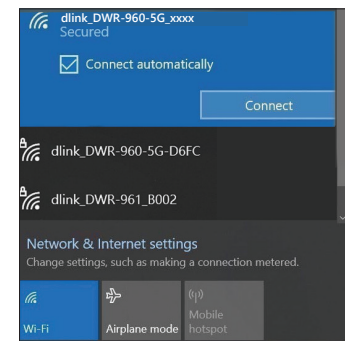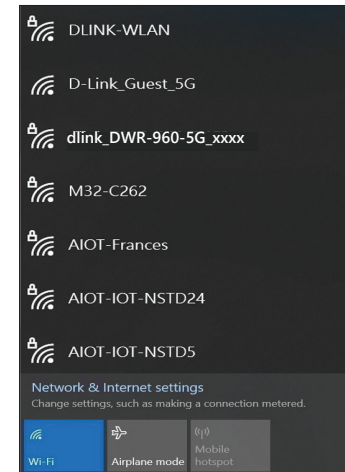


You will then be prompted to enter the network security key for your router. Enter the security key in the box provided and click **OK**. Your wireless connection utility will confirm that the connection is successful, and you can move to the next step to continue the configuration process.

You can also set up a connection using the Windows built-in WPS feature. Please see **Connecting to a Wireless Network** on page **55**.

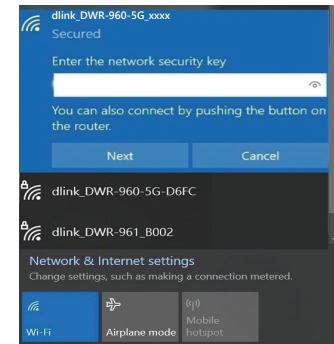

Web-based Configuration

To access the configuration utility, open a web browser (such as Internet Explorer) and enter the IP address of the router, which is **192.168.0.1** by default in the address bar.



Configuration Utility


Enter **admin** as the *username* and leave the *password* blank on the login page. You will be required to change the password when logging in for the first time.

Click **Sign in** to continue.

A screenshot of the D-Link configuration utility login page. At the top left is the "D-Link" logo. Below it, a blue square icon is followed by the text "Welcome to D-Link DWR-960". There are two input fields: the first is labeled "User Name" and contains the placeholder text "Enter Username"; the second is labeled "Password" and contains the placeholder text "Enter Password". Below these fields is a blue "Sign in" button.

Navigation

On the home page of the interface, you will find the menu bar at the top of the page which includes tabs for easy navigation.

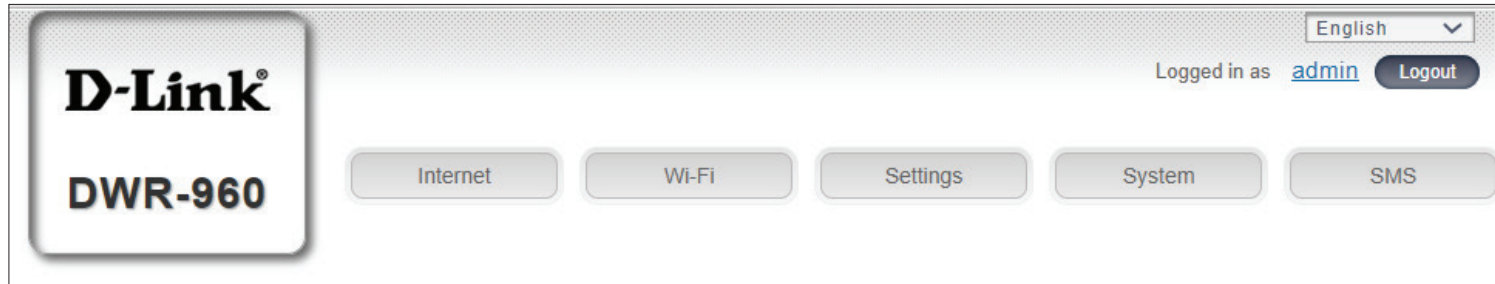

- Internet** The **Internet** tab allows you to configure your Internet settings, including details about your mobile operator.
- Wi-Fi** The **Wi-Fi** tab allows you to configure your Wi-Fi network, as well as add new devices using WPS.
- Settings** The **Settings** tab allows you to configure firewall and security settings.
- System** The **System** tab allows you to view system information, change your login information, and upgrade the firmware.
- SMS** From the **SMS** tab, you can send and receive SMS text messages, as well as send USSD (Unstructured Supplementary Service Data) codes, also known as "Quick Codes" or "Feature Codes."

Quick Access

A quick access page will be displayed on the home page of the DWR-960. The headings below provide links to configuration pages where you can alter settings in more detail.

Internet This area displays your Internet provider, the type of Internet service you are using, signal strength, and the total amount of mobile Internet data used since the start of the bill cycle.

Connection Mode This area displays the length of time the Internet has been up and allows you to change between **Always Connect** and **Manual Connect**.

Wi-Fi The Wi-Fi section displays the number of devices currently connected to the router wirelessly via the 2.4 GHz and 5 GHz band.

Short Messages This area displays the number of SMS messages in your inbox and your draft messages.



Copyright © 2020 D-Link. All Rights Reserved.

Setup Wizard

The setup wizard is designed to guide you through a step-by-step process of initial device configuration. It will assist you in the following basic configurations: Wi-Fi setting, Admin setting, and Internet setting.

APN For LTE/3G

On this page, you can configure your Access Point Name (APN) settings. Depending on your mobile service provider, you may have to configure the optional settings manually. Please consult your ISP in such case.

Click **Next** to continue.

Wi-Fi 2.4 GHz SSID/Wi-Fi 5 GHz SSID

On this page, you can configure your Wi-Fi settings. Enter the Wi-Fi name and the protection mode with encryption method. Enter the Pre-Shared Key which will be required for client connection. You can also click **New Key** to let the system generate a key automatically for you.

Click **Next** to continue.

Admin Settings

On this page, you can configure the admin account's password and the language of the web configuration utility. You can also set the system's date and time.

Click **Next** to continue.

Internet Settings

On this page, you can configure the Internet connection mode: WAN or cellular mode. For the WAN connection mode, you can choose the connection method from the following: Static, PPPoE, or DHCP. For PPPoE and Static, you may need to contact your ISP or network administrator for the respective parameters for connection.

Click **Next** to continue. The next page simply requires you to click **Apply** for the configurations to take effective.

The screenshot shows the 'Setup Wizard' interface for 'APN For LTE/3G'. At the top, there are five numbered steps: 1 Connection Settings (highlighted), 2 Wi-Fi Settings, 3 Admin Settings, 4 Internet Settings, and 5 Apply Settings. The main content area is titled 'APN For LTE/3G' and contains the following fields:

- APN Selection Mode: Manual (dropdown menu)
- Allow Data Roaming: Toggle switch (turned off)
- APN: live.vodafone.com (text input)
- User Name: vodafone (text input)
- Password: (password input)
- APN Method: Auto (PAP & CHAP) (dropdown menu)

A 'Next' button is located at the bottom right of the form.

The screenshot shows the 'Setup Wizard' interface for the 'Apply Settings Now!' step. At the top, the five numbered steps are: 1 Connection Settings, 2 Wi-Fi Settings, 3 Admin Settings, 4 Internet Settings, and 5 Apply Settings (highlighted). The main content area is titled 'Apply Settings Now!' and contains the following instructions:

- Please check all settings in this wizard again before you click 'Apply'.
- After applied new settings, your system will need to reboot.

'Previous' and 'Apply' buttons are located at the bottom right of the form.


Internet Settings

Network Status

In this section you can check your current network status as well as your network provider and data usage.

Cellular Information

- Network Provider** Displays your current network provider and signal strength.
- Network Type** Displays the type of network you are connected to.
- Connection Time** The length of time you have been connected to the network.
- RSRP** Reference Signal Received Power (RSRP), which measures the power level in the LTE cell network.
- LTE Cat** Indicates the category of the LTE.
- Band** Indicates the LTE frequency band.

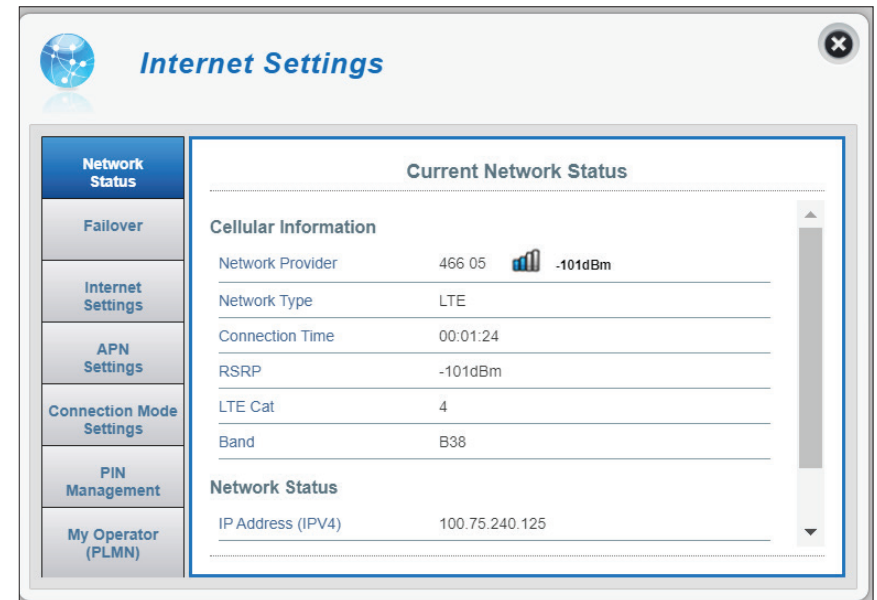

Network Status

- IP Address (IPv4)** Displays your current IP address.
- Total DL** Displays the total amount of data downloaded.
- Total UL** Displays the total amount of data uploaded.

Note: These counters may be reset when the battery or SIM/UICC card is removed.


Failover

You can configure the failover feature to maintain Internet connection when one of the connection methods fails.

Failover

Failover Select either one of the following to be the preferred connection method if both are connected:

- Ethernet WAN Preference
- Cellular WAN Preference

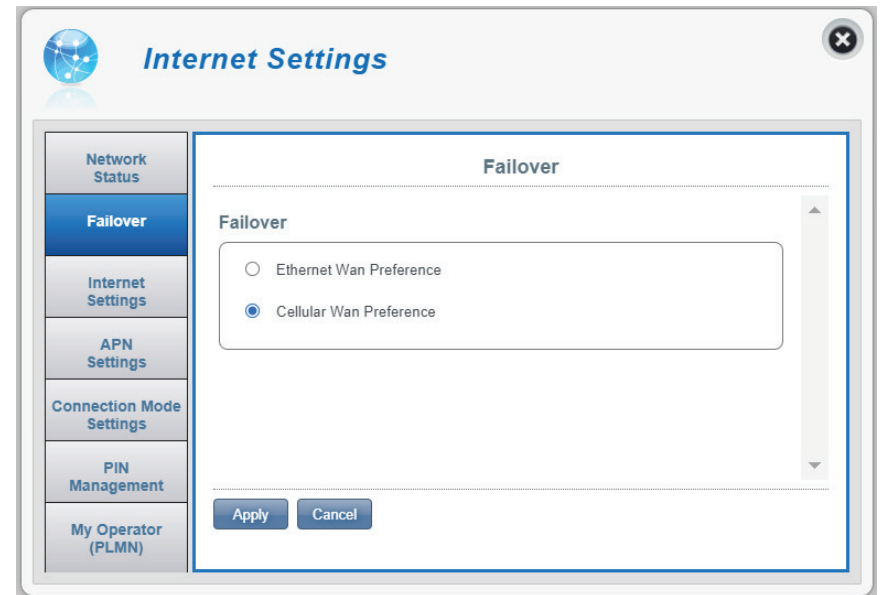

Internet Settings

Internet Settings

- Internet Mode WAN Mode** - Select this option if you want the DWR-960 to connect to the Internet through the WAN port (W/LAN) on the back of the device.
- 4G/3G/2G mode** - Select this option if you want the DWR-960 to connect to the Internet using the inbuilt LTE modem.

Click **Apply** to save your changes.

The screenshot shows the 'Internet Settings' window. On the left is a sidebar with the following items: Network Status, Failover, Internet Settings (highlighted), APN Settings, Connection Mode Settings, PIN Management, and My Operator (PLMN). The main content area is titled 'Internet Settings' and contains two radio buttons: 'WAN Mode' (selected) and '4G/3G/2G mode' (selected). Below each radio button is a message: 'User needs to configure WAN Settings.' and 'User needs to configure 3G/4G Settings.' respectively. At the bottom of the main area are 'Apply' and 'Cancel' buttons.

If you select **WAN Mode**, configure the following **WAN Settings**:


Choose the **WAN Connection Type**: Static, DHCP, or PPPoE. If you select PPPoE for the WAN Connection Type:

- Username** Enter the username provided by your ISP.
- Password** Enter the password provided by your ISP.
- Verify Password** Enter the same password again.
- Operation Mode** Select **Keep Alive**, **On Demand**, or **Manual**.
- Idle Time** Configurable when **On Demand** is selected. Enter a maximum idle time during which the Internet connection is maintained during inactivity. To disable this feature, select **Keep Alive** or **Manual** as the operation mode.

The screenshot shows the 'Internet Settings' window with the 'WAN Settings' tab selected. The sidebar is the same as in the previous screenshot. The main content area is titled 'Internet Settings' and contains two radio buttons: 'WAN Mode' (selected) and '4G/3G/2G mode' (selected). Below each radio button is a message: 'User needs to configure WAN Settings.' and 'User needs to configure 3G/4G Settings.' respectively. At the bottom of the main area are 'Apply' and 'Cancel' buttons.


If you select Static for the WAN Connection Type:

- IP Address** Enter the IP address provided by your ISP.
- Subnet Mask** Enter the subnet mask of the IP address.
- Default Gateway** Enter the default gateway provided by your ISP.
- Primary DNS** Enter the primary DNS server IP address assigned by your ISP.
- Secondary DNS** Enter the secondary DNS server IP address assigned by your ISP.

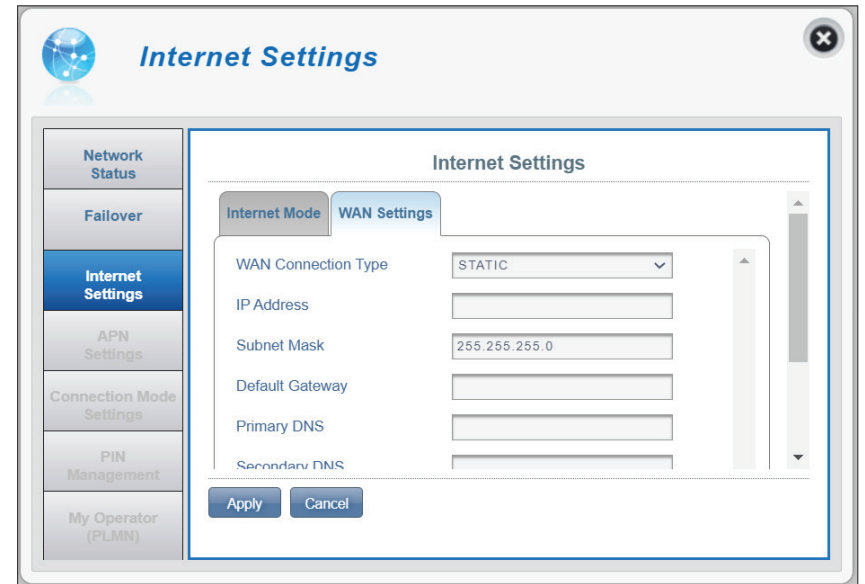

If you select DHCP for the WAN Connection Type:

- Host Name** The host name is optional but may be required by some ISPs. Leave it blank if you are not sure.

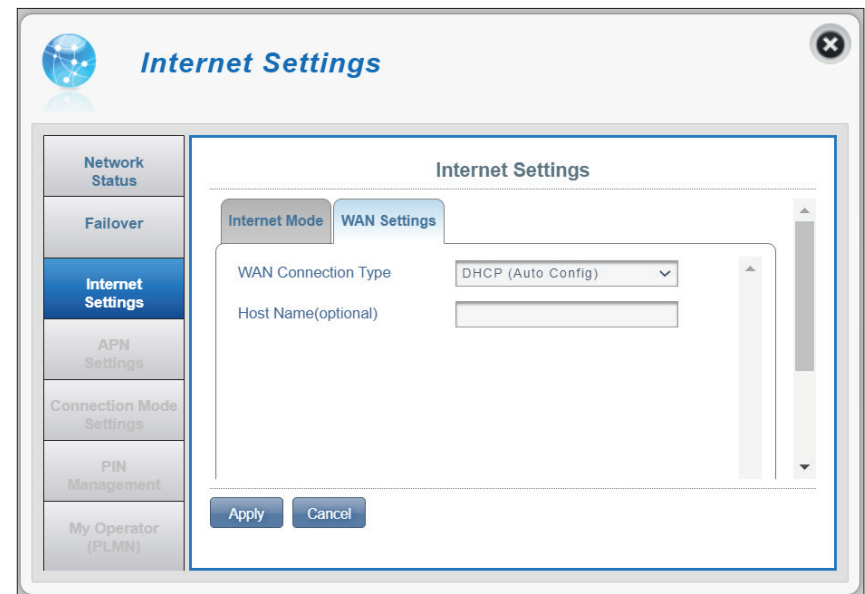

APN Settings


In this section you can configure your Access Point Name (APN) settings. Depending on your mobile service provider, you may have to input optional settings before use. If so, you may need to contact your service provider regarding these details.

Access Point Name (APN) Settings

APN Selection Mode **Auto** - Select this option if you want the DWR-960 to automatically connect to a mobile network after it has been powered on, or has been disconnected from its current mobile network.

Manual - Enter the Access Point Name (APN) for the connection. If you do not know this information, please contact your service provider.

Click **Apply** to save your changes.

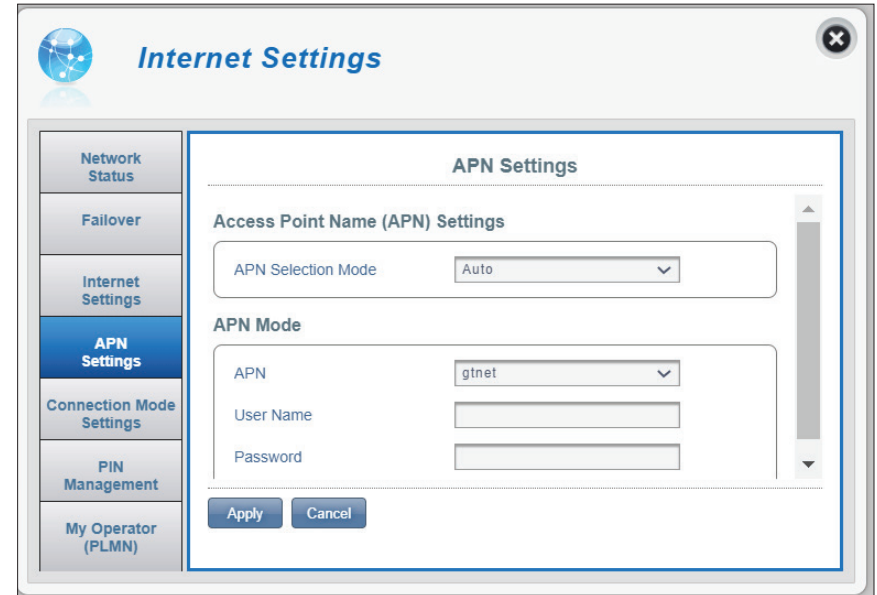

The screenshot shows the 'Internet Settings' window with a sidebar on the left containing the following menu items: Network Status, Failover, Internet Settings, APN Settings (highlighted), Connection Mode Settings, PIN Management, and My Operator (PLMN). The main content area is titled 'APN Settings' and contains the following fields:

- Access Point Name (APN) Settings**
 - APN Selection Mode: Auto (dropdown menu)
- APN Mode**
 - APN: gtnet (dropdown menu)
 - User Name: (text input field)
 - Password: (text input field)

At the bottom of the main content area, there are two buttons: 'Apply' and 'Cancel'.

If manual is selected for APN mode:**APN Mode**


APN If you are already connected to a mobile network, your ISP will provide the necessary APN which you can select from the drop-down list. If no options are available, use the manual configuration on the previous page.

User Name Enter the username to be used for this connection.

Password Enter the password to be used for this connection.

APN Method Choose the authentication method (i.e. PAP, CHAP or None) that your ISP uses to connect to its mobile network. If you do not know this information, please contact your service provider. For more information refer to **Connection Mode Settings** on page 22.

Click **Apply** to save your changes.

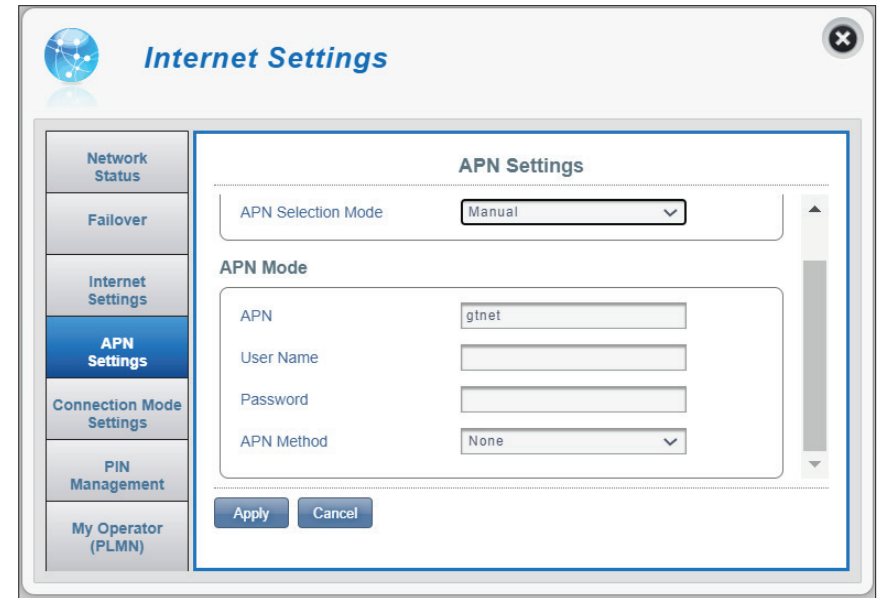

The screenshot shows the 'Internet Settings' dialog box with the 'APN Settings' section active. The 'APN Selection Mode' is set to 'Manual'. The 'APN Mode' section contains the following fields:

Field	Value
APN	gtnet
User Name	
Password	
APN Method	None

Buttons for 'Apply' and 'Cancel' are visible at the bottom of the dialog box.

Connection Mode Settings

This section allows you to choose your desired cellular network, configure data roaming and connection mode.

Cellular Settings

Preferred Cellular **Auto** - Automatically connects to a mobile network.

2G mode - Only connects to a 2G mobile network.

3G mode - Only connects to a 3G mobile network.

LTE mode - Only connects to a LTE/4G mobile network.

Allow Data Roaming Enabling this if you want to allow data roaming. Data roaming lets you use an Internet connection internationally or outside of your Internet provider's coverage. Enabling this feature may lead to very high data charges. Check with your provider for details.



Transparent Bridge Choose this option to configure your router to the bridge mode. Enabling this option will disable Wi-Fi function.

Connection Mode Choose between **Always** or **Manual** for Internet connection.

If you select **Manual Connection Mode**:

Connect/Disconnect manually Toggle the switch to enable or disable your Internet connection.

Click **Apply** to save your changes.

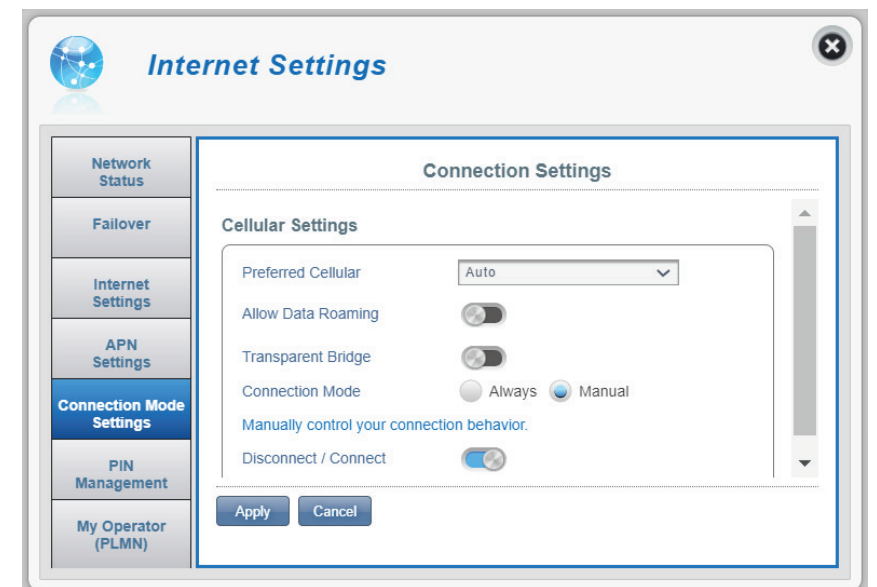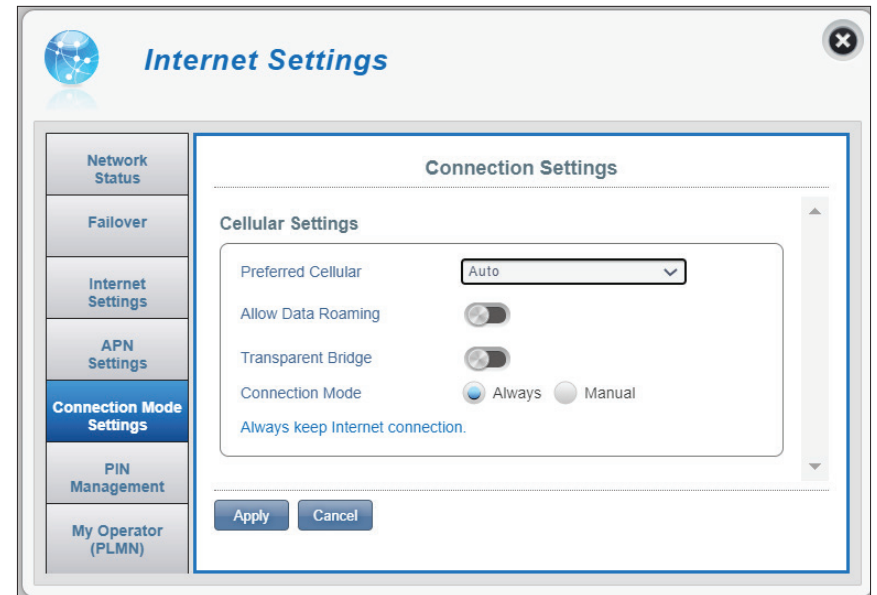

PIN Management

This section allows you to lock the SIM/UICC card currently inserted into the DWR-960.

SIM

No. of Retry The number of retries left to access your SIM/UICC.

Note: *If you exceed the number of retries, your SIM/UICC card will be locked and can only be unlocked by your operator.*



SIM/UICC Card PIN Lock Protection Move the toggle to enable **SIM card PIN Lock Protection**. In order to use this function you need to know the PIN of the SIM/UICC card.

You can disable the SIM Card PIN Lock protection or change the PIN code later.

If SIM Card PIN Lock Protection is enabled:

PIN Code Enter your SIM/UICC pin code here.

Click **Apply** to save your changes.

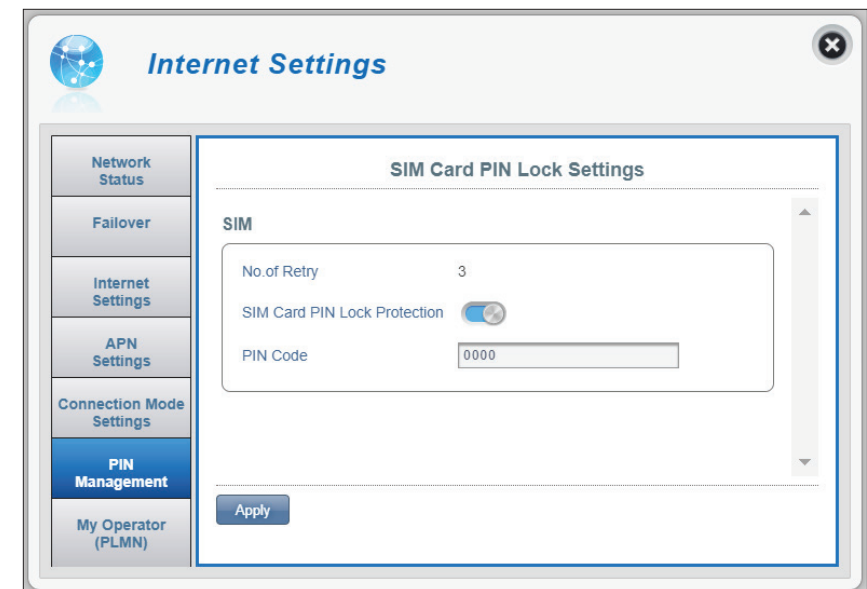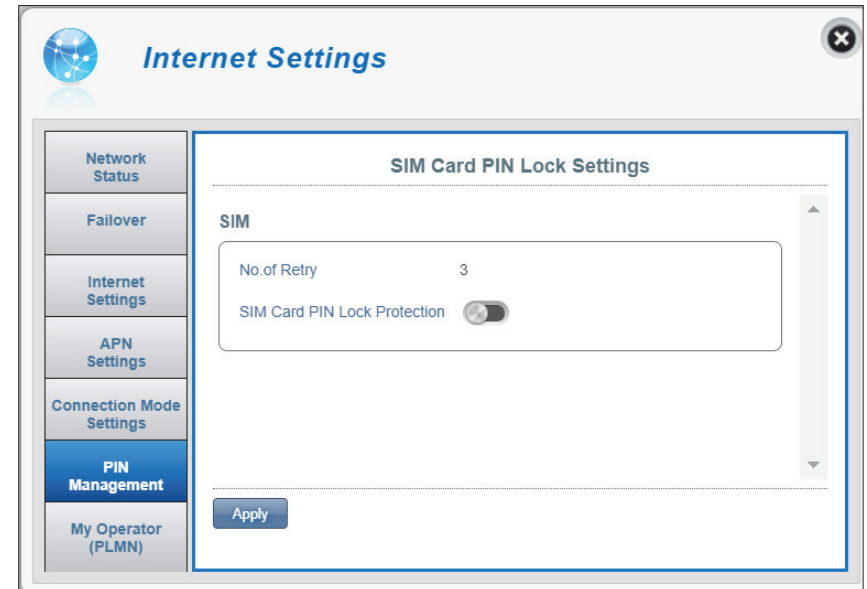

My Operator (PLMN)

This page allows you to view available Public Land Mobile Networks (PLMN). This page can also be used to select a preferred network when you are roaming outside of your home network.


Operator Mode (PLMN)

PLMN Mode Displays the current mode the DWR-960 is operating in.

Select **Automatic** to allow the DWR-960 to automatically connect to the first available network when roaming.

Select **Manual** to choose your preferred roaming network from the list below.

Click **Apply** to save your changes.

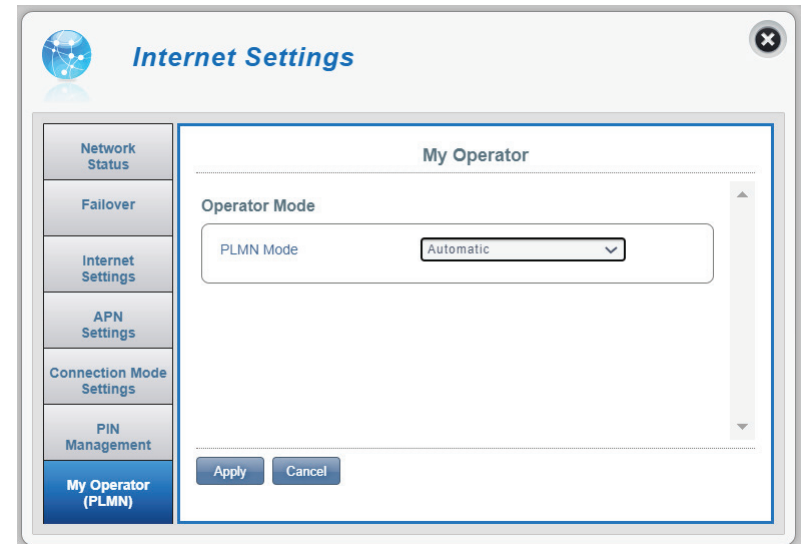

If you select Manual Mode:

Click on your preferred network to select it, or type in the **Search** box to find your desired network.

Note: You will need to manually disconnect from the current mobile data service before selecting a network using PLMN.

Available Operators

ID ID number assigned to each available PLMN.


Use it Check the box to select your desired network.

Status The network's status.

Operator Name The name of the cellular network provider.

Access Technology The cellular network's access technology.

Click **Apply** to save your changes.

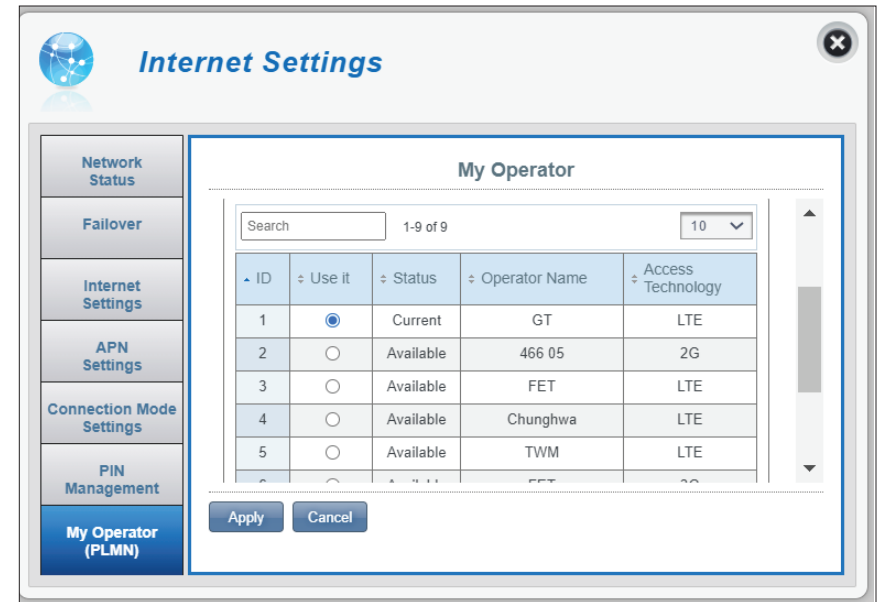

Wi-Fi Settings

Wi-Fi Status

This page displays your current Wi-Fi status and Wi-Fi settings.

General Information

Wi-Fi WPS Displays whether Wi-Fi Protected Setup (WPS) is enabled.

Wi-Fi 2.4 GHz/5 GHz Displays whether Wi-Fi is enabled.

Current Wi-Fi Clients Displays the number of clients connected to your Wi-Fi network.

Wi-Fi Status

SSID Name Displays the name of your Wi-Fi network.

Encryption Displays your current Wi-Fi network encryption mode.

DHCP Displays whether DHCP server is enabled.

IP Address Your router's IP address.

Subnet Your router's subnet mask.

MAC Address The MAC address of the respective Wi-Fi network interface.



Basic Settings

In this page you can view your Wi-Fi encryption settings, modify your SSID name and SSID visibility, and configure related security features.

Wi-Fi 2.4 GHz/5 GHz SSID

SSID Name Displays the name of your Wi-Fi network. Click in the box to edit.

SSID Visibility Enable or disable SSID visibility to clients. Disabling SSID broadcast requires you to configure your wireless connection manually by providing information such as network name, security type, encryption type, and security key.

If you select WPA Personal:

Protection By default **WPA personal** is selected. You may also select **WEP** or **No Protection**.

WPA Mode **Auto (WPA or WPA2)** - The router will automatically determine the version of WPA to be used based on the client that is connecting to it.

Cipher Type **WPA2** - Clients will only be able to associate with the router using the WPA2 standard. Clients that do not support WPA2 will not be able to associate with the router.

AES - A newer encryption with stronger protection for WPA2.

Note: *Use of WPA2 is required in order to achieve 802.11n speeds.*

AES/TKIP - TKIP is an encryption method commonly used by older devices. Select this option for compatibility with old devices.



Pre-Shared Key The pre-shared key is the password for clients to connect to your network. Enter a password with 8 and 63 characters in length.

Click **Apply** to save your changes.


If you select WEP:

Authentication Type: **Shared** - The encryption key used to authenticate wireless client and encrypt data.

WEP Passphrase: Enter your passphrase for clients to connect to the router. Once you have entered a passphrase, select the WEP key length, then click **Generate** to create keys automatically.

Key 1-4: You can set up to 4 WEP keys. Select the WEP key you wish to use by clicking on the radial buttons next to the keys. Each key allows you to use either **64 bit** or **128 bit** characters.

Click **Apply** to save the current settings.

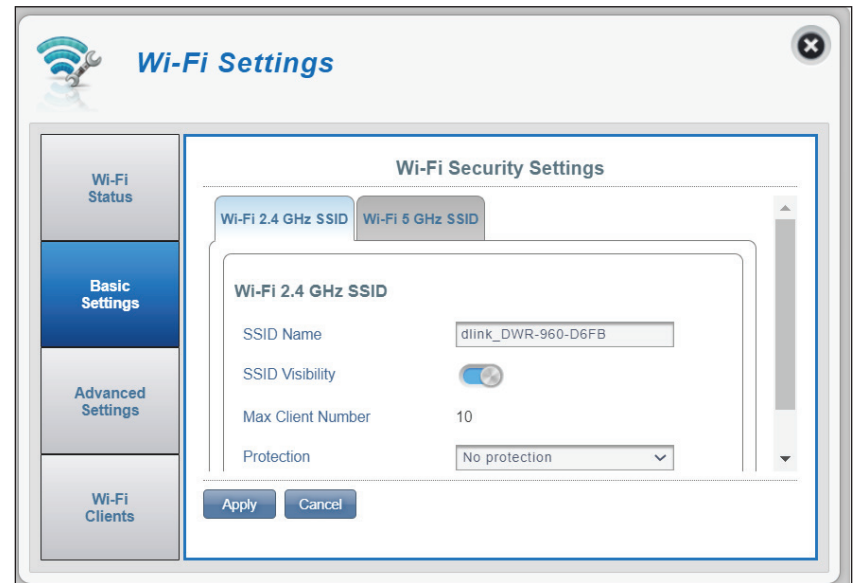

Advanced Settings

Wi-Fi 2.4 GHz/5 GHz

Wi-Fi 2.4 GHz/5 GHz Toggle the switch to enable/disable Wi-Fi radio frequency on your router.

802.11 Mode The type of Wi-Fi connection currently being accepted by the router.


2.4 GHz: Enable this option to allow clients complied with a mix of **802.11n/g/b** standards to the router.

5 GHz: Enable this option to allow clients complied with a mix of **802.11ac/n/a** to connect to the router.

Channel Bandwidth The current channel width being used by your router. A wider 80 or 40 MHz channel (depending on the radio frequency) may increase performance but could cause interference with other Wi-Fi devices. This router will automatically reduce to 20 MHz if interference is detected.

Wi-Fi Channel Choose the clearest channel to help optimize the performance and coverage of your wireless network. By default the channel is set to **Auto Channel**. This can be changed to fit the channel setting for your wireless environment. Note that not all channels are available in all regions. If you cannot see your SSID from your client device, try manually setting a low-numbered channel.

Click **Apply** to save your changes.

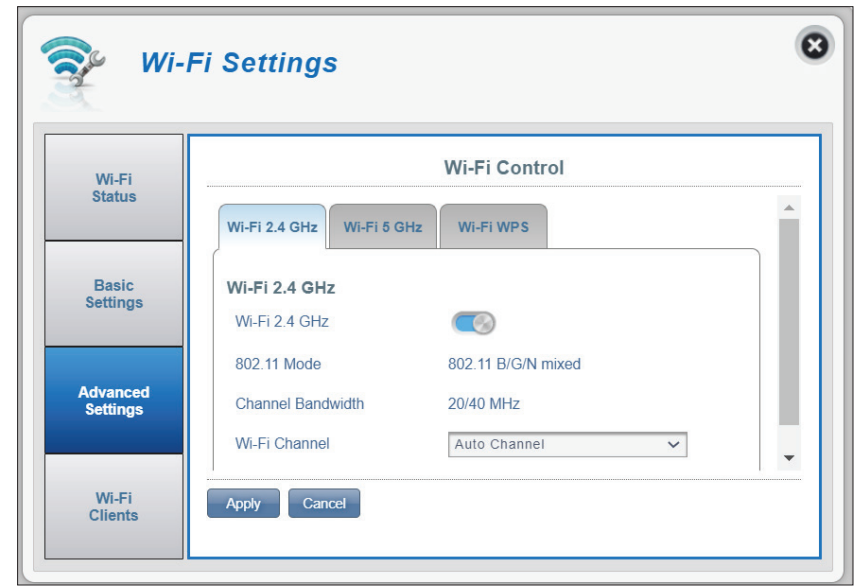

Wi-Fi WPS

PBC Push Button Configuration (PBC) enables you to easily connect your devices to the DWR-960 by pushing a PBC button on both devices. This mechanism is referred to as WPS (Wi-Fi Protected Setup). Click **Start Via PBC**, to begin the WPS process. This button works in the same manner as the WPS button on the bottom of the device. Refer to **WPS Button** on page 54 for more information.

Band Select the wireless band first for WPS setting.



Use PIN Mode Use toggle to enable PIN protection for use with the WPS feature.

Note: WPS PIN Mode is disabled by default. This mode is less secure and is not recommended. It is retained in this product for compatibility purposes only.

PIN The PIN is a unique number that can be used on devices that do not have a WPS button. Click **Generate New** to generate a new random PIN, or select **Use Default** to restore the factory PIN. Note that if the WPS PIN feature is enabled, using a new PIN is strongly recommended.

To use this feature:

1. Click the **Start Via PIN** to start the WPS process.
2. Follow the user manual of the client device for entering the PIN for WPS. On Windows 7, select the network name you want to connect, then you will be prompted to enter the PIN.

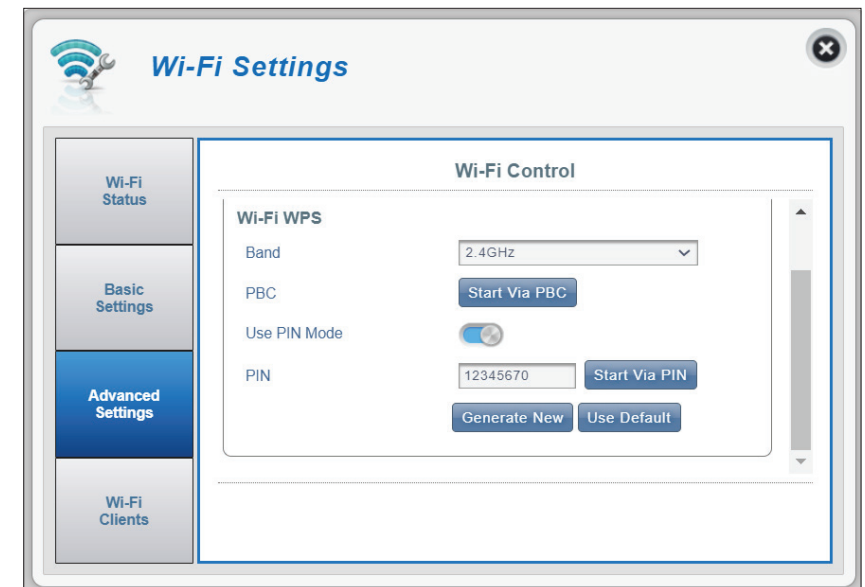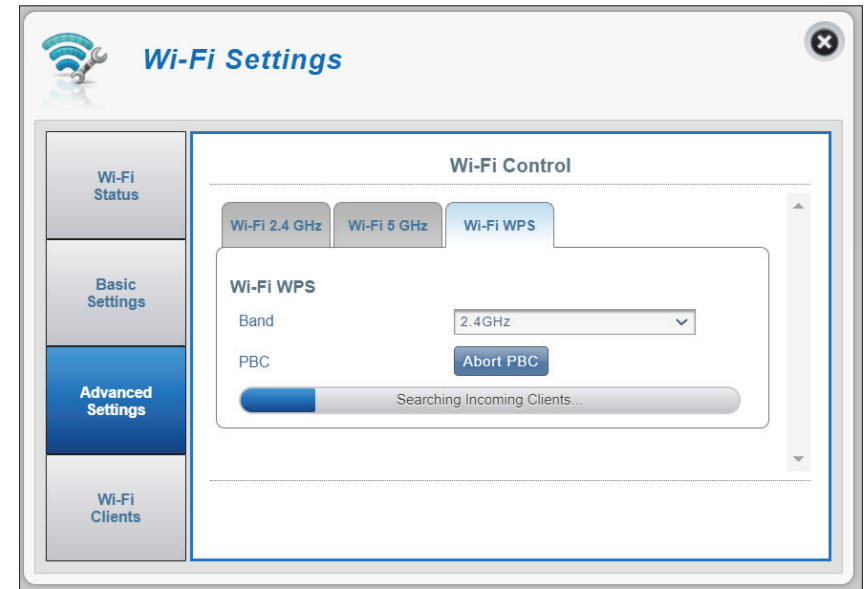

Wi-Fi Clients

This page shows your current client list and allows you to filter clients by host name, IP address, and MAC address. It also enables you to prevent wireless clients from accessing your network.

Wi-Fi Clients List

- Host Name** A unique name for each wireless client that is connected to your router.
- IP Address** The IP address of the wireless client that is connected to your router.
- MAC Address** The hardware address of the client's wireless adapter.
- Access** Toggle this switch to allow or restrict wireless client access to your network.
- Band** The Wi-Fi radio frequency, i.e. 2.4GHz or 5GHz.

Note: If a Wi-Fi client has been blocked, you will see their MAC address in the **MAC Filter** on page 34. You can delete the entry to permit its access on that page.

Click **Apply** to save your changes.



Settings

Router LAN Settings

This page shows your current router LAN settings such as IP address, subnet mask, and IP range.

DHCP Service Display the status of DHCP service, which can be enabled/disabled on the next tab.

IP Address The current LAN IP address. This is also the IP address of the web configuration utility.

Subnet Mask The subnet mask of the LAN interface.

IP Range The range of IP addresses to be assigned by the DHCP server.

The table below lists the DHCP lease status with the following information:

Host Name: The host name of the client computer.

IP Address: The client's IP address that is assigned by the DHCP service.

MAC Address: The MAC address of the client device.

Click **Apply** to save your changes.

Host Name	IP Address	MAC Address
09051NBWIN10S	192.168.0.23	8c:8c:aa:18:be:85

DHCP Settings

Here you can disable or enable your router's DHCP service, configure the IP address for the DWR-960, and set the range of IP addresses assigned by the DHCP server.

DHCP Service


DHCP Service Enable or disable the DHCP Service.

IP Address Click on the last digit to alter your router's current LAN IP address. Note that if you change this setting, you will need to enter this new IP address into your browser to access to the configuration utility.

Subnet Mask The subnet mask of the LAN interface.

IP Range Click on the last digit to configure the range of IP addresses assigned by the DHCP server.

Click **Apply** to save your changes.

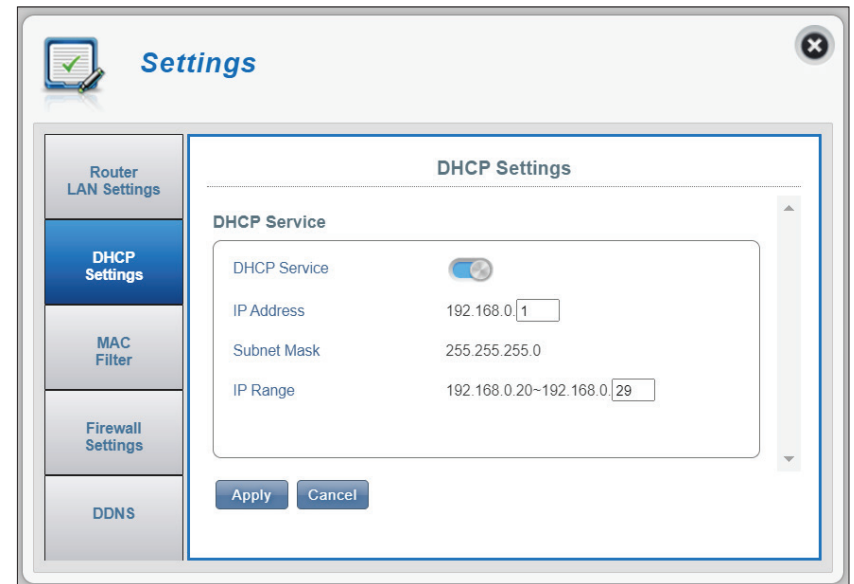

The screenshot shows a web interface titled "Settings" with a "DHCP Settings" sub-section. On the left, a navigation menu includes "Router LAN Settings", "DHCP Settings" (highlighted), "MAC Filter", "Firewall Settings", and "DDNS". The main content area is titled "DHCP Settings" and contains the following configuration options:

- DHCP Service:** A toggle switch is currently turned off.
- IP Address:** 192.168.0.1 (The last digit '1' is highlighted with a cursor).
- Subnet Mask:** 255.255.255.0
- IP Range:** 192.168.0.20~192.168.0.29 (The last digit '9' is highlighted with a cursor).

At the bottom of the settings area, there are "Apply" and "Cancel" buttons.

MAC Filter

This page allows you to set MAC filters (Media Access Control) which can be used to allow or deny access to your network. A MAC address is a unique ID assigned by the manufacturer for devices for network communication. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the router.

MAC Filter Settings - Wi-Fi Clients List

Configure the following to block Wi-Fi clients:

MAC Filter Toggle this switch to enable or disable the MAC filter.

MAC Filter- Black List Here is a list of clients' MAC addresses on Wi-Fi that have been denied access to your network.

ID ID number given to each client in the list.


Delete Check this box to delete this client from the list.

MAC Address Specify the MAC address of the computer to be filtered.

Add New Click the **Add New** button and manually enter the MAC address of the client that you want to deny access to your network.

Note: You can view the current list of clients connected to your network and their MAC addresses in **Wi-Fi Clients** on page 31.

Click **Apply** to save your changes.

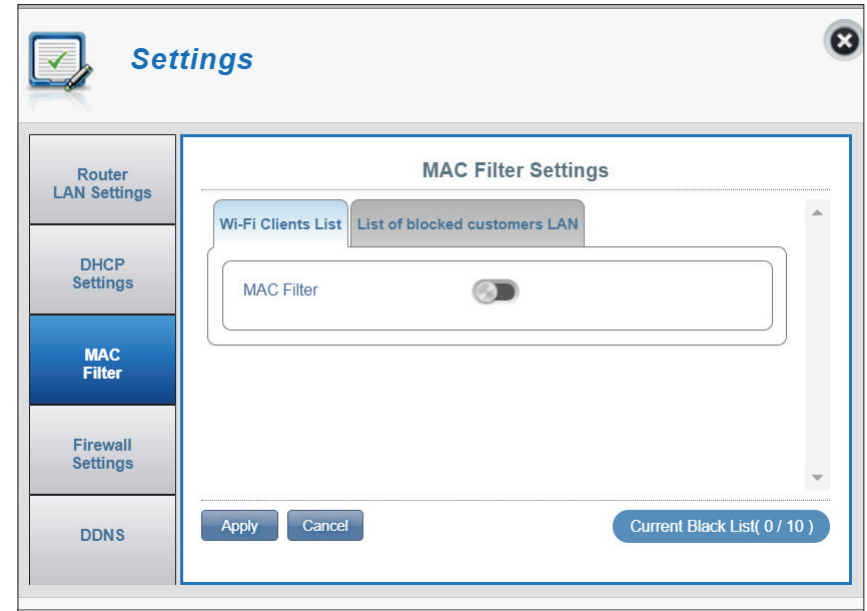

MAC Filter Settings - List of blocked customers LAN

Configure the following for blocking Ethernet LAN clients:

MAC Filter (LAN) - Black List Here is a list of clients' MAC addresses on the LAN that have been denied access to your network.

ID ID number given to each client in the list.

Delete Check this box to delete this client from the list.

MAC Address Specify the MAC address of the computer to be filtered.

Add New Click the **Add New** button and manually enter the MAC address of the client that you want to deny access to your network.

Click **Apply** to save your changes.

The screenshot shows the 'MAC Filter Settings' window with the 'List of blocked customers LAN' tab selected. The window has a sidebar with navigation options: Router LAN Settings, DHCP Settings, MAC Filter (selected), Firewall Settings, and DDNS. The main content area is titled 'Filtering MAC (LAN) - black List' and contains a search input field, a record count indicator 'Records: 1 Displayed: 1-1', and a dropdown menu set to '10'. Below this is a table with the following data:

ID	Delete	List of blocked customers LAN	Enable
1	<input type="checkbox"/>	a2:21:34:34:34:34	<input checked="" type="checkbox"/>

At the bottom of the window are 'Apply' and 'Cancel' buttons.

Firewall Settings

A firewall helps protect your network from external cyber attack and intrusions. This page allows you to alter your router's firewall settings.

Firewall Settings

Firewall Enable Clicking this toggle activates the IP Filter. For more information, see **IP Filter** on page 38.

IP Filter Rules Select **Drop** or **Accept**. Choose **Drop** to block IP addresses defined in the **IP Filter** tab and allow all other network traffic to pass through the router. Or select **Accept** to allow only those defined traffic to pass through your router.

DMZ Settings Toggling the DMZ (Demilitarized Zone) will expose a chosen computer to the outside world by completely disabling firewall and routing all inbound traffic to the DMZ IP Address.

DMZ IP Address Enter the IP address of the DMZ host on the LAN to be exposed to the Internet.



Note: *This feature is only recommended for advanced users. Enabling this option will potentially expose your computer to attacks over the Internet.*

PPTP Pass Through Allows clients to connect to their corporate network or VPN using the PPTP protocol.

IPSec Pass Through Allows clients to connect to their corporate network or VPN using the IPsec protocol.

L2TP Pass Through Allows clients to connect to their corporate network or VPN using the L2TP protocol.

WAN Ping Blocking When enabled the DWR-960 will not respond to pings from WAN.

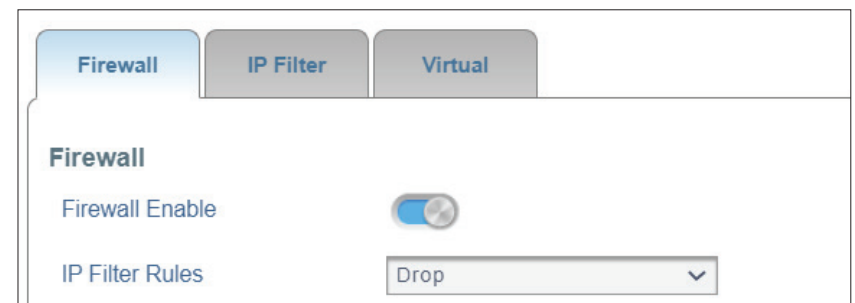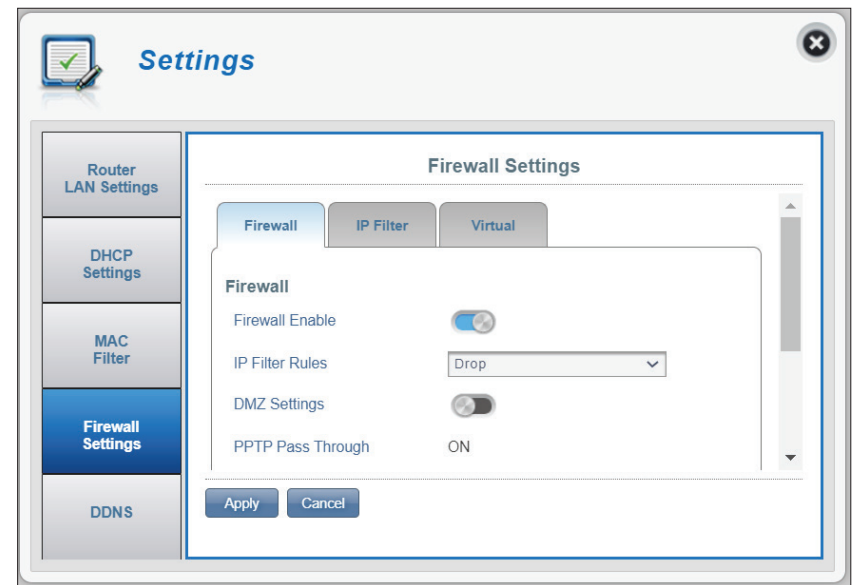

Remote Management Clicking this toggle allows access to web configuration over the Internet. This setting may open your router to external security threats and is not recommended for most users.

Click **Apply** to save your changes.

Firewall IP Filter Virtual

Firewall

Firewall Enable

IP Filter Rules Drop

DMZ Settings

DMZ IP Address 0.0.0.0

Firewall Settings

DMZ IP Address 0.0.0.0

PPTP Pass Through ON

IPsec Pass Through ON

L2TP Pass Through ON

WAN Ping Blocking ON

remote management

IP Filter

The DWR-960 can filter packets based on parameters such as IP addresses and ports. IP filtering allows you to define access rules for firewall settings. Please refer to **Firewall Settings** on page **36**. The DWR-960 supports a maximum of 50 filters.

If you turn on **Firewall Enable**:

ID ID number given to new IP filters.

Delete Click here to select the filters you wish to delete.

Protocol The protocol for the IP filter rule. The options are ICMP, TCP, and UDP.

Source IP The source IP address to which the rule is applied.


Dest IP The destination IP address to which the rule is applied.

Subnet Mask The length of the mask (1-32).

Source Port Number The source port number for the associated service.

Destination Port Number The destination port number for the associated service.

Click **Apply** to save your changes.

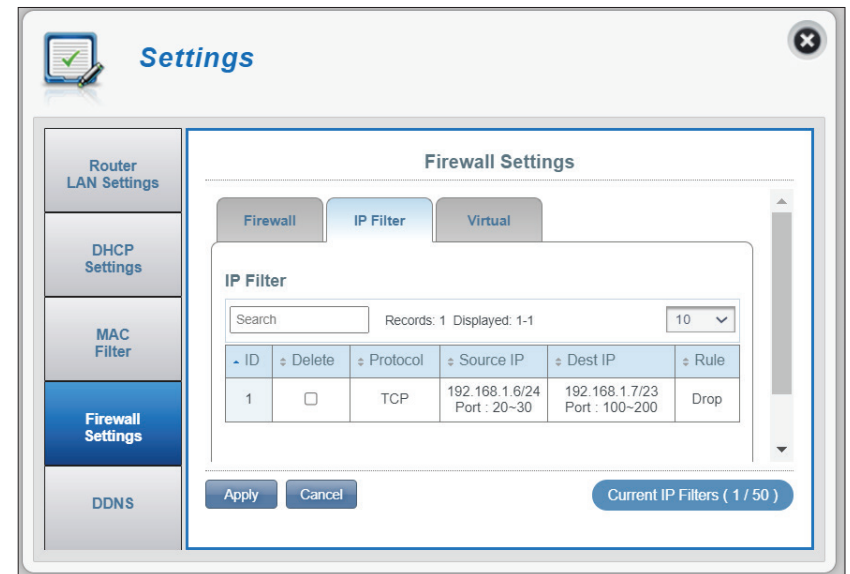

Virtual Server

The virtual server allows you to specify a single public port on the router for redirection to an internal LAN IP address and private LAN port.

ID ID number given to new IP filters.

Delete Click here to select the filters you wish to delete.


Protocol The protocol for the IP filter rule. Refer to <https://www.iana.org/assignments/protocol-numbers/protocol-numbers.xhtml> for Assigned Internet Protocol Numbers.

Destination IP The destination IP address of virtual server.

Private Port The internal port to open for this service.

Global Port The public port to open for this service.

Click **Add New** to add a new virtual server. Then click **Apply** to save your changes.

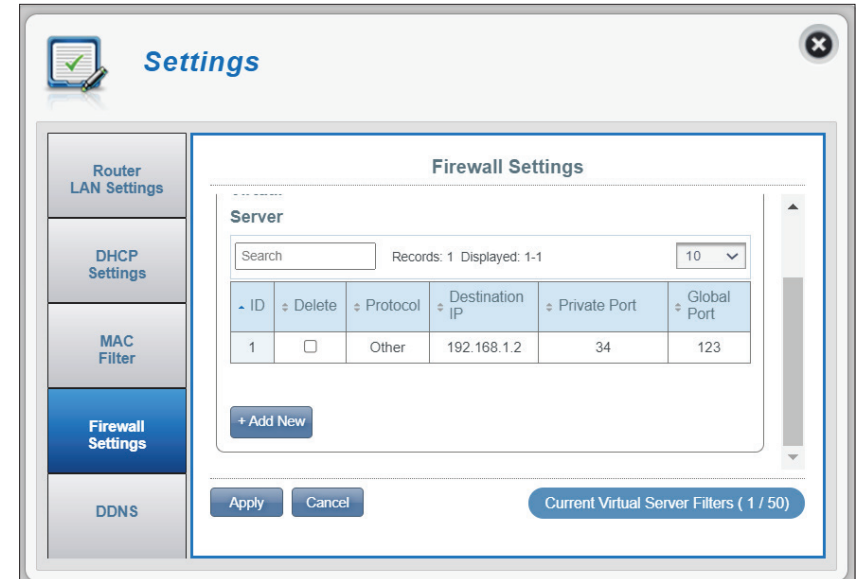

DDNS

Here you can enable the DDNS feature. Dynamic Domain Name System (DDNS) links a domain name to a changing IP address.

DDNS Enable or disable the DDNS.


Provider Displays the DDNS provider name that is supported on the router.

Host Name Enter the host name that you registered with your dynamic DNS service provider.

Username / E-mail Enter your dynamic DNS username.

Password / Key Enter your dynamic DNS password.

Click **Apply** to save your changes.

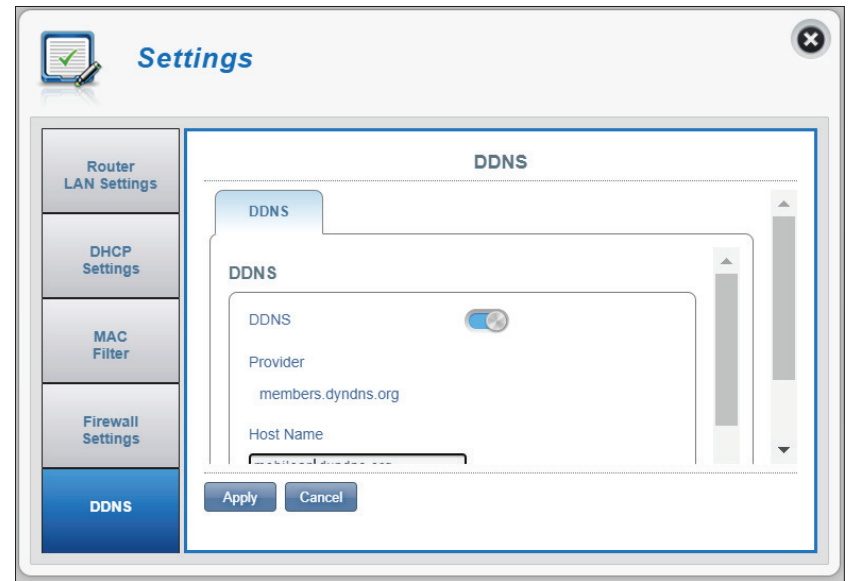

System Information

About DWR-960

FW Version The current firmware version of the DWR-960.

Hardware Version The current hardware version of the DWR-960.

IMEI International Mobile Equipment Identity is a unique number assigned to every mobile device.

IMSI The SIM/USIM/UICC card has a unique number called an International Mobile Subscriber Identity (IMSI). This is used to identify and authenticate users on cellular devices.

Model Name The model name of your D-Link router.

System Uptime The length of time since last restart.

Note: *The FW version number displayed on the image above may differ from the model you have purchased due to firmware updates or regional variation.*



Admin Settings

Account

This tab allows you to customize your own username and password as well as adjust the web configuration's automatic logout timer.

Username Adjust your login username of the web configuration.


Old Password Enter your old password.

New Password Enter your new password.

Confirm Password Enter the new password again.

Auto logout after Click on the drop-down arrow to select the elapsed time before being automatically logged out of the web configuration.

Click **Apply** to save your changes.

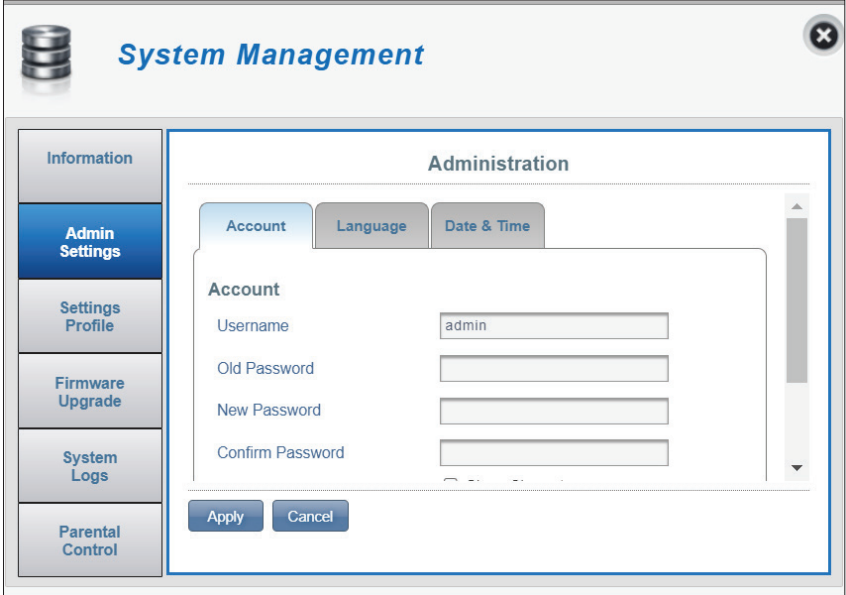


The screenshot displays the 'System Management' web interface. The main navigation menu on the left includes 'Information', 'Admin Settings' (highlighted), 'Settings Profile', 'Firmware Upgrade', 'System Logs', and 'Parental Control'. The 'Administration' section is active, with sub-tabs for 'Account', 'Language', and 'Date & Time'. The 'Account' sub-tab is selected, showing input fields for 'Username' (pre-filled with 'admin'), 'Old Password', 'New Password', and 'Confirm Password'. At the bottom of the form are 'Apply' and 'Cancel' buttons.

Language

This tab allows you to change the default language setting.

Language Select your desired language of the web configuration interface.

Click **Apply** to save your changes.

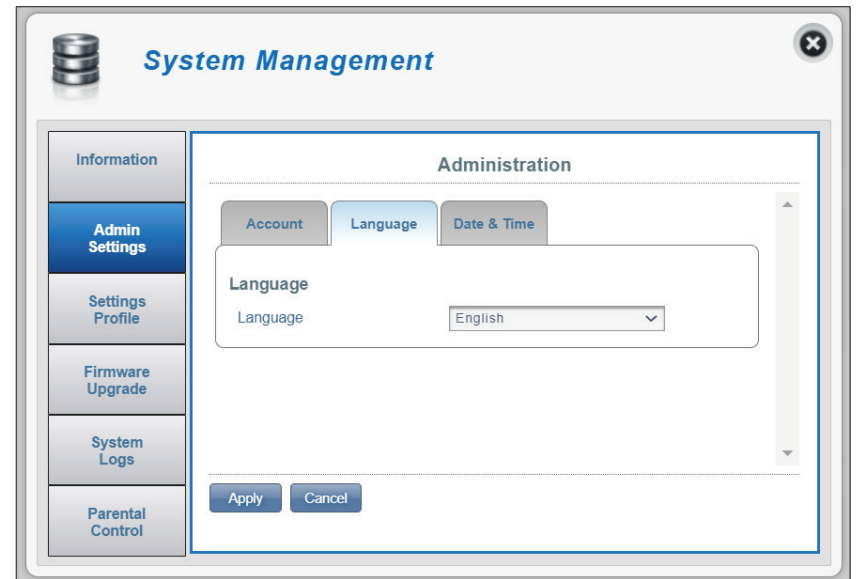

Date & Time

On the Date & Time tab, you can adjust the date, time, and network time synchronization settings of your router.

SNTP Click the toggle to **Enable** or **Disable** automatic time synchronization with a Simple Network Time Protocol (SNTP) server.


Primary, Secondary and Tertiary SNTP Server Enter an SNTP server address which will be used to synchronize the router's time and date.

Time Zone Select your current Coordinated Universal Time zone (UTC).

Synchronization Cycle You can specify (in hours) how frequently the DWR-960 will update the time from an SNTP server.

Daylight Saving Enable this option if your region uses Daylight Saving Time. If you have selected **Enable**, enter the start date and end date.

Click **Apply** to save your changes.

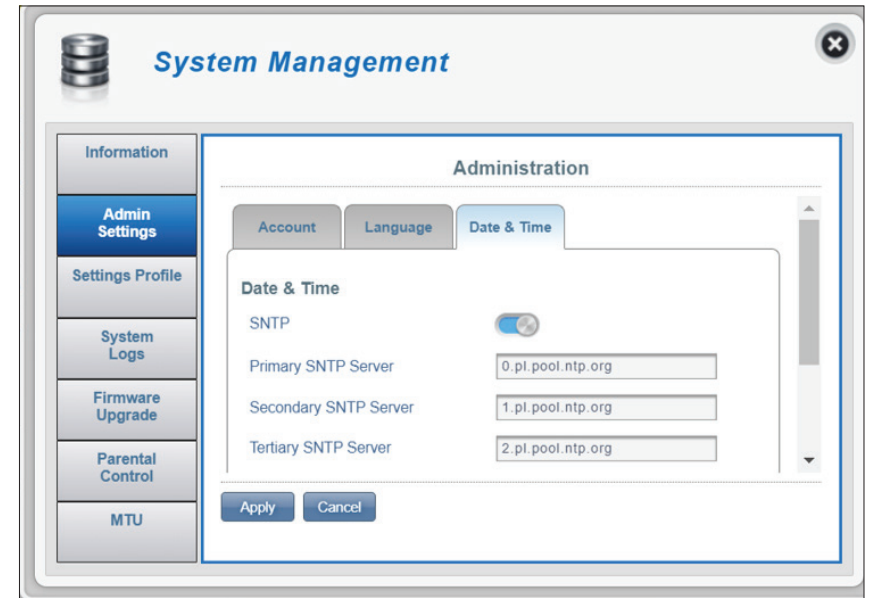

If you disable automatic synchronization with an SNTP server:


Time Zone Select your current Coordinated Universal Time zone (UTC).

Date & Time Select date (MM-DD-YYYY) and time (HH-MM AM/PM) manually.

Current Time The current time for the time zone you have selected is displayed here.

Daylight Saving Enable this option if your region uses Daylight Saving Time. Enter the start date and end date after it is enabled.

Click **Apply** to save your changes.

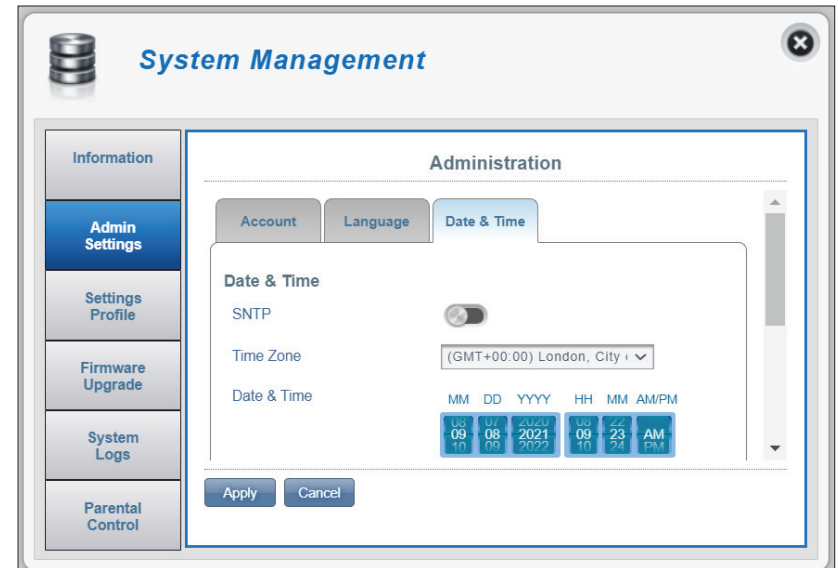

Settings Profile

Export Profiles

On the **Export Profiles** tab you can export your current configuration to a computer.

To Get Current Profile Click the **Click Me** button to download the current settings of your DWR-960. It will be in .sav file format and will be saved in your browser's download directory.



Import Profiles

On the **Import Profiles** tab, you can import previously saved settings for the router.

Select Browse your computer for previously exported settings.

Click **Apply Import** to restore the router to a previously configured state.




Reset / Reboot

On the **Reset/Reboot** tab you can reboot your router or reset it to factory default settings. You can also reset your router by using a straightened paperclip to press and hold the reset button on the router for 5 seconds.

Reset to Default Select the **Reset to Default** button to reset the DWR-960 to factory default settings.

Reboot Select the **Reboot** button to reboot the DWR-960.

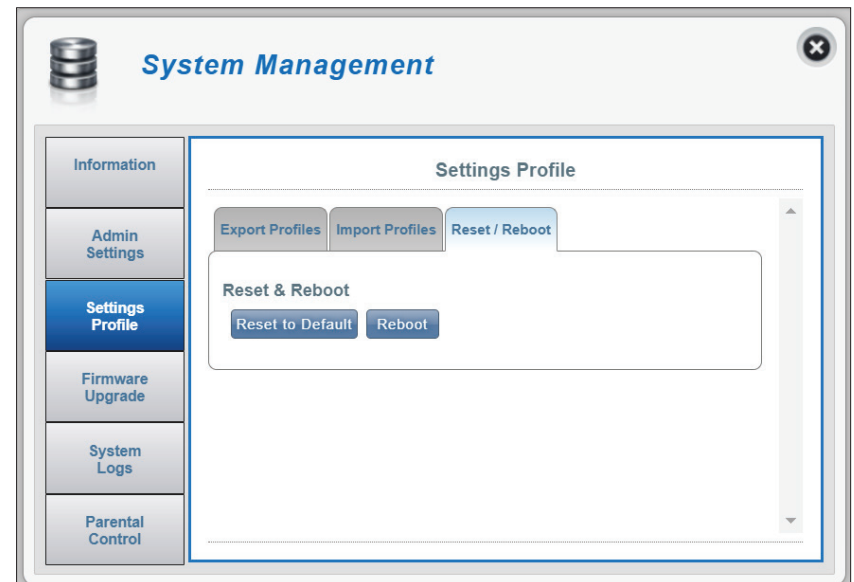

Firmware Upgrade

This page allows you to manually upgrade your router's firmware.

Upgrade My Router



Upgrade My Router Select **Manual** to manually upgrade your router's firmware. To upgrade automatically, select **Remote Server** from the drop down menu, then click **Check Remote Server** and follow the on-screen instructions.

Open File If you have selected a manual upgrade, select the appropriate file for the upgrade, then click the **Start Update** button.

Current Version The current version of your firmware.


Note: The FW version number displayed on the image to the right may differ from your router due to firmware updates or regional variation.

Note: Do not unplug the device or interrupt the upgrade process (upgrade in progress is shown on the right) until the process is complete. Interrupting The upgrade process may corrupt the device.

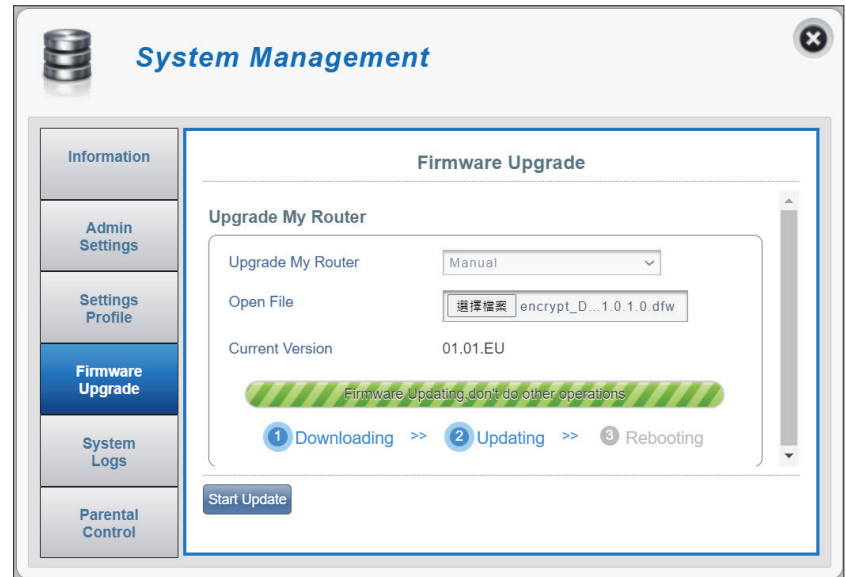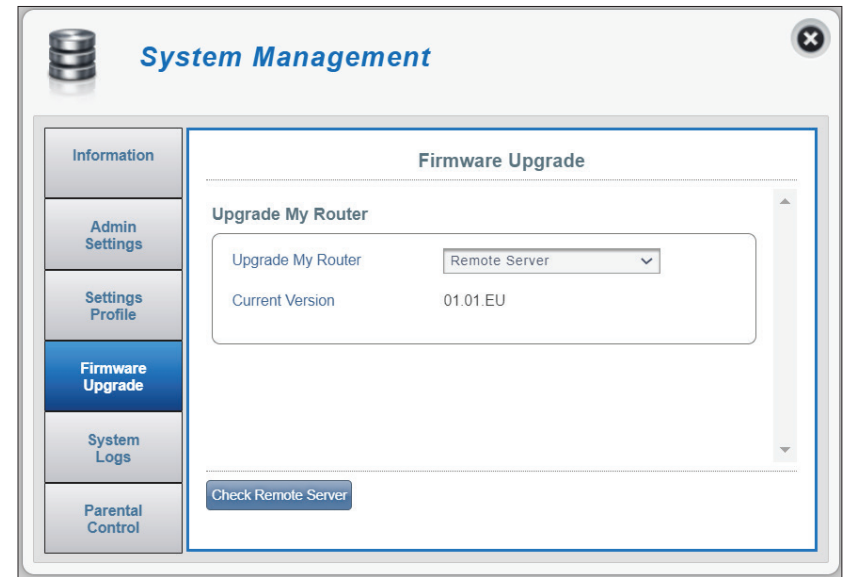

System Logs

The System Logs page displays all of the router's logs. Here you can view, refresh and clear system logs.

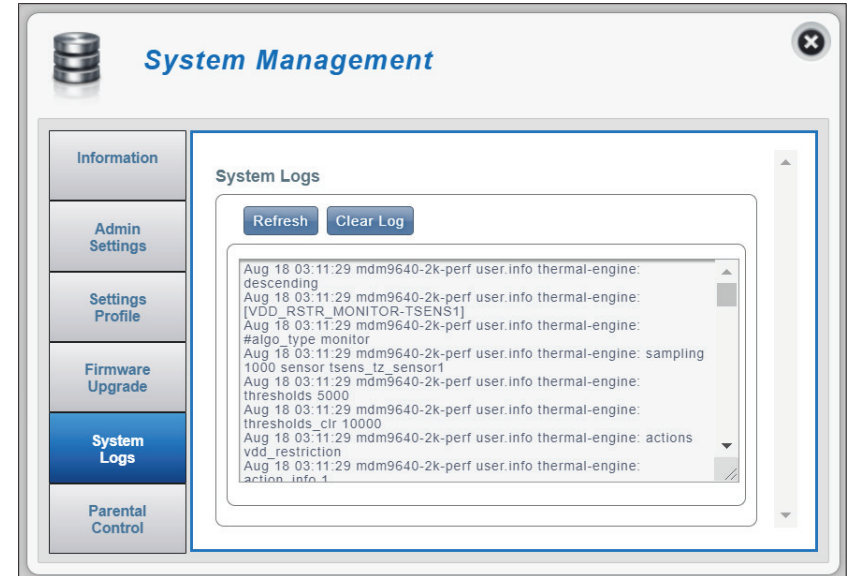

Parental Control

Here you can create and edit parental control policies.

Parental Control

Schedule Configure the following for a new Parental Control policy:
Choose either **Everyday** or **Selected days** for policy schedule.
For the Selected days option, select the days of the week to apply the schedule.

Rule Select the **Start Time** and **End Time** during which the policy will be enforced.

MAC Address Enter the MAC address to add devices to the policy.

Enter the hostname of the client device.

Note: *Devices not on the Configured rules list will not be affected by the control policies.*

Click **Apply** to save your changes.

SMS

Short Messages

On the Short Messages Settings page you can organize, send and receive Short Message Service (SMS) messages by selecting among the **Inbox**, **Drafts** and **Setup** tab. These messages can either be saved to the router's internal memory or on the SIM card itself.

Inbox

Search Type in keyword to display messages containing this keyword.

To reply a message, click the respective Content column, fill in the reply Content, then click **Send** to send the message immediately or **Save as Draft** to save it in the Drafts box.

Click **Apply** to save your changes.

Drafts

To add a new message, click **+Add New** in the upper-right corner. Type in the receiver's number in **Send to** and messages in **Content**, then click **Send** to send the message immediately or **Save as Draft** to save it in the Drafts box.



Setup

Store To Choose between the location to store contact numbers, either on your SIM/UICC card or the DWR-960 device.

Current Short Messages The current number of messages in the Inbox and Drafts.

SMS Center Number Your SIM/UICC card's contact number, which should be preset by your wireless network operator.

Click **Apply** to save your changes.

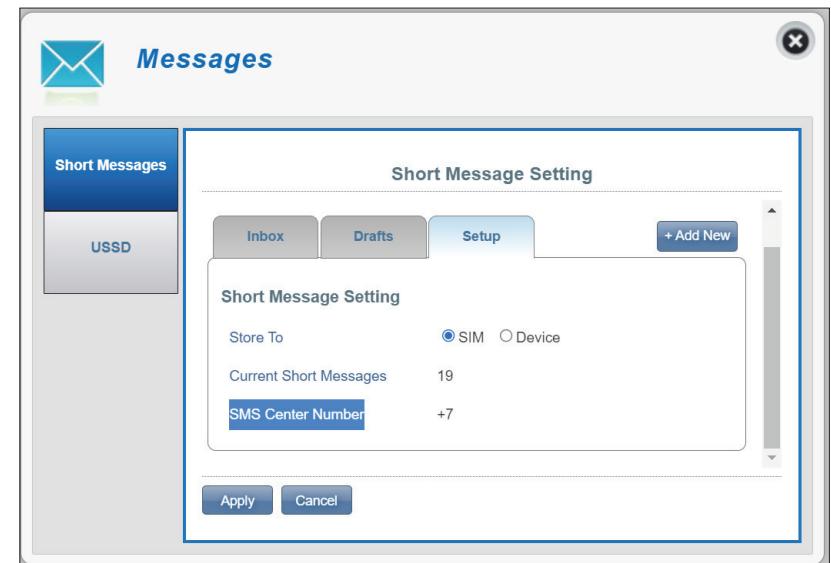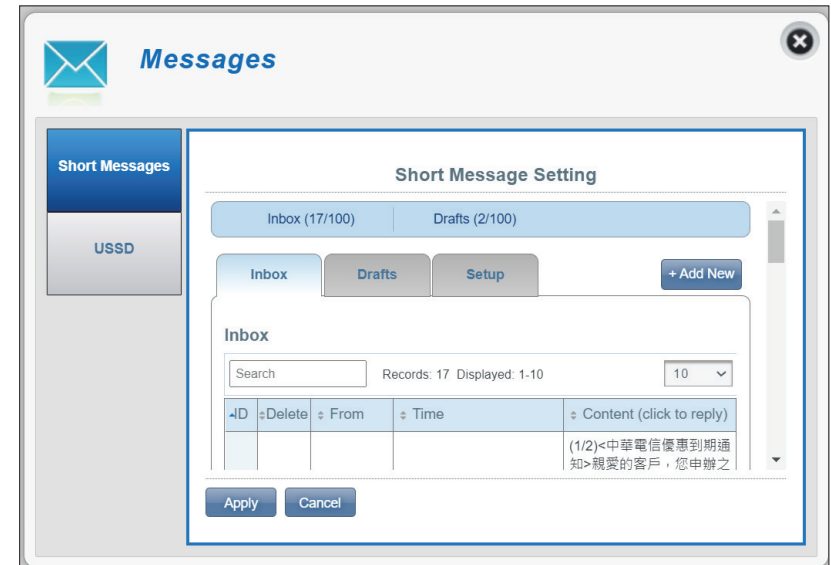


USSD

Unstructured Supplementary Service Data (USSD) allows ISP-specific applications to be activated using instant messaging services.

USSD

USSD Code Enter an application activation code and click the **Send** button. This allows you to activate applications or information services by sending a message to your ISP.

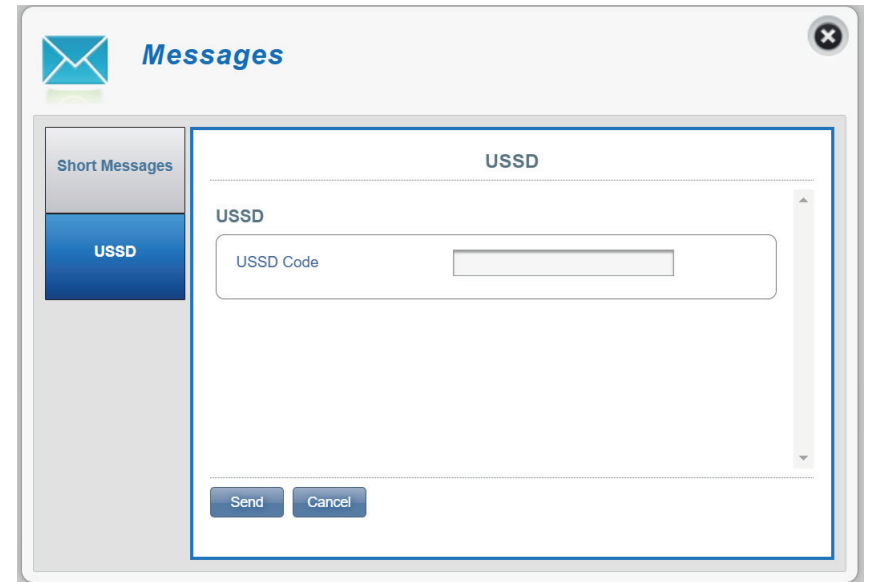


Connecting to a Wireless Network

WPS Button

The easiest way to connect your wireless devices to the router is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the router. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

Step 1 - Press the WPS button on the router for about 1 second. The wireless LEDs will start to blink.

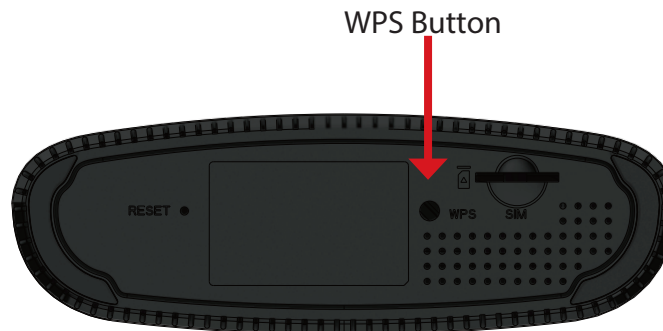

Step 2 - Within 2 minutes, press the WPS button on your wireless device (or launch the software utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the LEDs stop blinking, you will be connected using WPA2 encryption.

Connecting to a Wireless Network Using Windows 10

When connecting to the DWR-960 wirelessly for the first time, obtain the default network name (SSID) and security key (Wi-Fi password) printed on the device label on the bottom of the router.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display and click on it.




↑
Wireless Icon

Clicking on this icon will display a list of wireless networks within connecting proximity of your computer. Select the desired network by clicking on the SSID.




To connect to the SSID, click **Connect**.

To automatically connect with the router when your device next detects the SSID, check **Connect Automatically**.

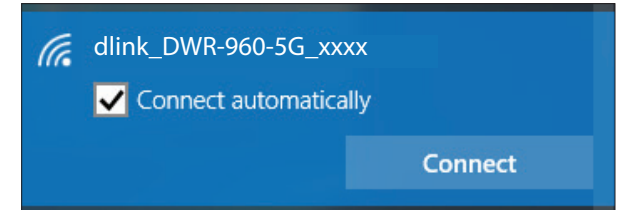


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password in the box and click **Next** to connect to the network. Your computer will now automatically connect to this wireless network when it is detected.

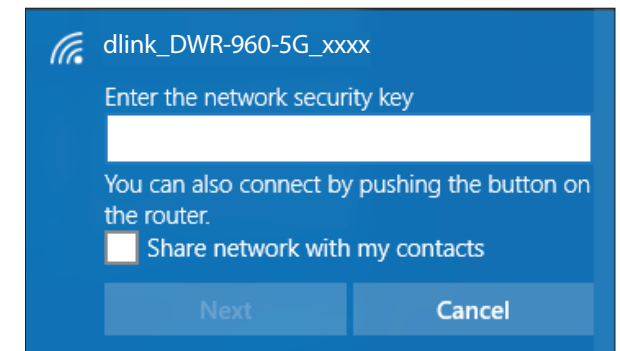

Using Windows 8


It is recommended to enable wireless security method (WPA personal) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password).

To join an existing network, locate the wireless network icon in the taskbar, next to the time display.




↑
Wireless Icon

Clicking on this icon will display a list of wireless networks within connecting proximity of your computer. Select the desired network by clicking on the network name.

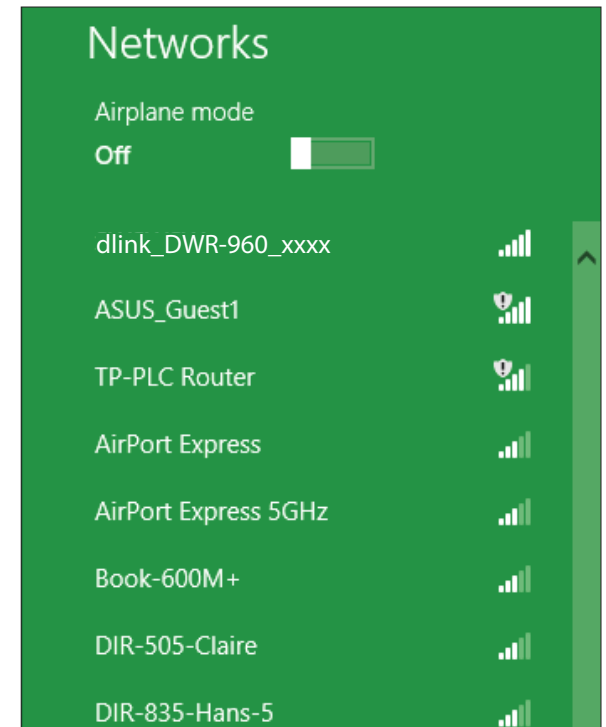


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. If this is the first time connecting to your router, a unique security key for your router will be displayed on a sticker in the router's battery bay. Enter the password into the box and click Next.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

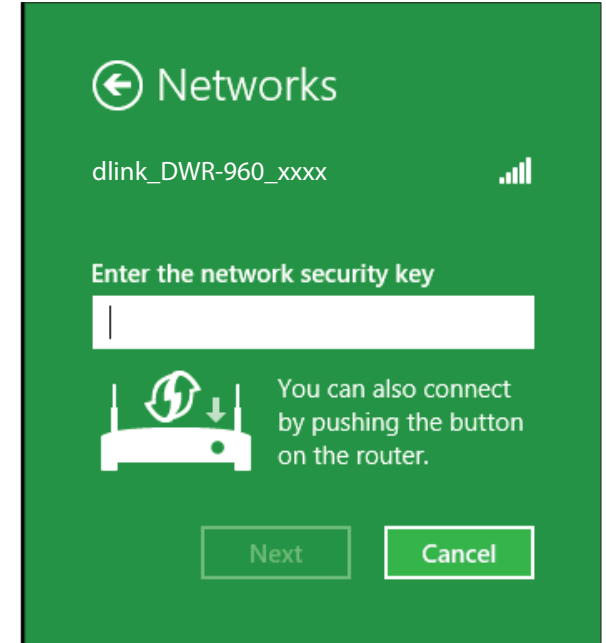

When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

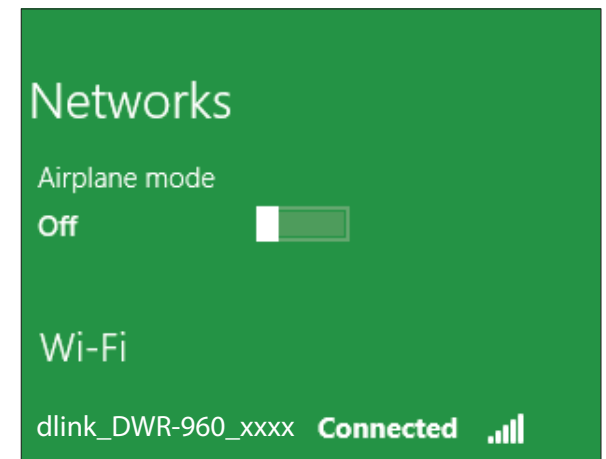


Using Windows 7

Windows 7 users may use the built-in wireless utility to connect to a wireless network. If you are using another company's utility or Windows 2000, please refer to the user manual of your wireless adapter for help with wireless connection. Most utilities will have a "site survey" option similar to the Windows 7 utility as shown below.

If you receive the Wireless Networks Detected pop-up, click on the center of the message to access the utility. You can also click on the wireless icon in your system tray (lower-right corner).

The utility will display available wireless networks in your area.

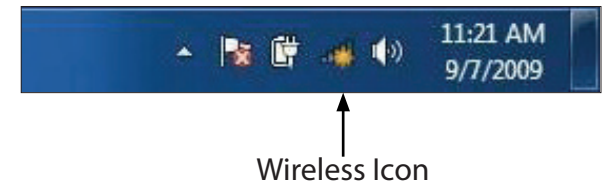


Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 65 for more information.




The following window appears while your computer tries to connect to the router.

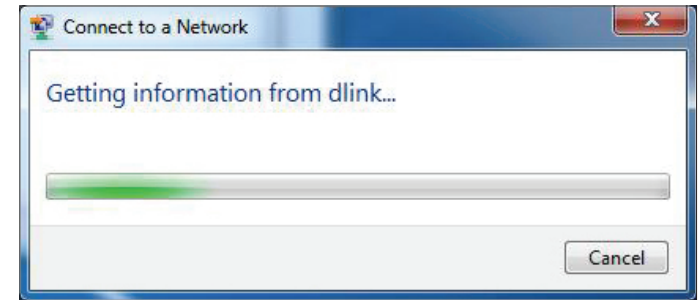

Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **OK**. You can also connect by pushing the WPS button on the router.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as the one configured on the wireless router.

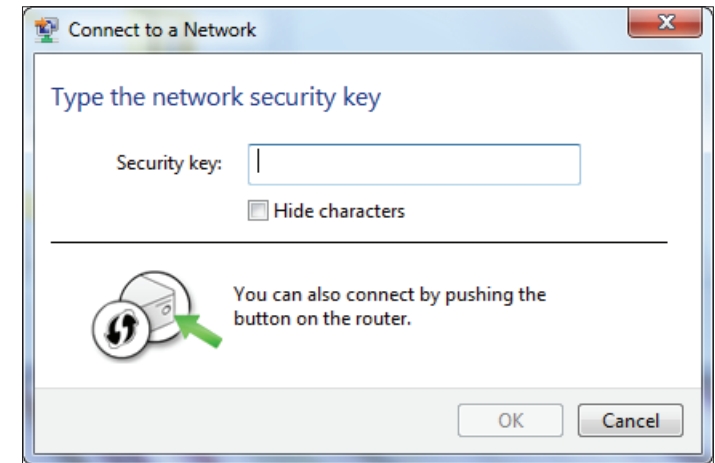

Connect to a Wireless Network Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as shown below.

If you receive the **Wireless Networks Detected** pop-up, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

When the **Wireless Network Connection** window appears, Enter the **Network key** (Wi-Fi password) and confirm the entry, then click **Connect**.

If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 65 for more information.

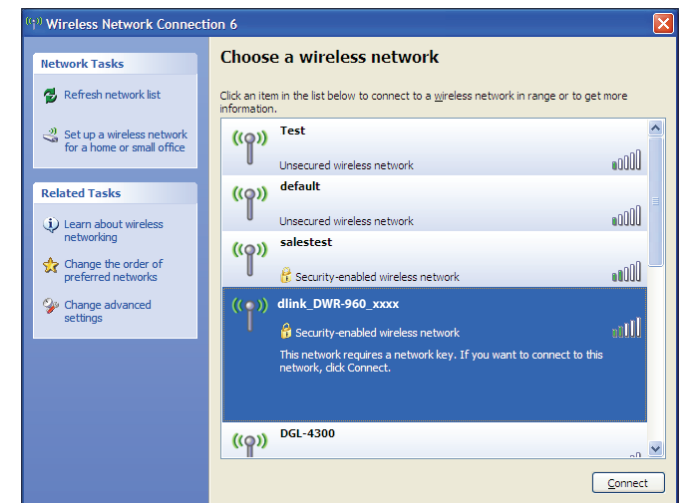

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWR-960. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of your router (192.168.0.1 for example), you are not connecting to a website on the Internet nor do you have to be connected to the Internet. The device has the utility built on to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Internet Explorer 9 or later, Chrome 20 or later, Firefox 12 or later, and Safari 4 or later.
- If attempting to connect wirelessly, ensure that the wireless LED indicators are lit. Also, ensure that you are connected to the correct SSID for your mobile router.
- Make sure that the computer you are using is not connected to any other devices (such as routers or switches) which might have the same IP address as the DWR-960, as this may cause an IP address conflict. If you have a conflict, temporarily unplug any other devices from your computer while you configure the DWR-960. You can change the IP address of the DWR-960 using the configuration utility (go to **Settings > DHCP Settings**). You may also need to renew your computer's IP address configuration. To do this, start the Command utility: Click on **Start** and type **cmd** in the **Search** box. For older versions of Windows®, click on **Start > Run**. In the run box type **cmd** and click **OK**. This will bring up a black screen with white text. At the command prompt, type **ipconfig /release** and wait for the process to be completed. Next, type **ipconfig /renew** which will renew your computer's IP address configuration.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.
- Access the web-based configuration. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Please note that this process will change all your settings back to the factory defaults. To reset the router, locate the reset button (hole) on the bottom of the unit. With the router powered on, use a paperclip to hold the recessed button down for about 5 seconds. Release the button and the router will go through its reboot process. Wait about 40 seconds to access the router. The default IP address is 192.168.0.1. When logging in, leave the password field *blank* which is the default admin password.

Networking Basics


Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start** and type *cmd* in the **Search** box. On older versions of Windows, click **Start > Run**. In the run box type *cmd* and click **OK**.

At the prompt, type *ipconfig* and press **Enter**.

It will display the IP address, subnet mask, and the default gateway of your adapter.

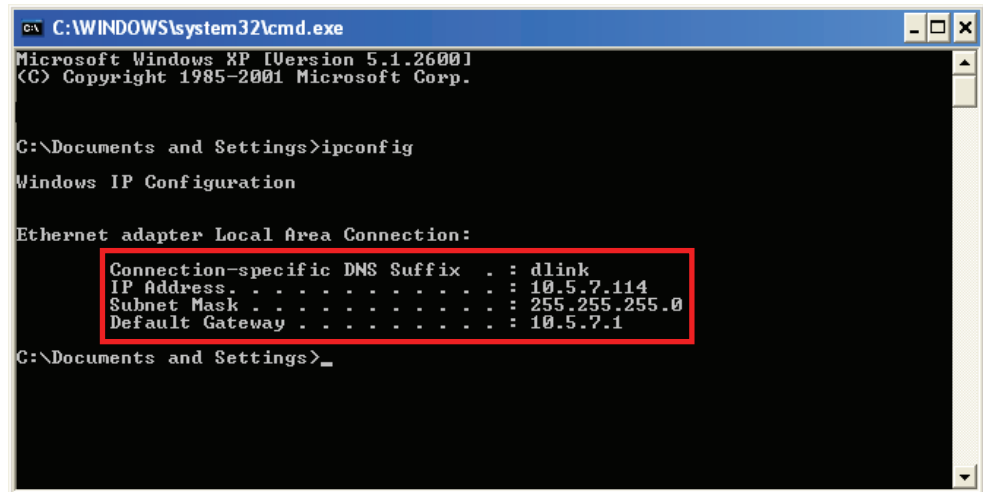

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

If the address is 0.0.0.0 or empty, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

Statically Assign an IP address

If you are not using the DHCP service on the router, or you need to assign a static IP address, please follow the steps below:

Step 1

- Windows® 10 Click on **Start > Settings > Network & Internet**.
- Windows® 7/8 Click on **Start > Control Panel > Network and Internet > Network and Sharing Center**.
- Windows® XP Click on **Start > Control Panel > Network Connections**.

Step 2

Select **Wi-Fi > Manage known networks**. For Windows 7/8/XP, click **Change adapter settings**. Choose the network you want to modify, right-click on it, then select **Properties**.

Step 3

Under **IP assignment**, select **Edit**. For Windows 7/8/XP, select **Internet Protocol Version 4 (TCP/IPv4) Properties**. Then select **Use the Following IP Address**.

Step 4

Under **Edit IP** settings, select **Manual**. If IPv4 is selected, type the IP address settings in **IP address**, **Subnet mask**, and **Gateway** fields.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 254. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router.

Set Preferred DNS the same as the LAN IP address of your router. The Alternate DNS is only optional or you may enter a DNS server from your ISP.

Step 5

When you're done, click **Save**.

The screenshot shows the 'Edit IP settings' window. At the top, there is a dropdown menu set to 'Manual'. Below it, the 'IPv4' section has a blue toggle switch labeled 'On'. Underneath, there are four input fields: 'IP address' with '10.1.2.222', 'Subnet prefix length' with '24', 'Gateway' with '10.1.2.1', and 'Preferred DNS' which is empty. At the bottom, there is an 'Alternate DNS' field, also empty.

Technical Specifications

Radio Frequency Bands¹

- FDD-LTE: Band 1/3/7/8/20/38
- (CA DL support: B1+B3, B1 + B7, B1+B8, B1+B20, B3+B8, B3+B20, B3+B7, B3+38, B7+B20, B3+B3 B7+B7, B38+B38; CA UL Support: 3C, 7C, 38C)
- DC-HSPA+/HSPA+/HSUPA/HSDPA/WCDMA: B1/B8
- EDGE/GPRS/GSM: B2/B3/B5/B8

Cellular Access²

- LTE maximum speed: 300 Mbps DL/100 Mbps UL
- DC-HSPA+ maximum speed: 42 Mbps DL/5.76 Mbps UL
- HSPA+ maximum speed: 21 Mbps DL/ 5.76 Mbps UL
- HSPA maximum speed: 7.2 Mbps DL/5.76 Mbps UL
- UMTS maximum speed: 384 Kbps DL/384 Kbps UL
- EDGE mode maximum speed: 237 Kbps DL/118 Kbps UL
- GPRS mode maximum speed: 85.6 Kbps DL/42.8 UL

WAN Connection

- DHCP
- Static
- PPPoE

Wi-Fi Access Point

- 802.11ac
- 802.11a
- 802.11n
- 802.11g
- 802.11b

Antenna

- 2 x 3G/ LTE external Antennas

SIM/UICC Slot

- Standard mini-SIM/UICC card interface

Indicators

- Power/2.4GHz/5GHz/LAN/INTERNET LED Indicators
- 4-level Signal Strength LED indicator for mobile connectivity

Wireless Encryption

- 64 / 128-bit WEP (Wired Equivalent Privacy)
- WPA-PSK & WPA2-PSK (Wi-Fi Protected Access - Pre-Shared Key)
- Wi-Fi Protected Setup (WPS)

Firewall

- NAT
- Port Range Forwarding
- DMZ
- UPnP

Dimensions (L x W x H)

- 132 x 126 x 44 mm

Weight

- 300 g

Operating Temperature

- 0 to 40 °C (32 to 104 °F)

Storage Temperature

- -10 to 70 °C (14 to 158 °F)

¹ Supported frequency band is dependent upon regional hardware version.

² Data rates are theoretical. Data transfer rate depends on network capacity, signal strength, and other factors.

Regulatory Information

CE EMI Class A Warning

This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.



	Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Consommation d'énergie max. Potencia máxima de Salida Potenza max. Output Max. Output Power
2.4 G	TX/RX 2412 MHz - 2472 MHz	18.02 dBm (E.I.R.P)
GSM-900	TX 800 MHz - 915 MHz RX 925 MHz - 960 MHz	33.5 dBm (Power class 4)
GSM1800	TX 1710 MHz - 1785 MHz RX 1805 MHz - 1880 MHz	31.0 dBm (Power class 4)
WCDMA FDD I	TX 1922.4 MHz - 1977.6 MHz RX 2112.4 MHz - 2167.6 MHz	24.5 dBm (Power class 3)
WCDMA FDD VIII	TX 882.4 MHz - 912.6 MHz RX 927.4 MHz - 957.6 MHz	24.5 dBm (Power class 3)
LTE Band 1	TX 1922.5 MHz - 1977.5 MHz RX 2112.5 MHz - 2167.5 MHz	25 dBm (Power class 3)
LTE Band 3	TX 1710.7 MHz - 1784.3 MHz RX 1805.7 MHz - 1879.3 MHz	25 dBm (Power class 3)

LTE Band 7	TX 2502.5 MHz - 2567.5 MHz RX 2622.5 MHz - 2687.5 MHz	25 dBm (Power class 3)
LTE Band 8	TX 880.7 MHz - 914.3 MHz RX 925.7 MHz - 959.3 MHz	25 dBm (Power class 3)
LTE Band 20	TX 834.5 MHz - 859.5 MHz RX 793.5 MHz - 818.5 MHz	25 dBm (Power class 3)
LTE Band 38	TX/RX 2572.5 MHz - 2617.5 MHz	25 dBm (Power class 3)

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com .
Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le microprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com .

Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tniżżel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com .
Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com .

Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .
Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .

Warning Statement:

The power outlet should be near the device and easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz band within the EU.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 5,15-5,35 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Die Funktionalität im Ad-hoc-Modus bei Betrieb auf 5 GHz ist für dieses Gerät eingeschränkt. Bei dem Ad-hoc-Modus handelt es sich um eine Peer-to-Peer-Kommunikation zwischen zwei Client-Geräten ohne einen Access Point.
- Access Points unterstützen die Funktionen DFS (Dynamic Frequency Selection) und TPC (Transmit Power Control) wie erforderlich bei Betrieb auf 5 GHz innerhalb der EU.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 5,15 à 5,35 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Cet appareil ne peut pas utiliser le mode Ad-hoc lorsqu'il fonctionne dans la bande de 5 GHz. Le mode Adhoc fournit une communication directe pair à pair entre deux périphériques clients sans point d'accès.
- Les points d'accès prendront en charge les fonctionnalités DFS (Dynamic Frequency Selection) et TPC (Transmit Power Control) au besoin lors du fonctionnement dans la bande de 5 GHz au sein de l'UE.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 5,15-5,35 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Este dispositivo tiene restringido el funcionamiento en modo Ad-hoc mientras funcione a 5 Ghz. El modo Ad-hoc es la comunicación directa de igual a igual entre dos dispositivos cliente sin un punto de acceso.
- Los puntos de acceso admitirán la funcionalidad DFS (Selección de frecuencia dinámica) y TPC (Control de la potencia de transmisión) si es necesario cuando funcionan a 5 Ghz dentro de la UE.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 5,15 a 5,35 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Questo dispositivo non può essere attivato in modalità Ad-hoc durante il funzionamento a 5 GHz. La modalità Ad-hoc è una comunicazione diretta peer-to-peer fra due dispositivi client senza un punto di accesso.
- I punti di accesso supportano le funzionalità DFS (Dynamic Frequency Selection) e TPC (Transmit Power Control) richieste per operare a 5 GHz nell'Unione europea.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEbruik IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 5.15-5.35 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Dit toestel kan niet functioneren in Ad-hoc mode wanneer het gebruikt wordt in 5 GHz. Ad-hoc mode is directe peer-to-peer communicatie tussen twee klantenapparaten zonder een toegangspunt.
- Toegangspunten ondersteunen DFS (Dynamic Frequency Selection) en TPC (Transmit Power Control) functionaliteit zoals vereist bij gebruik in 5 GHz binnen de EU.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSINFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing of and Recycling Your Product

ENGLISH

EN



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO₂.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odneste jej prosím na sběrné místo určené místními úřady k tomuto účelu. Některá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR**HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK**NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK**DK**

Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

SUOMI**FI**

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.