


4-Port 802.3bt 90W 5Gbps PoE Injector


Product Diagram

AS445C-POE-INJECTOR


Front View

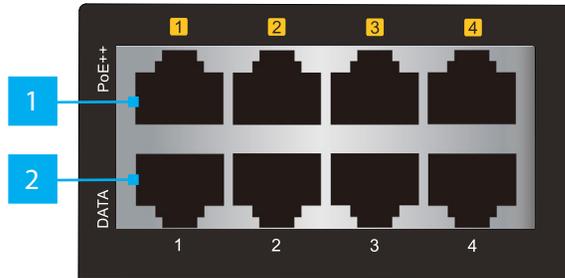

Back View

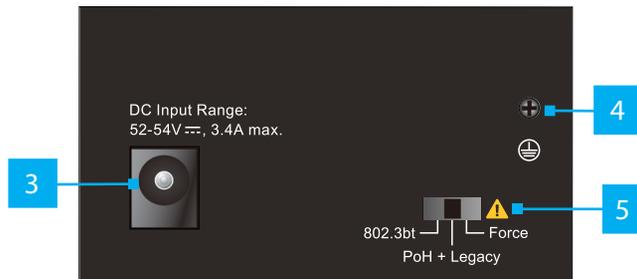

Top View

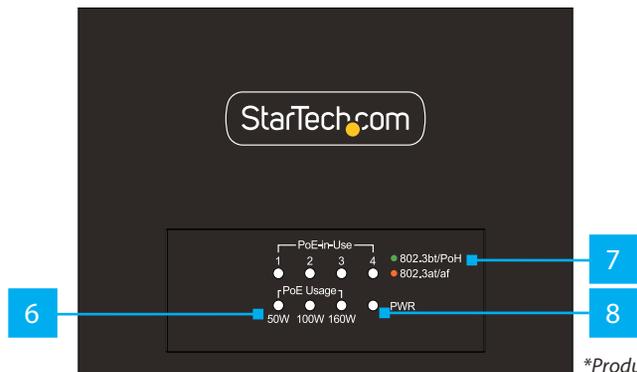

*Product may vary from image

	Port/LED/Connector	Function
1	PoE++ Ports x 4 (Data + Power)	<ul style="list-style-type: none"> Connect a Network Cable to a PD (Powered Device) <ul style="list-style-type: none"> Note: 160W shared power allocation across all PoE ports. Supports 5 Gbps, 2.5 Gbps, 1 Gbps, 100 Mbps, and 10 Mbps
2	Data Ports x 4 (Data Input)	<ul style="list-style-type: none"> Connect a Network Cable to a Network Device Supports 5 Gbps, 2.5 Gbps, 1 Gbps, 100 Mbps, and 10 Mbps
3	DC Power Port	<ul style="list-style-type: none"> Connect to a Power Source using the included Power Adapter Recommended 54 V and 3.3 A. Type M barrel plug, Ø 5.5x2.1x9.5mm
4	Grounding Point	<ul style="list-style-type: none"> Attach a Grounding Wire to the PoE Injector and to an Earth Ground Connection <ul style="list-style-type: none"> Note: A Grounding Wire is typically green or green with a yellow stripe and should be at least 18 AWG.
5	PoE Operation Mode Switch	<ul style="list-style-type: none"> Three positions are available: <ul style="list-style-type: none"> 802.3bt (default). Operates as a 90W 802.3bt PoE++ type 4 PSE (Power Source Equipment) PoH + Legacy. Operates as a 95W PoH (Power over HD-BASE-T) PSE with Legacy function Force. Operates as a non-negotiating 4-pair 60W PoE PSE. Useful for PoE devices that lack a proper handshake. <ul style="list-style-type: none"> Warning! Force Mode is intended for PoE PDs only.
6	PoE Usage LEDs	<ul style="list-style-type: none"> Steady Amber. Indicates that the system is consuming over the indicated PoE power budget Blinking Amber. Indicates that the system is consuming under the indicated PoE power budget
7	PoE-in-Use LEDs	<ul style="list-style-type: none"> Steady Green. Indicates that the port is providing 802.3bt PoE++/PoH/Force power to the remote powered device Steady Amber. Indicates that the port is providing 802.3af/ at PoE/PoE+ power to the remote powered device Off. Indicates that no power is being provided to the remote device
8	Power LED	<ul style="list-style-type: none"> Steady Green. Indicates that power is being supplied to the PoE Injector

To view manuals, FAQs, videos, drivers, downloads, technical drawings, and more, visit www.startech.com/support

Package Contents

- 4-Port PoE Injector x1
- DIN Rail Mounting Kit x 1
- Universal Power Adapter x 1
- Quick-Start Guide x 1

Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit: www.startech.com/AS445C-POE-INJECTOR

- Phillips head screwdriver

Installation

Warnings!

Force Mode: Prior to connecting the PSE to a PD, ensure the PD supports 60W PoE through pin 1/2 (-), 3/6 (+), pin 4/5 (+), and 7/8 (-). Otherwise, the PD may be damaged as power is injected without handshaking.

Prior to powering on the PSE, ensure that a Grounding Wire is connected to the PSE. A Grounding Wire should typically be green or green with a yellow stripe and should be at least 18 AWG.

Prior to connecting the PSE to a PD ensure that the PD supports the corresponding PoE setting on the PoE Operation Mode Switch to prevent potential damage.

Power OFF the PoE Injector before adjusting the PoE Operation Mode Switch, and then power it back ON.

The legacy detection feature identifies the PDs that do not fully follow the IEEE 802.3af/at/bt standards and their unique electrical handshakes. This allows the PoE Injector to provide power to those PDs.

Regulatory Compliance

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders. PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

FCC - Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

Industry Canada Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [A] est conforme à la norme NMB-003 du Canada.

CAN ICES-3 (A)/NMB-3(A)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

1. Connect an **Ethernet Cable** from the **Source Network Device** (i.e., router, modem, or non-PoE switch) to the **Data Port(s)** on the **PoE Injector**.
2. Connect an **Ethernet cable** to the **Corresponding PoE++ Port(s)** on the **PoE Injector**.
3. Connect the other end of the **Ethernet Cable** used in **Step 2** to either a **Powered Device (PD)**, or to a **PoE Splitter** to separate **Data** and **Power**.
4. Plug the included **Power Adapter** to an **AC Outlet** and connect it into the **DC Power Port**. Ensure the **Power LED** is illuminated.

DIN Rail Installation

1. Insert a **Mounting Screw** through the **Mounting Plate** and into the **PoE Injector**. Using a **Phillips Head Screwdriver**, tighten the **Mounting Screw** just enough to catch the thread. (Figure 1)
2. Re-align the **Mounting Plate** with the **Mounting Holes** and insert the second **Mounting Screw**. Alternate between gently driving each **Mounting Screw** until both are tight.
3. Select the desired **PoE Operation Mode** before mounting onto the **DIN Rail**.
4. Mount the **PoE Injector** by inserting the **Mounting Plate** at an angle starting from the **Top** then **Push** against the **DIN Rail**. (Figure 2)

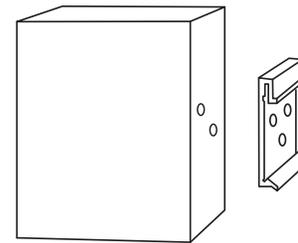


Figure 1

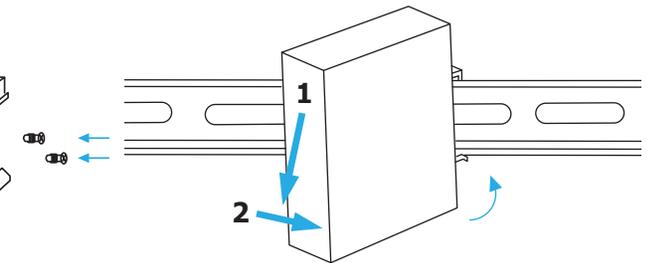


Figure 2

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

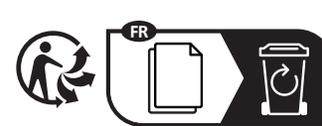

Points de collecte sur www.quefairemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

StarTech.com Ltd.

45 Artisans Crescent
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

4490 South Hamilton
Road
Groveport, Ohio
43125
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle 15
Gowerton Road
Brackmills,
Northampton
NN4 7BW
United Kingdom

StarTech.com Ltd.

Siriusdreef 17-27
2132 WT Hoofddorp
The Netherlands

FR: startech.com/fr

DE: startech.com/de

ES: startech.com/es

NL: startech.com/nl

IT: startech.com/it

JP: startech.com/jp