



TA-MS0402-N011-0004

**4x2 Conference Presentation Switch
with HDBT & Dante**



User Manual

VER 1.0

Table of Contents

Introduction	2
Overview	2
Features	3
Package Contents	4
Specifications	4
Panel Description	8
Installation and Wiring.....	10
Installation	11
Wiring	11
Auto Switching	13
Button Control	13
RS232 Operation	14
Device Control	14
Control 3rd-party Device	15
TCP to RS232 routing	16
LAN Control	16
Obtain the IP Address of the Device	16
Telnet	17
Log in to the Web UI	17
Reset password and IP mode	18
Web UI	18
Dante Introduction	36

Introduction Overview

This product is a 4x2 conference presentation switcher, it is specially designed for conference room scenarios, featuring various models and specifications to meet diverse user needs. It supports 4x2 matrix switching and optional long-distance video, audio, and USB transmission via HDBT 3.0 technology. Equipped with dual USB-C full-featured and dual HDMI+USB 3.0 inputs, it can connect multiple laptops or desktop computers. It supports 4 local USB 3.0 device ports, enabling connection to various USB conference devices such as USB cameras, audio-bars, and USB speakers, and can extend USB connectivity over long distances via HDBT. The presentation switcher offers flexible audio configuration, allowing HDMI audio, USB audio, and Dante audio to be output through a local balanced audio output port, also with the option to output conference audio to remote Dante-supported devices through the Dante port. The presentation switcher supports multiple control interfaces, including RS232, GPIO, RELAY, and Sensor interfaces, for seamless integration with various controlled devices. With complete network functionality, it provides 2 independent RJ-45 interfaces and supports USB-to-Ethernet functions. Through the VLAN division and 802.1x, switcher and USB networks can be separated to meet security requirements. The presentation switcher provides multiple switching options, including automatic switching, manual switching, and configuration priority switching. It also supports HTTP and HTTPS configuration, 802.1x security, CEC and RS232 configuration, customized GPIO function, and comes with built-in Web UI and API control.

It can be utilized either as a standalone device or connected to third-party control systems, making it easy for users to integrate into their system solutions.

Features

4x2 conference presentation switch, integrating video, audio, USB, control and ethernet.

Dual USB-C and dual HDMI + USB 3.2 inputs, and all ports support cable lock connections.

Full-featured USB-C inputs, supports 4K video, USB 3.2 data, USB ethernet and 60W charging.

One USB-C input supports MST for dual-screen conferencing applications.

Supports automatic switching, USB and video independent switching, priority switching, and other switching methods.

Provides 4 USB 3.2 device ports for connecting conference equipment, such as cameras and speakerphone.

Provides one balanced audio out port for connecting audio equipment, supports audio de-embedding, UAC, and Dante.

Provides 100m HDBT 3.0 output for video and USB extension applications in medium and large conference rooms.

Provides RS232, GPIO, RELAY, and OCS Sensor ports to connect various control and controlled devices.

One USB charge-only port is connected to the conference table to provide a charging function for mobile phones.

Each input port provides an independent USB to Ethernet bridge, providing a 1G ethernet connection to the connected computer.

Provides two independent RJ-45 ports for ethernet switch or VLAN Setting.

Supports one RJ-45 port for 1x1 Dante. Supports ethernet control, supports HTTP and HTTPS, and supports 802.1x authentication.

Package Contents

1 x Matrix Switcher 1 x DC 20V/10A Power Adapter 1 x AC Power Cord with US Pins 2 x USB 3.2 Type-C to Type-C Cable (L = 2m) 2 x USB 3.0 Type-A to Type-B Cable (L = 1.8m) 1 x 3.5mm 3-Pin Phoenix Male Connector 2 x 3.5mm 3-Pin Phoenix Male Connector (Double Layer) 1 x 3.5mm 5-Pin Phoenix Male Connector 1 x 3.5mm 6-Pin Phoenix Male Connector 4 x Mounting Brackets (with Screws)

Specifications

Technical	
Input/Output Port	2 x HDMI IN, 2 x USB-C IN, 2 x HDMI OUT, 1 x HDBT, 2 x USB HOST (USB Type-B), 1 x AUDIO OUT (3.5mm, 5-pin phoenix connector), 4 x USB DEVICE (USB Type-A), 2 x RS232, 1 x GPIO (3.5mm, 6-pin phoenix connector), 2 x RELAY, 1 x SENSOR, 2 x ETHERNET (RJ45), 1 x DANTE (RJ45), 1 x DC 20V
Input/Output Signal Type	Supports HDMI 2.0 standard, up to 4K@60Hz 4:4:4 8bit or 4K@60Hz 4:2:2 12bit. Supports HDCP 2.2/1.4.
USB HOST IN 1 & 2	Supports USB 3.2 Gen 2x1 standard, up to 10Gbit/s
USB-C IN 3&4	USB-C IN 3: USB-C supports USB 3.2 Gen 2x1 standard, and supports: Video: DP alt mode, SST only, up to 4K@60Hz. USB data: Up to 10Gbit/s. Charging: 60W.

Technical	
	USB-C IN 4: USB-C supports USB 3.2 Gen 2x1 standard, and supports: Video: DP alt mode, MST dual output, up to 4K@60Hz. USB data: Up to 10Gbit/s. Charging: 60W.
USB DEVICE	Maximum supports USB 3.2 Gen 2x1 standard, up to 10Gbit/s. 5V/1.5A output per port.
Input/Output Resolution Supported	VESA: 800 x 6006, 1024 x 7686, 1280 x 7686, 1280 x 8006, 1280 x 9606, 1280 x 10246, 1360 x 7686, 1366 x 7686, 1440 x 9006, 1600 x 9006, 1600 x 12006, 1680 x 10506, 1920 x 12006, 2048 x 11526, 2560 x 14406, 3440 x 14406 CTA: 1280x720P5,6, 1920x1080P1,2,3,4,5,6 , 3840x2160P1,2,3,4,5,6, 4096x2160P1,2,3,4,5,6 1 = at 24 (23.98) Hz, 2 = at 25 Hz, 3 = at 30 (29.97) Hz, 4 = at 48 Hz, 5 = at 50 Hz, 6 = 60 (59.94) Hz
HDR	All HDR formats, including HDR 10, HLG, HDR 10+ and Dolby Vision
Audio Format	USB-C IN/HDMI IN/ HDMI OUT: Up to 7.1ch, including PCM 2.0/5.1/7.1ch, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos, DTS 5.1, DTS-HD Master Audio and DTS:X. Audio de-embedding: Stereo only. Dante: Stereo only.
ETHERNET	1000M/100M adaptive network
Maximum Data Rate	USB-C IN: 10Gbit/s (per lane) HDMI: 18Gbps USB 3.2: 10Gbit/s
Control Method	Front Panel Buttons, RS232, LAN (Telnet &Web UI)

General	
Operating Temperature	0°C to 45°C (32°F to 113°F)
Storage Temperature	-20°C to 70°C (-4°F to 158°F)
Humidity	10% to 90%, non-condensing
ESD Protection	Human-body Model: ±8kV (Air-gap discharge)/

General	
Power Supply	$\pm 4\text{kV}$ (Contact discharge) DC 20V, 10A
Power Consumption (Max)	Without USB and Charging: 13.1W With USB + Charging: 155.6W
Device Dimension (W x H x D)	325mm x 25mm x 180.2mm / 12.80" x 0.98" x 7.09" (without mounting brackets)
Product Weight	1.45kg/3.20lbs

Transmission Distance

Note:

T568B straight-through category cable is recommended.

Please use F/FTP or U/FTP cable, and don't use UTP, F/UTP, or U/UTP cables.

Cable Type	Range	Supported Video
Cat 5e/6	70m/230ft	4K@60Hz 4:2:0 24bpp 4K@30Hz 1080P@60Hz
	40m/131ft	4K@60Hz 4:4:4 24bpp 4K@60Hz 4:2:2 36bpp
Cat 6A (U/FTP)	100m/330ft	4K@60Hz 4K@30Hz 1080P@60Hz


Use Patches

Note:

Patches may be used in the installation, and the patches will obviously affect the transmission distance. Limits and distances are as follows:

Support up to 2 patch cables, each not exceeding 5m.

Patches must be installed on both ends of the device, refer to the following pictures:

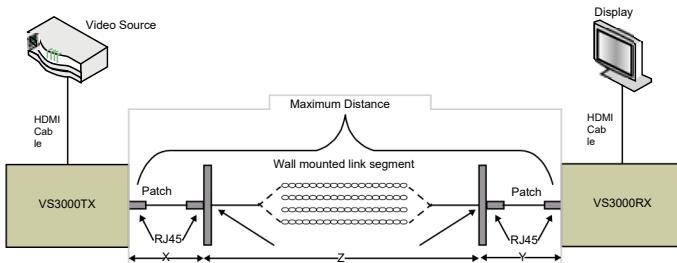

The standard specifies the following lengths for the three-segment cable installation:

X = Left-side patch cable length \leq 5 [meter]

Y = Right-side patch cable length \leq 5 [meter]


Z = Wall segment \leq Maximum Distance – X – Y [meter]

Cable Type	Range	Supported Video
Cat 5e/6	70m/230ft (with Patches)	4K@60Hz 4:2:0 24bpp 4K@30Hz 1080P@60Hz
	30m/100ft (with Patches)	4K@60Hz 4:4:4 24bpp 4K@60Hz 4:2:2 36bpp
	70m/230ft (with Patches)	4K@60Hz 4:4:4 24bpp 4K@60Hz 4:2:2 36bpp
	100m/330ft (with Patches)	4K@60Hz 4:2:0 24bpp 4K@30Hz 1080P@60Hz

Cable Type	Range	Supported Video
USB Type-C to USB Type-C Cable (USB 3.2 Gen 2, 10Gbps per lane)	2m/7ft	1080P@60Hz 24bpp 4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp 4K@60Hz 4:4:4 24bpp
HDMI	Input/Output: 10m/33ft	1080P@60Hz 24bpp 4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp
	Input/Output: 5m/16ft	4K@60Hz 4:4:4 24bpp

Panel Description


Front Panel

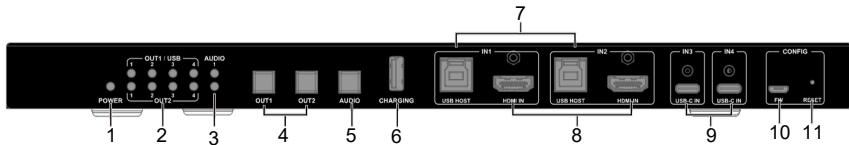

ID	Name	Description
1	POWER LED	On: The device is powered on. Off: The device is powered off.
2	OUTPUT 1 / USB LEDs and OUT 2 LEDs	Red: USB devices are connected to the corresponding USB host. Green: The corresponding video input is selected or the corresponding video input and USB host are selected. Off: The corresponding input are not selected.
3	AUDIO 1&2 LEDs	On: The corresponding de-embedded audio from HDMI OUT 1/2 is selected as source. Off: The corresponding de-embedded audio from HDMI OUT 1/2 is not selected as source for AUDIO OUT.
4	OUTPUT 1&2 Selection Button	Press the button to select input source for HDMI OUT 1/2.
5	AUDIO OUT Selection Button	Press the button to switch the audio source between the de-embedded audio from HDMI OUT 1 and HDMI OUT 2 for AUDIO OUT port.
6	Charging	USB 2.0 Type-A port. 5V/2A USB charging.
7	USB HOST 1&2	USB 3.2 type-B ports. Connect to USB HOST devices. USB HOST 1 and USB HOST 2 are bound with HDMI IN 1 and HDMI IN 2 respectively. The two ports support Ethernet bridge, the laptop connected to the two ports can

ID	Name	Description
		access the network the ETHERNET ports connected. The two USB Host ports and two USB type-C ports share 1G network.
8	HDMI IN	<p>Connect to HDMI sources.</p> <p>USB 3.2 type-C ports. Connect to USB-C sources.</p> <p>The two full-featured USB-C ports support the following three functions:</p> <ul style="list-style-type: none"> Supports audio, video and USB signal transmission, maximum 10Gbit/s data rate. USB-C IN 3 and 4 support DP SST, one video output with 4K signal transmission;
9	INPUT 3&4 (USB-C IN)	<p>USB-C IN 4 supports DP MST, two video outputs with 4K signal of each channel transmission;</p> <p>Supports PD 3.0, and can supply up to 60W power for the connected device;</p> <p>Supports 1G network connection, the laptop connected with these ports can access the Ethernet the matrix connected;</p> <p>The following cable are recommended to use: USB Type-C to Type-C cable (USB 3.2 Gen 1x1 or above)Micro-USB port.</p> <p>For ARM</p>
10	FW	firmware upgrade. Insert a tool such as a needle.
11	RESET	Press and hold it for about 5s: Reset the IP settings, including reset the IP mode to DHCP, and reset the login password to "admin". Press and hold it for about 15s: Reset the device to factory defaults.

Rear Panel



ID	Name	Description
1	20V/10A	Connect to the power adapter provided.
2	USB DEVICE	USB 3.2 type-A ports, 5V/1.5A output per port. Connect to USB devices such as camera and speakerphone.
3	HDMI OUT (1~2)	Connect to the HDMI display devices. HDMI OUT 2 is mirrored with HDBT port.
4	HDBT	Connect to an HDBT 3.0 receiver such as
5	AUDIO OUT	EX0101-N628-000.
6	RS232 1 & 2	RS232 1: Connect to a RS232 control device for API control or connect to a 3rd party device for RS232 routing. RS232 2: Connect to a RS232 3rd party device for RS232 routing.
7	GPIO	Connect to GPIO devices. The device supports connecting to 6 GPIO devices.
8	RELAY 1 & 2	Connect to relay devices for relay control.
9	SENSOR	Connect to OCS sensor.
10	ETHERNET 1 (SECURE) & 2	Connect to a network device (e.g., network switch, router, computer, etc.) for LAN control (Web UI & Telnet). VLAN function can be configured via API commands and web UI, please refer to the separate document " API Command Set_MS0402-N011-000 " or " Network " part in "Web UI" section.
11	Dante	Connect to the network for Dante audio connection.

Installation and Wiring


Warnings:

Before installation and wiring, disconnect power from the device.

During wiring, connect and disconnect the cables gently.

Installation


1. Attach the bracket to one side of the enclosure using the screws provided. The bracket is attached to the enclosure as shown.

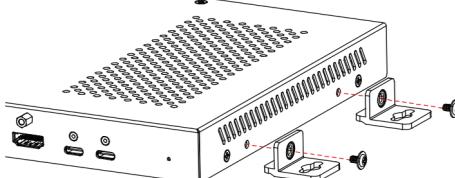

2. Repeat step 1 for the other side of the enclosure.
3. Attach the brackets to the surface or location desired using screws (not included in the package).


Wiring

Wiring 1: 4x2 Presentation Switch with Dual Screen mode

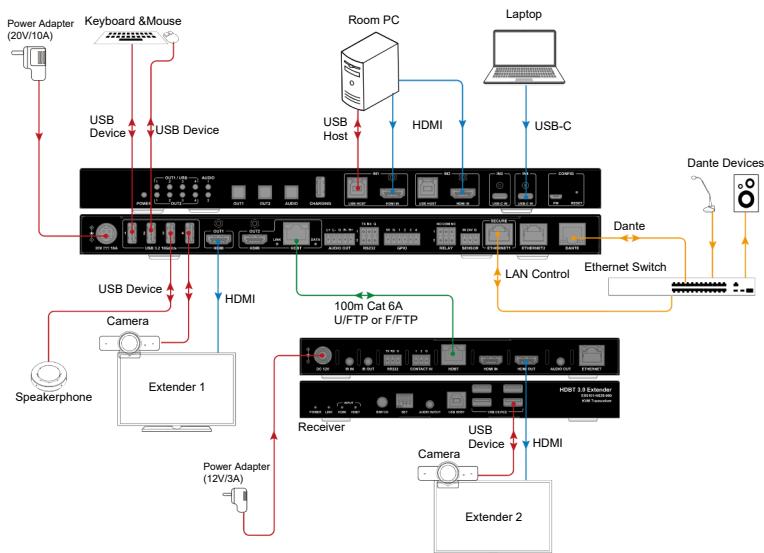

Note: By default, USB-C IN 4 is in DP SST mode, use the command “SET USBC4_DM MST<CR><LF>” or refer to web UI page (see the separate document “API Command Set_MS0402-N011-000” or refer to “Switch” part in “Web UI” section) to set the USB-C IN 4 to MST mode. In this mode, the USB-C IN 3 is disabled, and the USB-C IN 4’s source can transmit two video signals with 4K each to the two HDMI outputs respectively.

Wiring 2: 4x2 Presentation Switch with matrix mode

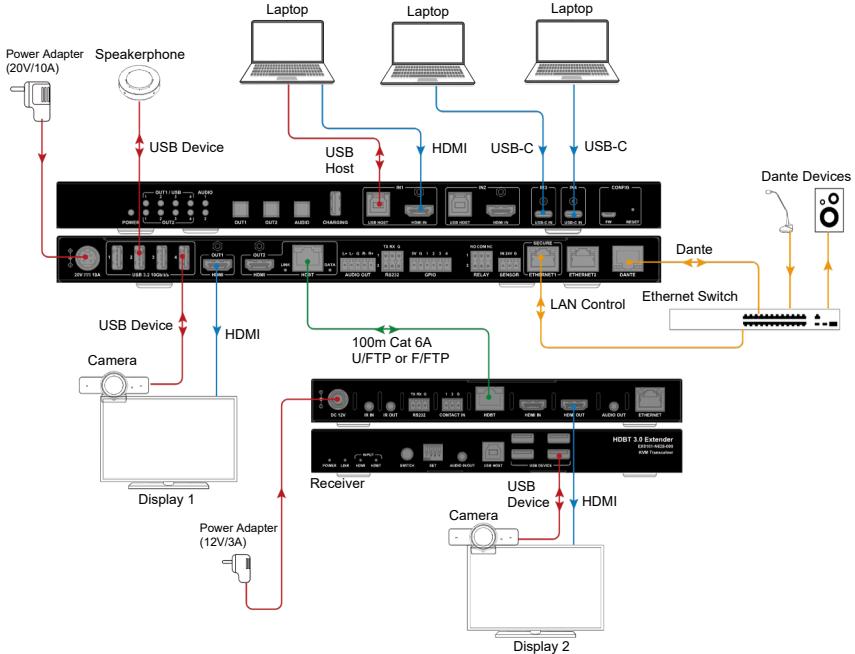

Auto Switching

The device supports automatic switching (HDMI and USB-C video and USB) and provides two modes:

LIFO mode.

Priority mode.

This function can be enabled/disabled through Web UI or API Commands.

Note:

1. Please refer to "[Switch](#)" part in the "Web UI" section or separate document "*API Command Set_MS0402-N011-000*" to get detailed configuration information. Video switching to detect valid signals, and USB switching to detect VBUS.
- 2.

Button Control

Users can perform basic switching of input sources to outputs and audio source selection.

OUT 1 button: Press the button continuously to switch the input source for **HDMI 1** output. The LED will light when the corresponding source is selected.

Note: The default mode of the USB switch is "**Follow video out 1**", using the "**OUT 1**" button will switch the video out 1 and the USB device at the same time.

OUT 2 button: Press the button continuously to switch the input source for output 2, including HDMI 2 and HDBT 3.0 outputs. The LED will light when the corresponding source is selected.

AUDIO button: Select the audio de-embedding from which output,

OUT 1 or OUT 2. The LED will light when the corresponding audio source is selected. Note: Audio routing can be set via the Web UI and API, refer to the separate document “*API Command Set_MS0402-N011-000*” or “**Audio Routing**” part in “Web UI” section for details.

RS232 Operation

The device provides two RS232 ports for device control or control of 3rd-party devices.

Supported functions are as follows:

□ **RS232-1:**

- Device control (API).
- Control 3rd-party device.
- TCP to RS232 routing.

□ **RS232-2:**

- Control 3rd-party device.
- TCP to RS232 routing.

Device Control

Users may need to control the device via API commands. Connect an RS232-enabled device (such as a PC) to the **RS232-1** port. For detailed command information, please refer to the separate document “*API Command Set_MS0402-N011-000*”). Before sending API commands to control the device, ensure the serial ports between this device and the PC are configured correctly. A professional RS232 serial interface software (e.g., Serial Assist) may be needed as well.

Parameters	Default Value
Baud Rate	115200 bps 8
Data bits	bits None 1 bit
Parity	None
Stop bits	
Flow control	

Control 3rd-party Device

Advanced users may need to control the 3rd-party device perform automated operations, such as automatically turning the projector on/off. MS0402-N011 provides "**RS232 automatic/manual control**".

RS232 automatic/manual control

RS232 control is performed by pre-stored instructions in the device. When the trigger condition is met, the configuration command is automatically sent out through the RS232 port. Users can store the following instructions in settings:

- Display ON/OFF.
- Volume MUTE/UNMUTE.
- Volume UP/DOWN.

Users can set these instructions through the Web UI or API and turn on the **Auto-RS232** function to automatically execute, or perform these operations by manually sending APIs.

Auto-RS232 conditions:

- Display ON:** When any active source is connected to the device.
- Display OFF:** When all sources are disconnected from the device and after the "**Delay Time**" set.

Please refer to the "RS232" part in the "Web UI" section or separate document "*API Command Set_MS0402-N011-000*" to get detail command information.

TCP to RS232 routing

The TCP to RS232 routing function provides a tunnel from the network to the RS232 port, which can bypass the network control commands to the RS232 port. This function makes it easier for third-party devices such as a central-control device to control other devices connected to MS0402-N011. TCP port number:

□ □ □

RS232-1: 5000;

RS232-2: 5001;

RS232-HDBT: 5002.

LAN Control

Obtain the IP Address of the Device

The default IP mode of the MS0402-N011 device is: **DHCP**.

The user can obtain an IP address in the following ways:

1. Send API command via RS232-1 port.

Send API command "**GET IPADDR<CR><LF>**" to get the IP address, for example:

Input:

GET IPADDR<CR><LF>

Response:

**IPADDR 172.16.18.173 MASK 255.255.255.0 GATEWAY
172.16.18.1**

2. 3. Use the tool "SmartSetGUI" to search the IP address.

Check the IP address in the DHCP server.

Telnet

Telnet port: 23.

Log in to the Web UI

The Web UI designed for this device allows for basic controls and settings. It can be accessed through a modern browser with latest version, e.g., Chrome, Safari, Firefox, IE10+, etc.

To get access the Web UI:

1. Connect one of the two ETHERNET ports of the device to a local area network. (Ensure there's a DHCP server in the network so that the device can obtain a valid IP address.)

Note: When VLAN is set to "Separate", please connect **ETHERNET-1** to the local area network for web UI control.

2. Connect the PC to the same network.

3. Input the device's IP address in the browser and press Enter, the following window will pop up. (Refer to [Obtain IP Address of the Device](#) section to get the device's IP address quickly).

4. The following window pops up. Input the password (default password: admin) and click "Login".



5. Input a new password in the dialog box and click "Apply" to enter the main page. The password must be 4 to 16 characters long,

alphanumeric, and include at least one uppercase letter, one lowercase letter, and one number.



Change password

Please change your username and password to continue

Old password: *****

New password:

Verify password:

Apply

Note: Password must be 4 to 16 characters in length and must contain upper and lower case letters and numbers.(alphanumeric only)

Reset password and IP mode

If users forget the login password, the following ways can be used to restore the default password:

Hold the “**RESET**” hole on the front panel for about 5s to reset the IP mode to DHCP and login password to “admin”.

Hold the “**RESET**” hole on the front panel for about 15s to reset the device to factory defaults, which includes resetting the password.

Send the API command “**RESET<CR><LF>**” to reset the device to factory defaults, which includes resetting the password.

Web UI

The main page consists of five tabs: Switch, General, Control, Network and System.

MS42 Switcher

Switch AV Setting Control Network System Web: V1.1.2

Video & USB

OUT	IN	IN 1 (HDMI)	IN 2 (HDMI)	IN 3 (USB-C)	IN 4 (USB-C)
VIDEO OUT 1					
VIDEO OUT 2					
ALL					

USB Mode: Follow VIDEO OUT 1

OUT	IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)	IN 4 (USB-C)
USB DEVICE					

Audio

TO	FROM	USB HOST	AUDIO DE-EMBED (VIDEO OUT 1)	AUDIO DE-EMBED (VIDEO OUT 2)	

Switch

1. Video& USB

Video & USB

OUT	IN	IN 1 (HDMI)	IN 2 (HDMI)	IN 3 (USB-C)	IN 4 (USB-C)
VIDEO OUT 1					
VIDEO OUT 2					
ALL					

USB Mode: Follow VIDEO OUT 1

OUT	IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)	IN 4 (USB-C)
USB DEVICE					

This section allows users to switch video/USB input for output, and set USB mode.

VIDEO OUT 1/2: Click the button in the table to switch one input source for VIDEO OUT 1 / VIDEO OUT 2 (button turns from white

to green when the selection is done). **ALL:** Click to select one input for all Video outputs (button turns from white to green when the operation is done). **USB Mode:** Click to select USB-A devices switching mode (Follow VIDEO OUT 1, Follow VIDEO OUT 2, and Independently), and click “Apply” to take effect. **Default setting:** Follow VIDEO OUT1, the USB-A devices switching follows the VIDEO OUT 1 switching. When set USB Mode to “Independent”, users can manually switch the USB host for the USB devices to be connected to by clicking the corresponding button in the table

USB Mode:		Independently	Apply
IN	IN 1 (USB-B)	IN 2 (USB-B)	IN 3 (USB-C)
OUT			
USB DEVICE			

2. Audio

Audio			
FROM	USB HOST	AUDIO DE-EMBED (VIDEO OUT 1)	AUDIO DE-EMBED (VIDEO OUT 2)
TO			
AUDIO OUT /DANTE OUT			
AUDIO OUT /DANTE OUT			
Allow DANTE IN audio pass through to USB HOST		ON	OFF
Audio Mute	All:	Mute	Unmute
	HDMI OUT 1:	Mute	Unmute
	HDMI OUT 2:	Mute	Unmute
	DANTE OUT:	Mute	Unmute

This section allows users to switch audio input to output.

AUDIO OUT/DANTE OUT: Three audio sources can be selected.

Default Setting: AUDIO DE-EMBED (VIDEO OUT 1).

- **Allow DANTE IN audio pass-through to USB HOST:** Set whether enable DANTE IN audio to pass-through to USB HOST. Default setting: ON, the DANTE IN audio can be transmitted to the laptop the USB HOST port connected. **Audio Mute (ON/OFF):**
- Click to set the corresponding audio output to mute/unmute. **All:** Click to set all audio to mute/unmute. Default Setting: Unmute.

3. USB MST




This section allows users to enable the **USB-C IN4 MST** function.

- **USB-C IN 4 MST:** Click to enable the MST function of USB-C IN 4 to ON/OFF. Default setting: OFF. When enabling this function, the USB-C IN 4 will occupy another input channel, check the box from the following inputs to set which input channel is occupied.



4. Auto-Switch

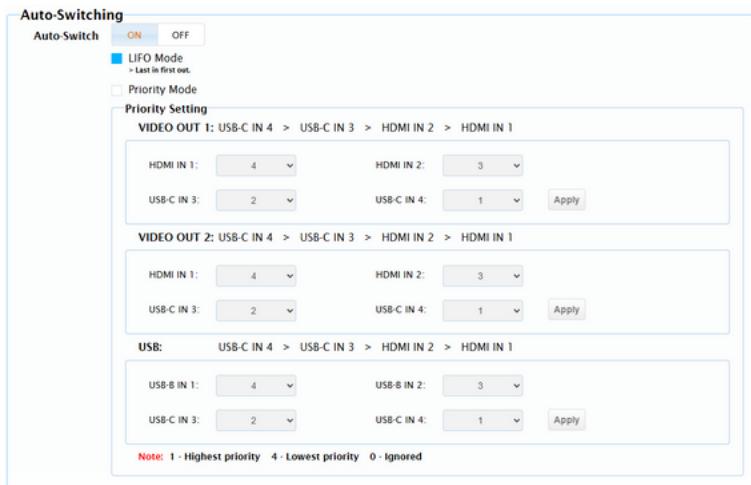

Auto-Switching

Auto-Switch ON OFF

LIFO Mode
↳ Last in first out.

Priority Mode

Priority Setting

VIDEO OUT 1: USB-C IN 4 > USB-C IN 3 > HDMI IN 2 > HDMI IN 1

HDMI IN 1:	4	HDMI IN 2:	3
USB-C IN 3:	2	USB-C IN 4:	1

VIDEO OUT 2: USB-C IN 4 > USB-C IN 3 > HDMI IN 2 > HDMI IN 1

HDMI IN 1:	4	HDMI IN 2:	3
USB-C IN 3:	2	USB-C IN 4:	1

USB: USB-C IN 4 > USB-C IN 3 > HDMI IN 2 > HDMI IN 1

USB-B IN 1:	4	USB-B IN 2:	3
USB-C IN 3:	2	USB-C IN 4:	1

Note: 1 - Highest priority 4 - Lowest priority 0 - Ignored

This section allows users to set the auto-switch function to ON/OFF, and select auto-switching mode.

Default: ON.

When the function is set to on, users can select auto switch mode between LIFO Mode and Priority Mode.

LIFO Mode (Default): When inserting a new active input, all outputs will switch to this input automatically. When removing the current selected input, all outputs will switch to the previously active input.

Priority Mode: When set to this mode, users can set input switching priority for **VIDEO OUT1**, **VIDEO OUT 2** and **USB** from each zone.

Note:

"1" indicates the highest priority, "4" indicates the lowest priority, and "0" means this port will be ignored in automatic switching

When two inputs are set to the same priority, will follow the

sequence of priority is **USB IN 4 > HDMI IN 1 > USB IN 3 > HDMI IN 2**.

- When the USB Switch mode is set to follow video out 1/2, it will follow the corresponding video output to switch. When the
- USB Switch mode is set to independently, USB device switching also follows LIFO mode, and can set priority.

AV Setting

1. Down-Scaler

Down-Scaler

Down Scaler	HDMI OUT 1: <input type="button" value="Auto"/> <input type="button" value="Apply"/>	HDMI OUT 2: <input type="button" value="Auto"/> <input type="button" value="Apply"/>
	HDBT OUT 2: <input type="button" value="Auto"/> <input type="button" value="Apply"/>	

This section allows users to set the down-scaler function for each output.

Down-Scaler: Select the mode from the drop-down menu, and click “Apply” to take effect.

Auto (Default): Automatically convert 4K resolution to 1080P when connected to a 1080P display.

Forced 1080P: Forcely converts the input 4K resolution to 1080P regardless of the connected display's capabilities.

OFF: Disabled down-scaler function.


2. EDID

EDID


EDID Setting	HDMI IN 1: <input type="button" value="Fixed 4K@60Hz 2.0ch"/> <input type="button" value="Apply"/>	HDMI IN 2: <input type="button" value="Fixed 4K@60Hz 2.0ch"/> <input type="button" value="Apply"/>	USB-C IN 3: <input type="button" value="Fixed 4K@60Hz 2.0ch"/> <input type="button" value="Apply"/>	USB-C IN 4: <input type="button" value="Fixed 4K@60Hz 2.0ch"/> <input type="button" value="Apply"/>	USB-C IN 4: (Secondary) <input type="button" value="Fixed 4K@60Hz 2.0ch"/> <input type="button" value="Apply"/>
Custom EDID	<input type="button" value="Upload"/>				
EDID Read		<input type="button" value="Read"/>			

This section allows users to set the EDID for each input and read the EDID of each output.

EDID Setting: Select EDID for the input port, and click “Apply” to take effect. The default setting for all inputs: Fixed 4K@60Hz 2.0ch.

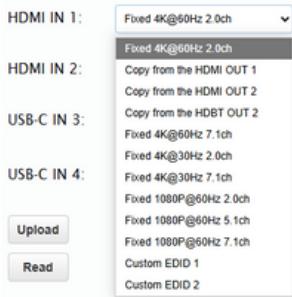

- **Custom EDID:** Click “Upload” to enter the following page:

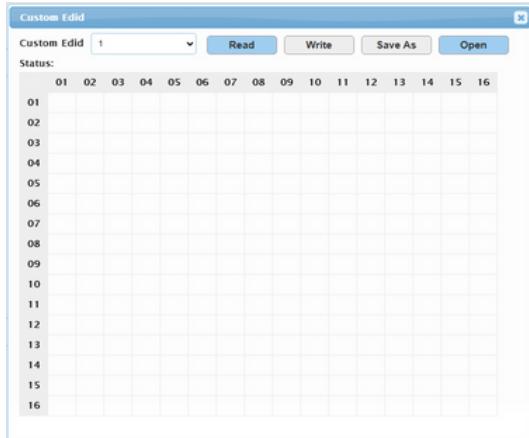

Custom EDID: Select a customized EDID from the drop-down menu (1 or 2).

Read: Click to read the selected customized EDID. The result is shown on the table of the page.

Write: Click to write the opened EDID to the selected


customized EDID space.

Save As: Click to save the customized EDID to the local PC.

Open: Click to select an EDID bin file from the local PC.

Status: Shows the status of reading selected customized EDID.


- **EDID Read:** Read the EDID of the output port and save it. Click "Read" button to enter the following page:

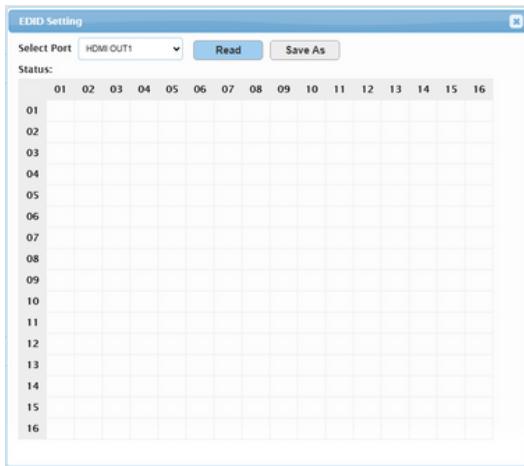

Select Port: Select an output port from the drop-down menu.

Read: Click to read the EDID of the selected output. The result is shown on the table of the page. **Save As:** Click to save the EDID as a bin file to the local PC. **Status:** Shows the status of reading EDID.

3. HDCP



This section allows users to enable/disable the HDCP capability of

inputs.

Default setting: HDMI IN 1/2: ON; USB-C IN 3/4: OFF.

Control

1. CEC



This section allows users to control the connected CEC-enabled displays to power on/off and set the **Auto-CEC** function.

CEC port: Select the output port to control.

Display ON/OFF: Click to control the corresponding CEC-enabled display to power on/off immediately. **Auto-CEC:** Enable/disable the auto-CEC function of the selected output. Default setting: OFF. **Delay Time:** Delay time for CEC "Display OFF" command.

When the CEC display-off conditions are met, the command will not be issued until the set time arrives. Default setting: 30s.

Range: 30s~1800s.

CEC Command: Input the display on/off command to control the corresponding display.


Save: Click to save the input command.

Test: Click to send the input command test the input command.

Reset: Click to reset the command to default value.

Note: Please get the commands from the display's manufacturer, supplier or user manual.

2. RS232

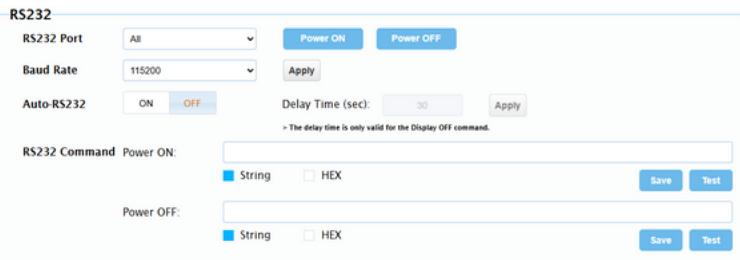

The screenshot shows the RS232 configuration interface. At the top, there are dropdown menus for 'RS232 Port' (set to 'All') and 'Baud Rate' (set to '115200'), and buttons for 'Power ON' and 'Power OFF'. Below these are settings for 'Auto-RS232' (set to 'OFF') and 'Delay Time (sec)' (set to '30'). A note states: '> The delay time is only valid for the Display OFF command.' There are two sections for 'RS232 Command': 'Power ON' and 'Power OFF'. Each section has a text input field, a radio button for 'String' or 'HEX' (both are off), and 'Save' and 'Test' buttons. The 'Power ON' section has a note: '> The command is only valid for the Power ON command.'

This section allows users to set parameters for the RS232 port, set the **Auto-RS232** function and set the RS232 pre-stored command.

RS232 Port: Select RS232 port to set from the drop-down menu.

Power ON/OFF: Click to send the saved display on/off command to power on/off the 3rd device connected to the selected RS232 port.

Baud Rate: Select the baud rate from the drop-down menu and click "Apply" to take effect. Default setting: 115200.

Auto-RS232: Enable/disable the auto-RS232 function of the selected output. Default setting: OFF. **Delay Time:** Delay time for RS232 "Power OFF" command. When the RS232 display-off conditions are met, the command

will not be issued until the set time arrives. Default setting: 30s.

Range: 30s~1800s.

RS232 Command: Input the Display ON/OFF commands for the 3rd party device in the corresponding field. The serial commands for displays and projectors are provided by their manufacturer and can be found in the instructional documentation.

String/HEX: If the command for display on/off is only


available in Hex format, check the “HEX” button and input the Hex command in the field, otherwise, check the “String” button.

Save: Click to save the input command to the matrix.

Test: Click to send the input command to the 3rd device directly to test it.

Note: The RS232 command must be set before use, otherwise the RS232 port will not send anything.

3. RELAY



The screenshot shows a configuration interface for a relay. At the top, there is a tab labeled 'RELAY'. Below the tab, there is a dropdown menu labeled 'RELAY Mode' with the option 'Latch' selected. To the right of the dropdown is a 'Apply' button. Below the mode selection, there is a 'Trigger Time (1~30 sec):' input field containing the value '3', with an 'Apply' button to its right. The entire interface is enclosed in a light blue border.

This section allows users to configure the RELAY.

RELAY Mode: Select relay mode from the drop-down menu (Latch or Momentary), and click “Apply” to take effect. Default setting: Latch.

Latch: Level mode.

Momentary: Pulse mode.

Trigger Time: When setting relay mode to momentary, input the trigger time in this field, and click “Apply” to take effect. Default setting: 3s. Range: 1s~30s.

4. SENSOR



The screenshot shows a configuration interface for a sensor. At the top, there is a tab labeled 'SENSOR'. Below the tab, there is a '24V Power' section with an 'ON' button (which is highlighted in orange) and an 'OFF' button. To the right of the power section is an 'I/O Status' section showing 'Low', with a 'Get' button to its right. The entire interface is enclosed in a light blue border.

This section allows users to set 24V output voltage of the sensor to on/off and get I/O status.

24V Power: Enabled/disable the 24V power out for the sensor port.

- **I/O Status:** Click “Get” to get the current I/O status of the sensor port.

5. USB Device

USB Device Control

Device Control	VBUS Mode:	Pass-through	Apply
----------------	------------	--------------	-------

This section allows users to set VBUS mode for USB device ports.

VBUS Mode: Select VBUS mode.

Pass-through (default): If the selected USB Host is not connected, all USB device ports will have no VBUS output.

Always High: The USB device ports always provide VBUS output.

6. GPIO

GPIO

GPIO	All	Apply	
GPIO Setting	I/O:	Output	Apply
	Pull-up Resistor:	Connected	Apply
	State:	High	Apply
GPIO Status:	GPIO 1: Input - Low	GPIO 2: Input - Low	
	GPIO 3: Input - Low	GPIO 4: Input - Low	

This section allows users to configure GPIO.

GPIO: Select the GPIO port from the drop-down menu to configure.

GPIO Settings:


I/O: Select the GPIO type between “Output” and “Input”, and click “Apply” to take effect.

When select “Output”:

Pull-up Resistor: Enable/disable the Pull-up Resistor.

State: Set GPIO output state to “High” or “Low”.

When select "Input":

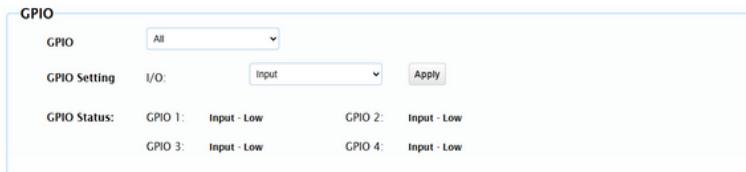

The screenshot shows a configuration interface for GPIO. The 'GPIO Setting' dropdown is set to 'Input'. The 'GPIO Status' table shows four pins: GPIO 1: Input - Low, GPIO 2: Input - Low, GPIO 3: Input - Low, and GPIO 4: Input - Low. There is an 'Apply' button at the bottom right.

GPIO Status: Shows the current GPIO type and status.

Network

1. Network Setting



The screenshot shows a 'Network Setting' configuration page. It includes fields for IP Type (Static selected, DHCP available), IP Address (192.168.1.117), Subnet Mask (255.255.240.0), and Default Gateway (192.168.2.1). An 'Apply' button is at the bottom right. A note at the bottom states: 'Note: After changing network configuration, please reopen the web page with the new network settings.'


The network is used to set the IP mode.

Note:

When "Static" is selected, please ensure your PC is in the same network segment as the Matrix.

Please wait for 2-3 minutes for the LAN module to reboot and reconnect after the network setting is changed.

2. Service Capability



The screenshot shows a 'Service Capability' configuration page. It has two sections: 'Web Service' and 'HTTPS'. Under 'Web Service', 'HTTP' is set to 'ON'. Under 'HTTPS', 'ON' is selected. Both sections have 'ON' buttons.

This section allows users to set HTTP and HTTPS.

- HTTP:** Enable/disable the HTTP connection. Default Setting: ON.
- HTTPS:** HTTPS is supported and CAN NOT be disabled.

3. USB to Ethernet Bridge

USB to Ethernet Bridge

All:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
USB-B IN 1:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
USB-C IN 3:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
USB-B IN 2:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
USB-C IN 4:	<input type="button" value="ON"/> <input type="button" value="OFF"/>

USB Bridge refers to the USB Network Card.

The device provides four USB network cards on USB-C and USB-B ports.

This section allows users to enable/disable the USB bridge function for each port. Default setting: On. When it is set to on, the device connected to the USB-B 1/2 or USB-C 3/4 can access to the network the ETHERNET ports connected.

4. VLAN

VLAN Mode

<input type="button" value="Transparent"/>	<input type="button" value="Apply"/>
--	--------------------------------------

> Transparent: Network interconnection of all devices.

> Separated: The secure network port (Ethernet 1) is only used to log in to the Web UI. Other networks are connected to Ethernet 2.


VLAN settings can help administrators isolate the internal network and the guest network to protect the network security.

The device provides **TWO** Ethernet ports, which can be used for VLAN settings.

VLAN Mode: Select VLAN mode from the drop-down menu, and click “Apply” to take effect.


Transparent: Network interconnection of all devices.

VLAN Setting -- Transparent

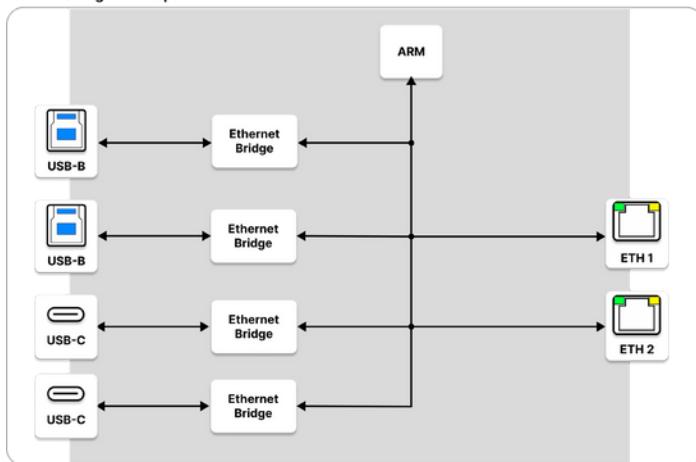

Separated: Isolate the device network from the USBNIC network. Only the secure network port, **Ethernet 1**, can access the device's Web UI. Other USB NIC devices are connected to **Ethernet 2**.

VLAN Setting -- Separated

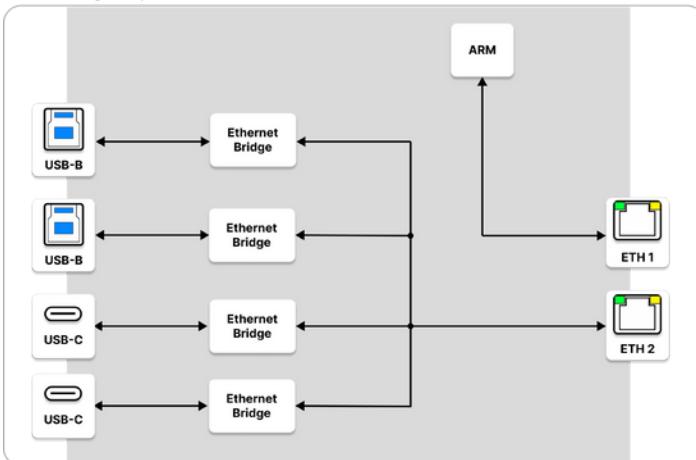

5. 802.1x

802.1x

802.1x	<input type="button" value="ON"/> <input type="button" value="OFF"/>
Authentication Method:	EAP-TLS
Username:	<input type="text"/>
Client Certificate:	<input type="text"/> <input type="button" value="Browse"/>
Private Key:	<input type="text"/> <input type="button" value="Browse"/>
Private Key Password:	<input type="text"/>
Serve Certificate:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
CA Certificate:	<input type="text"/> <input type="button" value="Browse"/>
<input type="button" value="Apply"/>	

- **802.1x:** Click to enable/disable 802.1x Authentication service. The device supports "**EAP-TLS**" and "**EAP-MSCHAP V2**" two mode. Default setting: OFF.

When set 802.1x to ON:

802.1x supports authentication based on port and MAC address. The two following authentication methods are offered:

802.1x

802.1x	<input type="button" value="ON"/> <input type="button" value="OFF"/>
Authentication Method:	EAP-TLS
Username:	<input type="text"/>
Client Certificate:	<input type="text"/> <input type="button" value="Browse"/>
Private Key:	<input type="text"/> <input type="button" value="Browse"/>
Private Key Password:	<input type="text"/>
Serve Certificate:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
CA Certificate:	<input type="text"/> <input type="button" value="Browse"/>
<input type="button" value="Apply"/>	

802.1x

802.1x	<input type="button" value="ON"/> <input type="button" value="OFF"/>
Authentication Method:	EAP-MSCHAP V2
Username:	<input type="text"/>
Password:	<input type="text"/>
Serve Certificate:	<input type="button" value="ON"/> <input type="button" value="OFF"/>
CA Certificate:	<input type="text"/> <input type="button" value="Browse"/>
<input type="button" value="Apply"/>	

- **EAP-TLS:** This method requires to submit username,CA certificate, Client Certificate, private key and privatekey password for authentication.

Username require alphanumeric, “-”, “_” and characters within length of 1 to 24 characters, “-” and “_” cannot be at beginning or end.

Private Key Password require printable ASCII characters within length of 1 to 24 characters.

- **EAP-MSCHAP V2:** This method requires to submit username and password for authentication.

Username require alphanumeric, “-”, “_” and characters within length of 1 to 24 characters, “-” and “_” cannot be at the beginning or end.

Password require printable ASCII characters within length of 1 to 24 characters.

- **Server Certificate:** Click to set server certificate to on/off. Default setting: OFF.

When it is set to on, users need to submit a CA certificate for authentication.

Apply: Click to perform above settings and reboot the device.

System

1. Login Password

Login Password	
Old UserName	<input type="text"/>
Old Password	<input type="text"/>
New UserName	<input type="text"/>
New Password	<input type="text"/>
Confirm New Password	<input type="text"/>
<input type="button" value="Apply"/>	
<small>Note: Password must be 4 to 16 characters in length and must contain upper and lower case letters and numbers.(alphanumeric only)</small>	

Default Username&Password: "admin"

Note: The password must be 4 to 16 characters long, alphanumeric, and include at least one uppercase letter, one lowercase letter, and one number.

2. FW Update


FW Update

File:

- Click “Browse” to select the update file from local PC.

File:

- Click “Upgrade” to start the upgrading.

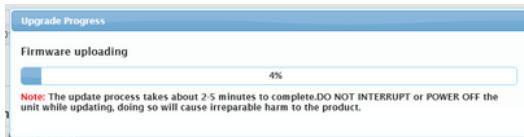

- When the upgrade is success, the following windowpops up. Click “OK” and refresh the web page to re-login web UI.



Note: DO NOT power off the device during the updating process.

3. Configuration Import and Export

Configuration import and export

Export Settings: Click to export the settings file to the local PC.

Import Settings: Click to import the settings file from the local PC and apply the imported settings.

4. Restore Factory



Factory Default: Click to set the device to factory defaults.


Reboot: Click to reboot the device.

5. Version



This section shows the device's firmware version information.

6. Log

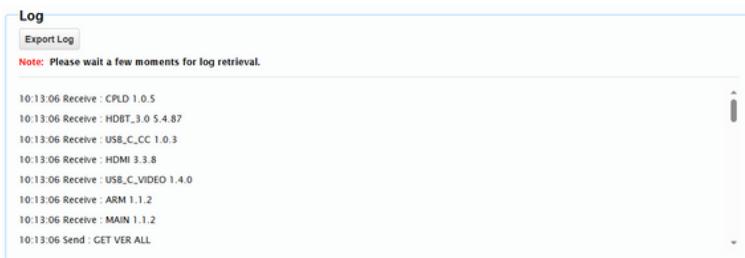

This section displays system setting change records.

Export Log: Click to download the log file to the local PC.

Note: Please wait for a few moments for log retrieval.

Dante Introduction

The MS0402-N011 supports a 2x2 Dante audio transmission.

Before using the Dante function, please:

1. Connect all Dante devices to the same network.

2. Use "Dante Controller" to pair Dante devices.

(<https://www.audinate.com/products/software/dante-controller>)



Note: Some network switches may cause "Dantecontroller" to be unable to recognize Dante devices. Please replace the switch.

