

Installation Instructions




Model 784

Remote Power Supply

For:

- Access 800® Access Control Devices
- ED4000 & ED5000 Series x M61 Alarm Exit Devices
- ED40AK & ED50AK Series Alarm Exit Kits with ElectroLynx® Connector System
- PED4000 & PED5000 Series x M61 Alarm Exit Devices

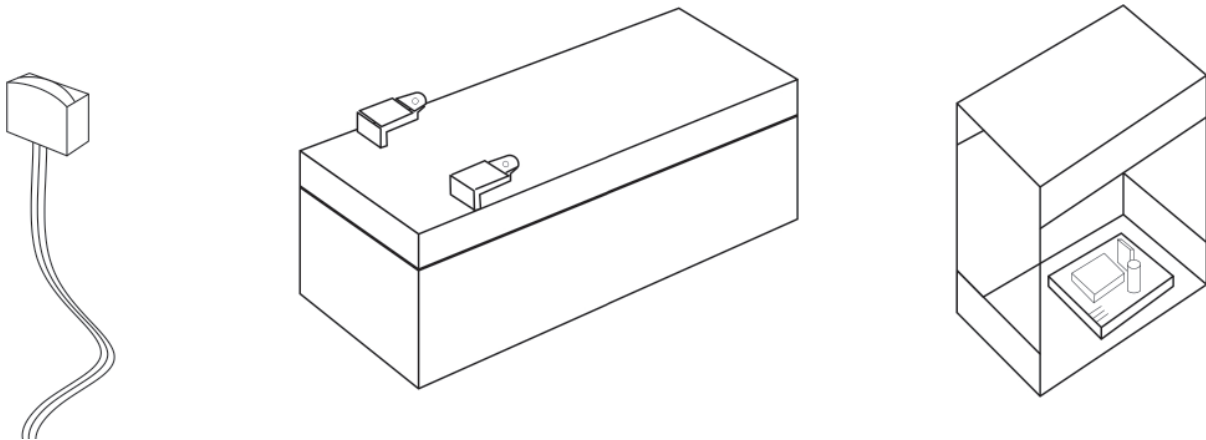

WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

WARNING

Attention Installer: Improper installation may result in damage to the product and void the factory warranty.

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2017, 2019, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM232 06/24

Experience a safer
and more open world

Model 784



Remote Power Supply

Installation Instructions

| TOC | Table of Contents |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Required Components for Access 800® Series2 |
| 2 | Remote Power System.3 |
| 3 | General Description.....3 |
| 4 | Specifications3 |
| 5 | Installation/Connection Instructions3 |
| 6 | Connector System Notes3 |
| 7 | Installation Notes4 |
| 8 | Installing & Wiring Access 800® Series Locks and Exit Trim to 784 Power Supply4 |
| 9 | Installing & Wiring Access ED4000 & ED5000 Series x M61 Alarm Exit Devices and ED40AK & ED50AK Alarm Exit Kits to 784 Power Supply6 |

- Important:**
- This power unit is intended to be correctly oriented in a vertical or floor mount position.
 - Remove alkaline batteries from Access 800® Series controller before connecting to Power Supply.
 - Always exercise extreme caution when working with electricity. Power should be disconnected when connections to terminals are made

1 Required Components for Access 800® Series

Access 800® Series Power/Remote Unlocking (793F059) 7” Harness (Ref: M35) for ElectroLynx® door.

Power Transfer Device

- ElectroLynx® doors - QC (quick connect) electric hinge with wires/8-pin connectors.
Optional Harness Numbers:
(709F879) 36” harness for retrofitting doors with straight through wire run to QC (quick connect) hinge.
Leads come pinned. Connector installed in field, once wire is fed through door via wire run.

Non ElectroLynx® doors

- Concealed Circuit Hinge or alternative:
(709F889) 180” harness for doors without straight through wire run, such as metal reinforced doors without connector system or pin wires. Add 8-pin connector for ElectroLynx® doors (with connectors).

Model 784


Remote Power Supply

Installation Instructions

2

Remote Power System

| | | |
|-----------|---------|-------------------------------------------------|
| 1 | 793F049 | Plug-in Wall Transformer |
| 2 | 793F089 | 12 VDC / 1.2 A/Hr Gel Cell Battery (optional) |
| 3 | 794F309 | 9 VDC Power Supply Circuit Board |
| Not Shown | 793F059 | Cable Assembly - Power Supply to Power Transfer |

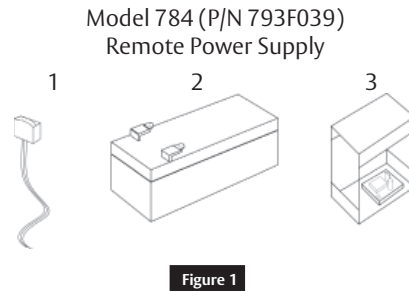

3

General Description

Corbin Russwin's 784 (9 VDC, 700 ma) Regulated and Filtered Power Supply has been designed for use with Access 800® Series Access Control Products and Alarmed Exit Devices as an alternative remote power source for standalone units. Optional 12 VDC Gel Cell Battery (793F089) allows continuous operation in the event of power failure.

4

Specifications

- Enclosed Power Supply Module - Provides regulated 9 VDC to standalone units and outputs 12 VDC to charge optional gel cell battery.
- Power/Remote Unlocking Harness - (793F059) (Ref: M35) Connects Access 800® Series controller to ElectroLynx® raceway harness 8-pin connector.
- Plug-in Wall Transformer 16.5 VAC, 2.4 Amps (UL/cUL Listed) - 793F049 provides input voltage to enclosed Power Supply Module.

5

Installation/Connection Instructions

These instructions are provided in addition to instructions packaged with Access 800® Series Access Control Products and Alarm Exit Devices and should be read completely before any installation is attempted.

Each 784 Power Supply can supply power to:

- 2 - Access 800 Series Locks and Exit Trim
- 6 - Alarm Exit Devices (ED4000 and ED5000) or Alarm Exit Kits (ED40AK and ED50AK).
- Refer to Section 8 for installation and wiring Access 800® Series Locks and Exit Trim.
- Refer to Section 9 for installation and wiring Alarm Exit Devices.

6

Connector System Notes

The system is designed to be installation friendly. Only wiring required is to loosen wires on pigtail harness assembly on frame side of electric hinge.

Model 784

Remote Power Supply

Installation Instructions



7

Installation Notes

1. With new applications, a raceway harness with 8-pin and 4-pin ElectroLynx® connectors will be pre-installed inside doors manufactured by ASSA ABLOY door manufacturers when specified during ordering process.
2. Wiring to pigtail harness is per facility wiring requirement. Rail, raceway, electric hinge, and pigtail connector terminations and wire colors all match.
3. If door does not have a raceway harness with ElectroLynx® connectors, either consult factory for raceway retrofit kit or cut connectors off product and hard wire as required per local code.

8

Installing & Wiring Access 800® Series Locks and Exit Trim to 784 Power Supply

Important

Remove six AA batteries from Access 800® Series Controller.

1. Mount Power Supply Module within 12' wire run to electric hinge. 120 VAC power source must be within 12' of Power Supply Module.

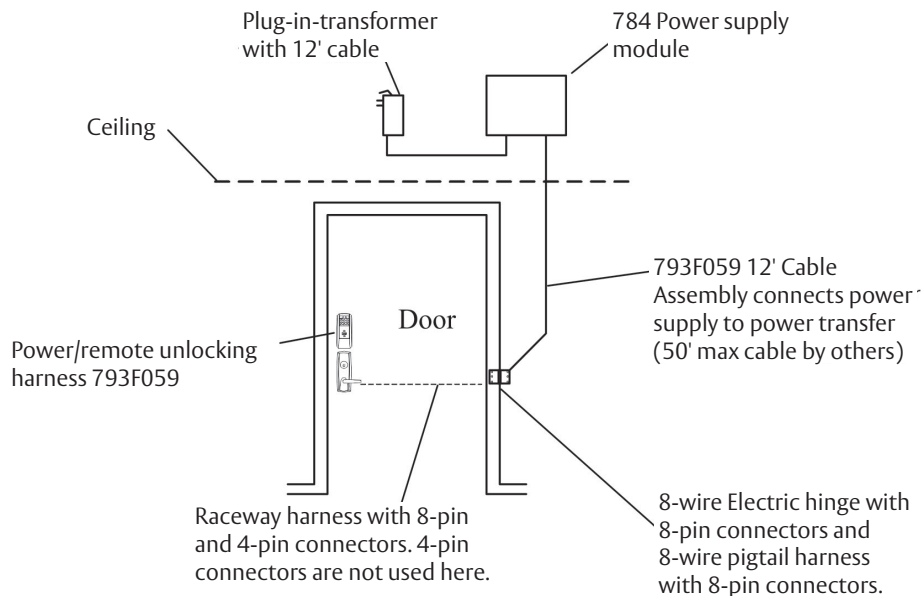


Figure 2

2. Connect Power/Remote Unlocking Harness to TB2 on controller.

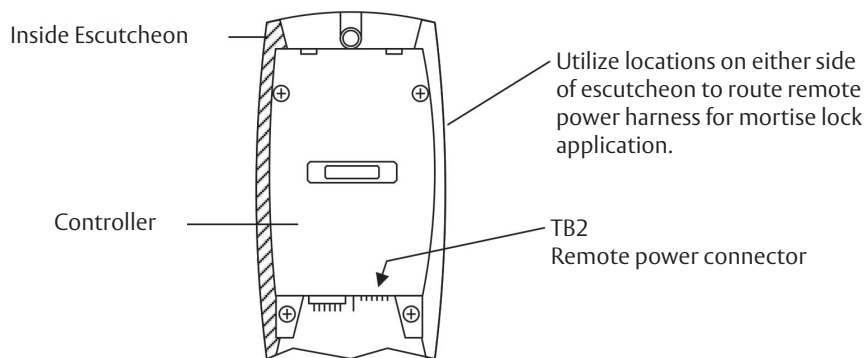


Figure 3

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2017, 2019, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM232 06/24

Model 784

Remote Power Supply

Installation Instructions



8

Installing & Wiring Access 800® Series Locks and Exit Trim to 784 Power Supply

3. Mount escutcheon on door following instructions provided with unit.

- Access 800® Cylindrical Lock CL33834
- Access 800® Mortise Locks ML20833, ML20834, ML20835, ML20836
- Access 800® Exit Device Trims 9833, 9834, 9M833, 9M834

NOTE:

Be sure to connect “Quick Connect” end of ground wire to “E3” on controller assembly.

- Refer to system wiring diagram and wire all connections to Pigtail Harness Assembly, Power Supply Circuit Board and Plug-in Transformer as indicated.
- Plug Pigtail Harness Assembly connector into Electric Hinge 8-pin connector.
- Connect (optional) battery if required.
- Wire remote unlock option as indicated if required.
- Ensure all wiring is correct before plugging the Plug-in Transformer into a 120 VAC outlet. Test lock.

Note

Cap off all unused wires to prevent shorting.

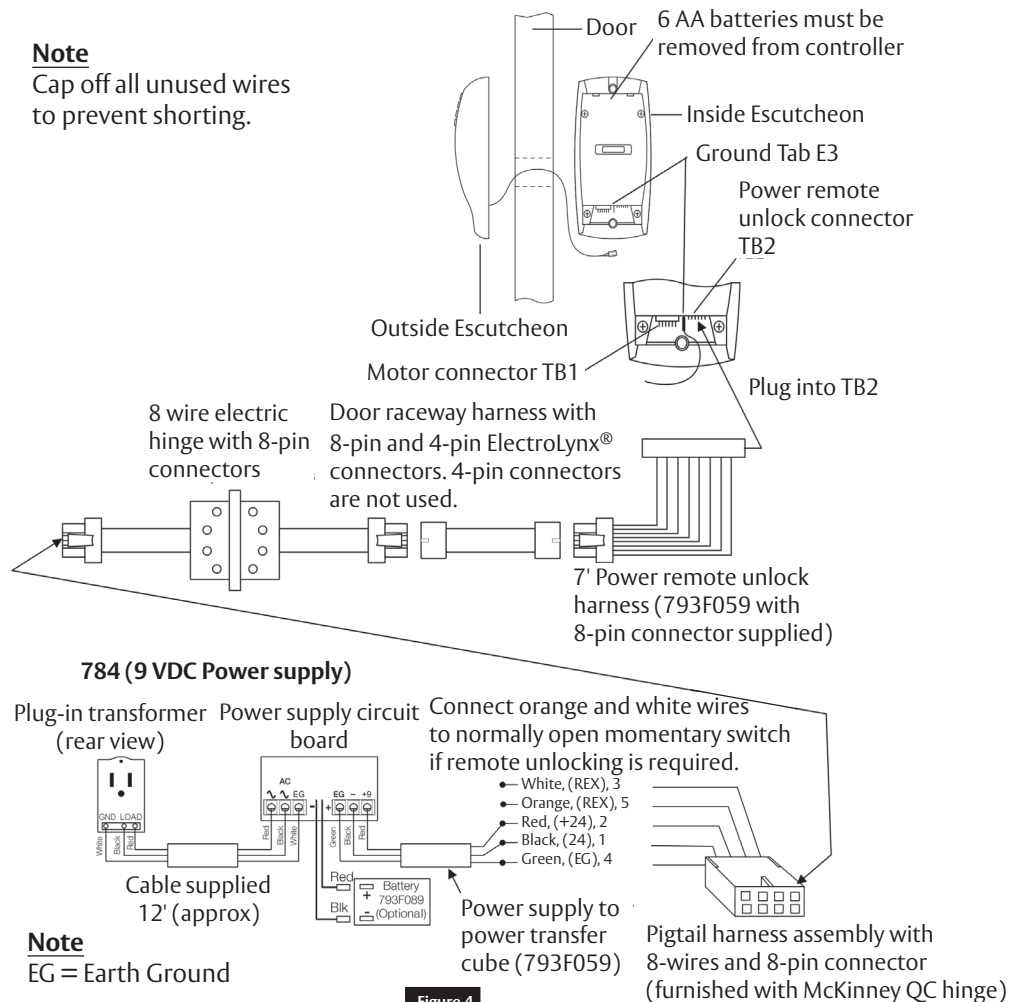


Figure 4

For installation assistance contact Corbin Russwin
1-800-543-3658 • techsupport.corbinrusswin@assaabloy.com

Copyright © 2017, 2019, 2024, ASSA ABLOY Access and Egress Hardware Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Access and Egress Hardware Group, Inc. is prohibited.

FM232 06/24

Model 784

Remote Power Supply

Installation Instructions



9


Installing & Wiring Access ED4000 & ED5000 Series x M61 Alarm Exit Devices and ED40AK & ED50AK Alarm Exit Kits to 784 Power Supply

Important:

Remove 9 volt battery from Alarm Exit PC Board.

1. Mount Power Supply Module. If using cable (793F059) supplied, mount module with 12' wire run to electric hinge (power transfer). Power Supply Module may be located further than 12' (50' Max). Additional cable required to be supplied by others.
2. Refer to system wiring diagram below and wire all connections to Power Supply Circuit Board and Plug-in Transformer as indicated. Connect (optional) battery if required.

784 (9 VDC power supply)

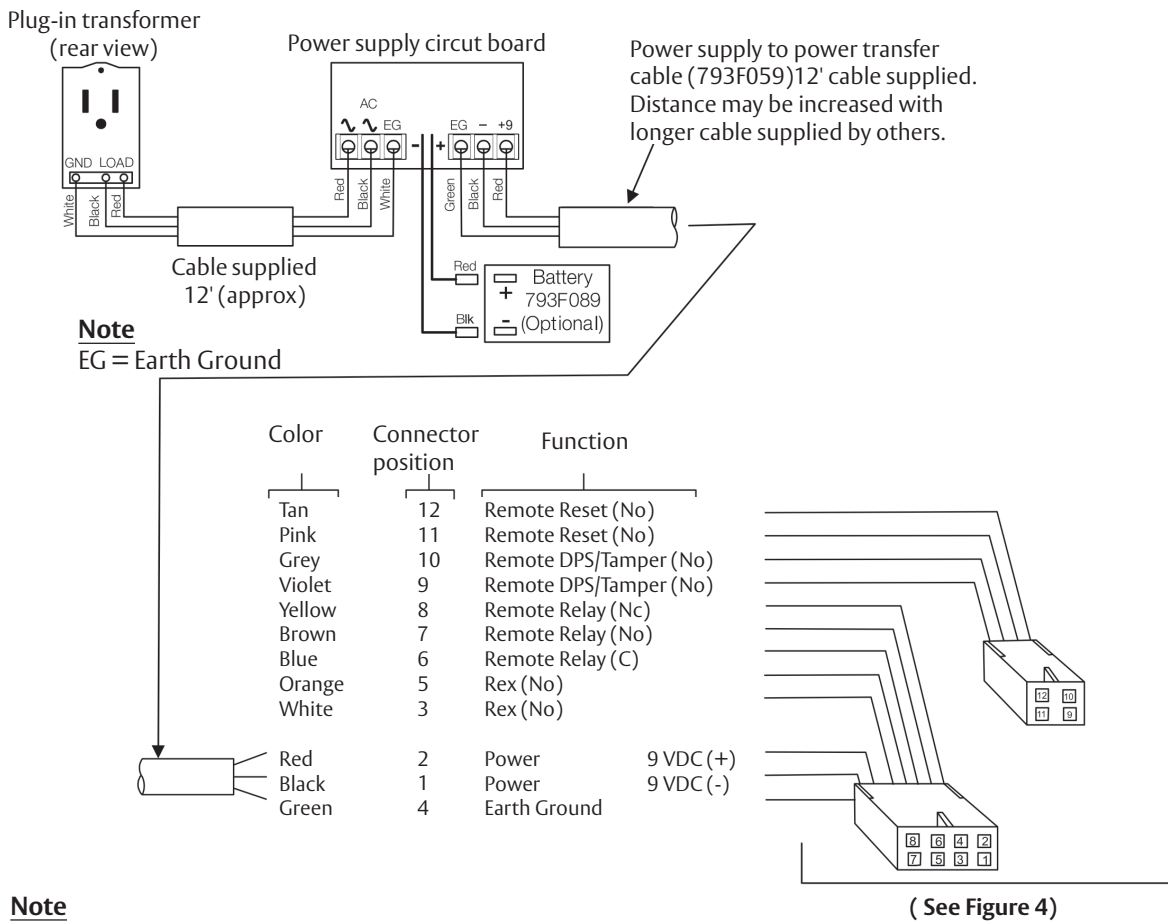

Note
Cap off all unused wires to prevent shorting.

Figure 5

Model 784



ASSA ABLOY

Remote Power Supply

Installation Instructions

9

Installing & Wiring Access ED4000 & ED5000 Series x M61 Alarm Exit Devices and ED40AK & ED50AK Alarm Exit Kits to 784 Power Supply (cont.)

3. Connect ED4000 or ED5000 Series Alarm Exit Device to 9 VDC (+) 9 VDC (-) and Earth Ground utilizing ElectroLynx® Connector System. An Alarm Hardwire Harness will be required to connect to Alarm Exit PC Board. This harness is available as an option (Ref: M35) when ordered with an Alarm Exit Device. Harness can also be ordered separately by specifying following part numbers.

For all Alarm Exits except Surface Vertical Rod (SVR):

- 709F989 Alarm Hardwire Harness (36" Device)
709F999 Alarm Hardwire Harness (48" Device)

For SVR Alarm Exits:

- 720F309 SVR Alarm Hardwire Harness (36" Device)
720F319 SVR Alarm Hardwire Harness (48" Device)
 - Refer to instructions FM248 (latest revision) packed with Alarm Hardwire Harness for connections to Alarm Exit PC Board.
4. Ensure all wiring is correct before plugging the Plug-in Transformer into a 120 VAC outlet. Test alarm device.

